

Exiting The Intel Rapid Storage Technology Enterprise Sata Option Rom Utility; Rebuilding The Raid - Asus Z9PE-D16-10G Series Manual

Z9pe-d16-10g series manual

1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

15

16

 
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202




•

[Table of Contents](#)

•

Bookmarks

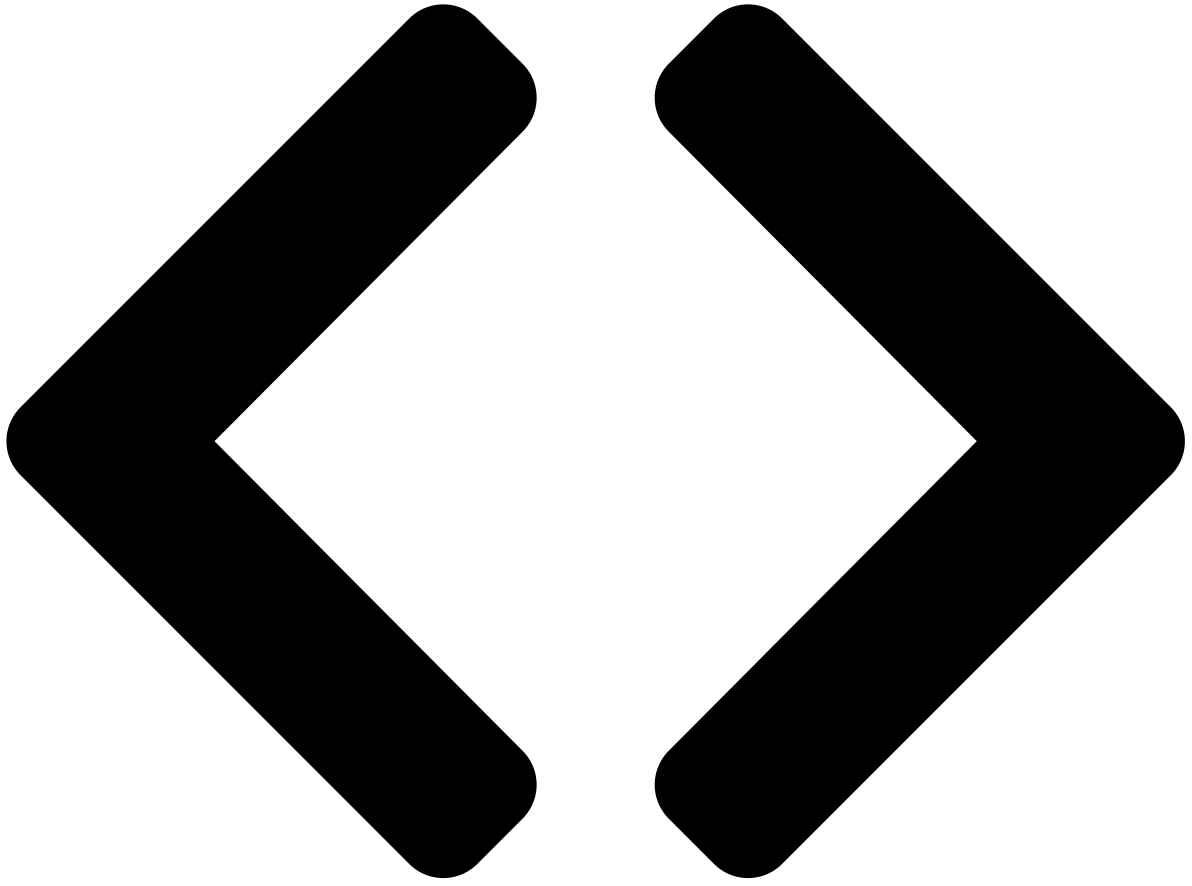

5.3.4

Exiting the Intel enterprise

SATA Option ROM utility

To exit the utility:

From the utility main menu, select 4. Exit then press <Enter>.

1.

2.

Press <Y> to exit or press <N> to return to the utility main menu.

5.3.5

Rebuilding the RAID

This option is only for the RAID 1 set.

Rebuilding the RAID with other non-RAID disk

If any of the SATA hard disk drives included in the RAID 1 array failed, the system displays the status of the RAID volume as "Degraded" during POST. You can rebuild the RAID array

with other installed non-RAID disks.

To rebuild the RAID with other non-RAID disk:

1.

During POST, press <Ctrl>+<I> at the prompt to enter the Intel Rapid Storage Technology option ROM utility.

2.

If there is a non-RAID SATA Hard Disk available, the utility will prompt you to rebuild the RAID. Press the up/down arrow keys to select the destination disk then Press <Enter> to start the rebuilding process, or press <ESC> to exit.

Time and disk available for rebuilding detected. Selectign
a rebuild. Rebuild completes in the operating system

Select a destination disk with the same size as the original hard disk.

5-30

Rapid Storage Technology

®

CONFIRM EXIT

ManualsLib.com

DEGRADED VOLUME DETECTED

Table of Contents

[Previous Page](#)
[Next Page](#)

1

...

147

148

149

150

Related Manuals for Asus Z9PE-D16-10G Series

[Software Asus Z9PE-D16-10G DUAL User Manual](#)

System web-based management (94 pages)

[Motherboard Asus Z9PH-D16 FDR User Manual](#)

Z9ph-d16 series (192 pages)

[Motherboard Asus Z9PE-D16 User Manual](#)

Z9pe-d16 series (194 pages)

[Motherboard Asus Z9PA-U8 User Manual](#)

Atx motherboard (188 pages)

[Motherboard Asus Z9PE-D8 WS Manual](#)

Dual intel socket 2011 (226 pages)

[Motherboard ASUS XC Cube box User Manual](#)

(226 pages)

[Motherboard Asus z9pe-d8 WS Quick Start Manual](#)

(14 pages)

[Motherboard Asus Z9PA-D8 User Manual](#)

Z9pa-d8 series 2 x lga 2011 socket (194 pages)

[Motherboard Asus Z9PR-D12 SERIES User Manual](#)

User guide (190 pages)

[Motherboard ASUS Z9PR-D16 Manual](#)

(194 pages)

[Motherboard ASUS Z97M-PLUS User Manual](#)

Uatx motherboard (144 pages)

[Motherboard Asus Z97-C Manual](#)

(48 pages)

[Motherboard Asus Z97-P Manual](#)

(22 pages)

[Motherboard Asus Z87-A User Manual](#)

Asus z87-a motherboard user guide (114 pages)

[Motherboard Asus Z97-PRO GAMER User Manual](#)

(102 pages)

[Motherboard Asus z97 Series Manual](#)

(28 pages)

Related Content for Asus Z9PE-D16-10G Series

[Z11PA-D8C Series Exiting The Intel Rapid Storage Technology](#)

[Enterprise Sata Option Rom Utility](#)

Asus Z11PA-D8C Series

[Pro WS 621-64L SAGE Series Exiting The Intel ® Rapid Storage](#)

[Technology Enterprise Sata Option Rom Utility](#)

Asus Pro WS 621-64L SAGE Series

[P10S WS Exiting The Intel ® Rapid Storage Technology Enterprise](#)

[Sata Option Rom Utility](#)

Asus P10S WS

[P10S-M Exiting The Intel ® Rapid Storage Technology Enterprise Sata Option Rom Utility](#)

Asus P10S-M

[P10S-C/4L Exiting The Intel ® Rapid Storage Technology Enterprise Sata Option Rom Utility](#)

Asus P10S-C/4L

[P10S-V/4L Exiting The Intel ® Rapid Storage Technology Enterprise Sata Option Rom Utility](#)

Asus P10S-V/4L

[Z10PA-U8/10G-2S Exiting The Intel Rapid Storage Technology Enterprise Sata/Ssata Option Rom Utility](#)

Asus Z10PA-U8/10G-2S

[Z10PE-D16 series Exiting The Intel Rapid Storage Technology Enterprise Sata/Ssata Option Rom Utility](#)

ASUS Z10PE-D16 series

This manual is also suitable for:

[Z9pe-d16-10g/dualZ9pe-d16-10g/single](#)