



# Installing The Asus Pike Raid Card - Asus Z9PE-D16-10G Series Manual

Z9pe-d16-10g series manual



 
1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117

118  
119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131  
132  
133  
134  
135  
136  
137  
138  
139  
140  
141  
142  
143  
144  
145  
146  
147  
148  
149  
150  
151  
152  
153  
154  
155  
156  
157  
158  
159  
160  
161  
162  
163  
164  
165  
166  
167

168  
169  
170  
171  
172  
173  
174  
175  
176  
177  
178  
179  
180  
181  
182  
183  
184  
185  
186  
187  
188  
189  
190  
191  
192  
193  
194  
195  
196  
197  
198  
199  
200  
201  
202





•

[Table of Contents](#)

•

## Bookmarks





## 2.5.8

### Installing the ASUS PIKE RAID card

Follow the steps below to install an optional ASUS RAID card on your motherboard.


1.

Locate the PIKE RAID card slot on the motherboard.

2.

Align the golden fingers of the RAID card with the PIKE RAID card slot.

3.

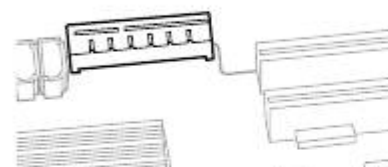

Insert the RAID card into the PIKE RAID card slot. Ensure that it is completely seated on the PIKE RAID card slot.

-

The motherboard illustration is for reference only. The motherboard layout and appearance may vary depending on the model, but the installation steps remain the same.

-

Refer to section 2.8.2 Internal Connectors for the PIKE SAS/SATA connector location.

2-20

Chapter 2: Hardware information



[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1  
...  
37  
38  
39  
40  
41  
42  
43  
44



## Related Manuals for Asus Z9PE-D16-10G Series

### [Software Asus Z9PE-D16-10G DUAL User Manual](#)

System web-based management (94 pages)

### [Motherboard Asus Z9PH-D16 FDR User Manual](#)

Z9ph-d16 series (192 pages)

### [Motherboard Asus Z9PE-D16 User Manual](#)

Z9pe-d16 series (194 pages)

### [Motherboard Asus Z9PA-U8 User Manual](#)

Atx motherboard (188 pages)

### [Motherboard Asus Z9PE-D8 WS Manual](#)

Dual intel socket 2011 (226 pages)

### [Motherboard ASUS XC Cube box User Manual](#)

(226 pages)

### [Motherboard Asus z9pe-d8 WS Quick Start Manual](#)

(14 pages)

### [Motherboard Asus Z9PA-D8 User Manual](#)

Z9pa-d8 series 2 x lga 2011 socket (194 pages)

### [Motherboard Asus Z9PR-D12 SERIES User Manual](#)

User guide (190 pages)

### [Motherboard ASUS Z9PR-D16 Manual](#)

(194 pages)

### [Motherboard ASUS Z97M-PLUS User Manual](#)

Uatx motherboard (144 pages)

### [Motherboard Asus Z97-C Manual](#)

(48 pages)

### [Motherboard Asus Z97-P Manual](#)

(22 pages)

### [Motherboard Asus Z87-A User Manual](#)

Asus z87-a motherboard user guide (114 pages)

### [Motherboard Asus Z97-PRO GAMER User Manual](#)

(102 pages)

### [Motherboard Asus z97 Series Manual](#)

(28 pages)

## Related Content for Asus Z9PE-D16-10G Series

### [Z8NR-D12 - Motherboard - SSI EEB 3.61 Installing Asus Pike Raid Card](#)

Asus Z8NR-D12 - Motherboard - SSI EEB 3.61

### [Z9PR-D12 SERIES Installing An Asus Pike Raid Card](#)

Asus Z9PR-D12 SERIES

### [Z9PA-D8 Installing An Asus Pike Raid Card](#)

Asus Z9PA-D8

[Z9NR-D12 Installing An Asus Pike Raid Card](#)

Asus Z9NR-D12

[P8B-E/4L Installing An Asus Pike Raid Card](#)

Asus P8B-E/4L

[Z8PE-D12X - Motherboard - SSI EEB 3.61 Installing An Asus Pike Raid Card](#)

Asus Z8PE-D12X - Motherboard - SSI EEB 3.61

[Z8PE-D18 - Motherboard - SSI EEB 3.61 Installing An Asus Pike Raid Card](#)

Asus Z8PE-D18 - Motherboard - SSI EEB 3.61

[Z8NA-D6 - Motherboard - ATX Installing An Asus Pike Raid Card](#)

Asus Z8NA-D6 - Motherboard - ATX

This manual is also suitable for:

[Z9pe-d16-10g/dualZ9pe-d16-10g/single](#)