

Starting Up For The First Time - Asus Z9PE-D16-10G Series Manual

Z9pe-d16-10g series manual

1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

15

16

 
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202



•

[Table of Contents](#)

•

Bookmarks



3.1

Starting up for the first time

1.

After making all the connections, replace the system case cover.

2.

Be sure that all switches are off.

3.

Connect the power cord to the power connector at the back of the system chassis.

4.

Connect the power cord to a power outlet that is equipped with a surge protector.

5.

Turn on the devices in the following order:

a.

Monitor

b.

External storage devices (starting with the last device on the chain)

c.

System power

6.

After applying power, the system power LED on the system front panel case lights up. For systems with ATX power supplies, the system LED lights up when you press the ATX power button. If your monitor complies with "green" standards or if it has a "power standby" feature, the monitor LED may light up or switch between orange and green after the system LED turns on.

The system then runs the power-on self-test or POST. While the tests are running, the BIOS beeps or additional messages appear on the screen. If you do not see anything within 30 seconds from the time you turned on the power, the system may have failed a power-on test. Check the jumper settings and connections or call your retailer for assistance.

7.

At power on, hold down the key to enter the BIOS Setup. Follow the instructions in Chapter 4.

Z9PE-D16-10G Series

3-3

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
64
65
66
67
68
69
70
71

Related Manuals for Asus Z9PE-D16-10G Series

[Software Asus Z9PE-D16-10G DUAL User Manual](#)

System web-based management (94 pages)

[Motherboard Asus Z9PH-D16 FDR User Manual](#)

Z9ph-d16 series (192 pages)

[Motherboard Asus Z9PE-D16 User Manual](#)

Z9pe-d16 series (194 pages)

[Motherboard Asus Z9PA-U8 User Manual](#)

Atx motherboard (188 pages)

[Motherboard Asus Z9PE-D8 WS Manual](#)

Dual intel socket 2011 (226 pages)

[Motherboard ASUS XC Cube box User Manual](#)

(226 pages)

[Motherboard Asus z9pe-d8 WS Quick Start Manual](#)

(14 pages)

[Motherboard Asus Z9PA-D8 User Manual](#)

Z9pa-d8 series 2 x lga 2011 socket (194 pages)

[Motherboard Asus Z9PR-D12 SERIES User Manual](#)

User guide (190 pages)

[Motherboard ASUS Z9PR-D16 Manual](#)

(194 pages)

[Motherboard ASUS Z97M-PLUS User Manual](#)

Uatx motherboard (144 pages)

[Motherboard Asus Z97-C Manual](#)

(48 pages)

[Motherboard Asus Z97-P Manual](#)

(22 pages)

[Motherboard Asus Z87-A User Manual](#)

Asus z87-a motherboard user guide (114 pages)

[Motherboard Asus Z97-PRO GAMER User Manual](#)

(102 pages)

[Motherboard Asus z97 Series Manual](#)

(28 pages)

Related Content for Asus Z9PE-D16-10G Series

[ROG CROSSHAIR VIII EXTREME Starting Up For The First Time](#)

Asus ROG CROSSHAIR VIII EXTREME

[PRIME X570-PRO Starting Up For The First Time](#)

Asus PRIME X570-PRO

[M3N-H/HDMI Starting Up For The First Time](#)

Asus M3N-H/HDMI

[TUF GAMING Z590-PLUS Starting Up For The First Time](#)

Asus TUF GAMING Z590-PLUS

[MAXIMUS VII HERO Starting Up For The First Time](#)

Asus MAXIMUS VII HERO

[STRIX Z270H GAMING Starting Up For The First Time](#)

Asus STRIX Z270H GAMING

[PRIME Z590-V Starting Up For The First Time](#)

Asus PRIME Z590-V

[ROG MAXIMUS XII EXTREME Starting Up For The First Time](#)

Asus ROG MAXIMUS XII EXTREME

This manual is also suitable for:

[Z9pe-d16-10g/dualZ9pe-d16-10g/single](#)