

Discharge Temperature - Sanyo CHDXR09663* Service Manual

2-way eco-i multi system

1

2

3

Table Of Contents

4

5

6

7

8

9

10

11

12

13

14

15

 
16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142



•

[Table of Contents](#)

•

Bookmarks



13. Discharge Temperature

<Alarm Information>

(1) Discharge temperature protection alarm

This device sets an upper limit discharge temperature of 222°F for all compressors. When the discharge tem-

perature reaches 222°F, that compressor is stopped and restarted. If the same high discharge condition occurs

4 times, then an alarm occurs.

After a compressor has stopped, that compressor will not operate until the temperature has dropped to or below the start-prohibit temperature.

Discharge temperature protection list

Compressor No.

Type

Stop temp.

Start-prohibit temp.

Alarm display

(2) Discharge sensor trouble detection control

An alarm occurs if the discharge temperature remains abnormally high (above 158°F), when the system has been stopped for 60 minutes.

* In this case, possible causes include sensor failure and compressor overheating caused by an insufficient level of refrigerant.

The alarm also occurs if the sensor temperature is at or above the abnormal temperature (176°F) when 20 minutes have passed after the compressor stopped.

* In this case, it is possible that the discharge temperature from a different outdoor unit is being detected, due to an error in the installation of the discharge thermistor.

Discharge sensor failure list

Compressor No.

Type

Alarm display

Compressor 1

Compressor 2

Inverter

Constant-speed

222°F

222°F

158°F

158°F

P03

P17

Compressor 1

Compressor 2

Inverter

Constant-speed

F04

F05

1 - 25

W-2WAY ECO-i SYSTEM

Control Functions

ManualsLib.com

Table of Contents

[Previous Page](#)
[Next Page](#)

1
...
27
28
29
30
31
32
33
34

Quick Links:

[Outdoor Unit Control Panel Led Display](#)

Related Manuals for Sanyo CHDXR09663*

[Air Conditioner Sanyo XM18AAB Installation Instructions Manual](#)

W-2way system air conditioner (50 pages)

[Air Conditioner Sanyo ECO-i AHX0752 Technical Data Manual](#)

(265 pages)

[Air Conditioner Sanyo MINI ECO-i XHX1252 Service Manual & Test Run Service Manual](#)

(190 pages)

[Air Conditioner Sanyo ECO-i CHDZR07263 Series Service Manual](#)

(146 pages)

[Air Conditioner Sanyo CHDZ07263 Service Manual](#)

(128 pages)

[Air Conditioner Sanyo AHX0752 Service Manual](#)

W-2way eco-i multi system (114 pages)

[Air Conditioner Sanyo W-3WAY ECO-i 85464369098000 Installation Instructions Manual](#)

W-3way eco-i system air conditioner (106 pages)

[Air Conditioner Sanyo 85464359982001 Installation Instructions Manual](#)

W-2way system air conditioner (96 pages)

[Air Conditioner Sanyo Mini ECO-i CHXR03652 Service Manual](#)

(93 pages)

[Air Conditioner Sanyo Mini ECO-i 85464359981002 Installation Instructions Manual](#)

Sanyo air conditioner installation instructions (90 pages)

[Air Conditioner Sanyo R410A Installation Instructions Manual](#)

W-3way eco-i system air conditioner (54 pages)

[Air Conditioner Sanyo ECO R410A Installation Instructions Manual](#)

Eco-i system air conditioner (48 pages)

[Air Conditioner Sanyo XHX1252 Instruction Manual](#)

Split system air conditioner (20 pages)

[Air Conditioner Sanyo THX2452 User Manual](#)

(4 pages)

[Air Conditioner Sanyo DHX4852 Manual](#)

Indoor unit (4 pages)

[Air Conditioner Sanyo THX1852 Manual](#)

Indoor unit (4 pages)

Related Content for Sanyo CHDXR09663*

[SPW-T253GH56 Discharge Temperature Control \(Cooling And Heating\)](#)

Sanyo SPW-T253GH56

[SPW-U253GH56 Discharge Temperature Control \(Cooling And Heating\)](#)

Sanyo SPW-U253GH56

[SPW-X253GH56 Discharge Temperature Control \(Cooling And Heating\)](#)

Sanyo SPW-X253GH56

[XHS3632 Discharge Temperature Control \(Cooling And Heating\)](#)

Sanyo XHS3632

[KH2442 / CH2442 Discharge Temperature Control \(Cooling And Heating\)](#)

Sanyo KH2442 / CH2442

[XS3632 Room Temperature Control](#)

Sanyo XS3632

[KS3032 Room Temperature Control](#)

Sanyo KS3032

[SAP-K181AA Room Temperature Control](#)

Sanyo SAP-K181AA

This manual is also suitable for:

[Chdx09663Chdxr07263Chdx07263Uhx0762Ahx0752Uhx0962](#) ... [Show all](#)