



# Other Functions - Sanyo CHDXR09663\* Service Manual

2-way eco-i multi system



1

2

3

Table Of Contents

4

5

6

7

8

9

10

11

12

13

14

15

 
16

17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117

118  
119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131  
132  
133  
134  
135  
136  
137  
138  
139  
140  
141  
142



•

[Table of Contents](#)



•

## Bookmarks





## 18. Other Functions

### 18-1. Snowfall Sensor Functions: Outdoor EEPROM 04

A unit identified as having a snowfall sensor attached will periodically send a signal indicating the snowfall sensor

input status to all outdoor units in the same system (or all wired outdoor units in the case of linked systems). It is therefore unnecessary to install and wire multiple snowfall sensors.

(1) Snow fall sensor settings

**1**

	put not present. Control is performed. (Setting at time of factory shipment)
	put present. Control is performed.

Sensor input not present. Control is not performed.

3

Sensor input present. Control is not performed.

\* If the snowfall sensor is used, then depending on the circumstances it is necessary to make the correct setting at all outdoor units in the system.

\* If "control is not performed" is set, control by the above signal is ignored. This setting is used in order to conserve

energy at outdoor units that include a snowfall-protection hood.

Recommended: If a low-speed fan mode is required (for all-year cooling or other reasons), install a snowfall-pro-

control operation	
At outdoor units where "sensor input present" is set	send the snowfall sensor input information every 10
minutes.	
At all linked systems if the system wiring is linked.	
At systems where "control is performed" is set,	the above information is used to control operation of the out
door fan.	
[3] At systems where "control is not performed" is set,	the snowfall sensor input and above information
ignored,	
and the outdoor fan does not operate.	

[4]

In case of W-2WAY ECO-i system, control can be performed when snowfall sensor input is connected to any outdoor unit.

**<Caution>**

Snowfall sensor input information is detected once every 10 minutes. Therefore, the outdoor fan may continue

operating for up to 10 minutes even when there is no snowfall sensor input.

In addition, the outdoor fan may remain stopped for up to 10 minutes when snowfall sensor input is present.

**18-2. Function for Automatic Judgment of Insufficient Refrigerant Gas and Overcharge**

This system includes a simple function for judging the level of refrigerant. However, be aware that false judgments

may occur if the control elements of the outdoor unit or indoor unit fail.

**(1) Starting refrigerant level judgment mode**

Short-circuit the CHECK pin on the No. 1 outdoor for 4 seconds or longer to engage this mode. (The LED on the outdoor unit PCB begins blinking.)

**(2) Conditions for refrigerant level judgment**

After judgment mode starts, judgment occurs when all outdoor units in the system have been operating contin-

uously for 30 minutes or longer.

\* Refrigerant level judgment requires that all outdoor units operate continuously for 30 minutes or longer.

This is

in order to prevent incorrect adjustment of the refrigerant level based on false detection caused by refrigerant

accumulation or recovery at stopped outdoor units, which is due to failures of functional elements.

After the judgment is displayed, repeated judgment will occur under new operating conditions if all outdoor

units continue operating. Therefore, the judgment display may change when later judgments occur.

\* Judgment mode is automatically canceled after 4 hours.

tection hood and set this setting to ON .

**Operation**

1 - 32

[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1  
...  
34  
35  
36  
37  
38  
39  
40  
41

Quick Links:

[Outdoor Unit Control Panel Led Display](#)

## Related Manuals for Sanyo CHDXR09663\*

[Air Conditioner Sanyo XM18AAB Installation Instructions Manual](#)

W-2way system air conditioner (50 pages)

[Air Conditioner Sanyo ECO-i AHX0752 Technical Data Manual](#)

(265 pages)

[Air Conditioner Sanyo MINI ECO-i XHX1252 Service Manual & Test Run Service Manual](#)

(190 pages)



[Air Conditioner Sanyo ECO-i CHDZR07263 Series Service Manual](#)

(146 pages)

[Air Conditioner Sanyo CHDZ07263 Service Manual](#)

(128 pages)

[Air Conditioner Sanyo AHX0752 Service Manual](#)

W-2way eco-i multi system (114 pages)

[Air Conditioner Sanyo W-3WAY ECO-i 85464369098000 Installation Instructions Manual](#)

W-3way eco-i system air conditioner (106 pages)

[Air Conditioner Sanyo 85464359982001 Installation Instructions Manual](#)

W-2way system air conditioner (96 pages)

[Air Conditioner Sanyo Mini ECO-i CHXR03652 Service Manual](#)

(93 pages)

[Air Conditioner Sanyo Mini ECO-i 85464359981002 Installation Instructions Manual](#)

Sanyo air conditioner installation instructions (90 pages)

[Air Conditioner Sanyo R410A Installation Instructions Manual](#)

W-3way eco-i system air conditioner (54 pages)

[Air Conditioner Sanyo ECO R410A Installation Instructions Manual](#)

Eco-i system air conditioner (48 pages)

[Air Conditioner Sanyo XHX1252 Instruction Manual](#)

Split system air conditioner (20 pages)

[Air Conditioner Sanyo THX2452 User Manual](#)

(4 pages)

[Air Conditioner Sanyo DHX4852 Manual](#)

Indoor unit (4 pages)

[Air Conditioner Sanyo THX1852 Manual](#)

Indoor unit (4 pages)

## Related Content for Sanyo CHDXR09663\*

[SAP-K71GH Other Component Specifications](#)

Sanyo SAP-K71GH

[SAP-KMRV93GJH Other Component Specifications](#)

Sanyo SAP-KMRV93GJH

[CM2472 Other Component Specifications](#)

Sanyo CM2472

[SAP-K71GJA-S Other Component Specifications](#)

Sanyo SAP-K71GJA-S

[SA-58S5 Other Component Specifications](#)

Sanyo SA-58S5

[SAP-K71GJHA Other Component Specifications](#)

Sanyo SAP-K71GJHA

[MINI ECO-i XHX1252 Main Operating Functions](#)

Sanyo MINI ECO-i XHX1252

## [STW-2 Series Other Component Specifications](#)

Sanyo STW-2 Series

This manual is also suitable for:

[Chdx09663Chdxr07263Chdx07263Uhx0762Ahx0752Uhx0962](#) ... [Show all](#)