

Replacing 4-Way Valve - Sanyo CHDXR09663* Service Manual

2-way eco-i multi system

1

2

3

Table Of Contents

4

5

6

7

8

9

10

11

12

13

14

15

 
16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142



•

[Table of Contents](#)

•

Bookmarks



12. Replacing 4-way Valve

When replacing 4-way valve of type 96 (for type with 1 or 2 compressor), be sure to protect check valves, which are located adjacent to the 4-way valve, while performing replacement work. Type 72 (for type with 1 compressor) is not located near to the check valves, therefore no protection is necessary.

12-1. When the replacement is available from the right side of the unit

(1)

Remove the front panel of the outdoor unit, then remove the right side panel of the unit.

(2)

Follow the instructions in "9. Pumping Out Refrigerant from Outdoor Unit", recover the refrigerant of the outdoor unit where the 4-way valve is located.

(3) Connect the manifold gauge to the high and low-pressure outlet ports at the outdoor unit where the 4-way



valve will be replaced. Connect the manifold gauge to a nitrogen cylinder and perform nitrogen gas replacement.

(4) Prepare the brazing kit to disconnect the brazed parts (4 locations).

CAUTION

(5) After replacing the 4-way valve, follow the instructions in "6. Checking for Leakage After Repair", and "7. Evacuating System". The outdoor unit after replaced 4-way valve shall be checked for gas leakage and perform system evacuation.

(6) Fully open service valves on the outdoor unit. However, if only one outdoor unit is installed, leave the balance tube kept closed.


(7) [Redacted] the recovered refrigerant with the Refrigerant Recovery Unit by referring to the Installation Instructions that came with the outdoor unit and the refrigerant recovery unit. [Redacted] the check valves as shown in the figure 30.

parts
(ns)



W-ZWAY ECO-i SYSTEM
Outdoor Unit Repair Procedures

Check valve
4-way valve

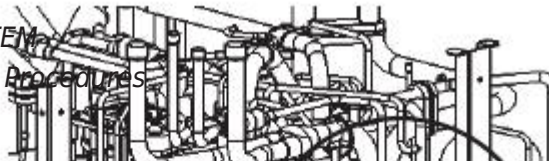

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
72
73
74
75
76
77
78
79

Quick Links:

[Outdoor Unit Control Panel Led Display](#)

Related Manuals for Sanyo CHDXR09663*

[Air Conditioner Sanyo XM18AAB Installation Instructions Manual](#)

W-2way system air conditioner (50 pages)

[Air Conditioner Sanyo ECO-i AHX0752 Technical Data Manual](#)

(265 pages)

[Air Conditioner Sanyo MINI ECO-i XHX1252 Service Manual & Test Run Service Manual](#)

(190 pages)

[Air Conditioner Sanyo ECO-i CHDZR07263 Series Service Manual](#)

(146 pages)

[Air Conditioner Sanyo CHDZ07263 Service Manual](#)

(128 pages)

[Air Conditioner Sanyo AHX0752 Service Manual](#)

W-2way eco-i multi system (114 pages)

[Air Conditioner Sanyo W-3WAY ECO-i 85464369098000 Installation Instructions Manual](#)

W-3way eco-i system air conditioner (106 pages)

[Air Conditioner Sanyo 85464359982001 Installation Instructions Manual](#)

W-2way system air conditioner (96 pages)

[Air Conditioner Sanyo Mini ECO-i CHXR03652 Service Manual](#)

(93 pages)

[Air Conditioner Sanyo Mini ECO-i 85464359981002 Installation Instructions Manual](#)

Sanyo air conditioner installation instructions (90 pages)

[Air Conditioner Sanyo R410A Installation Instructions Manual](#)

W-3way eco-i system air conditioner (54 pages)

[Air Conditioner Sanyo ECO R410A Installation Instructions Manual](#)

Eco-i system air conditioner (48 pages)

[Air Conditioner Sanyo XHX1252 Instruction Manual](#)

Split system air conditioner (20 pages)

[Air Conditioner Sanyo THX2452 User Manual](#)

(4 pages)

[Air Conditioner Sanyo DHX4852 Manual](#)

Indoor unit (4 pages)

[Air Conditioner Sanyo THX1852 Manual](#)

Indoor unit (4 pages)

Related Content for Sanyo CHDXR09663*

[SPW-T253GH56 4-Way Valve, Solenoid Control](#)

Sanyo SPW-T253GH56

[SPW-U253GH56 4-Way Valve, Solenoid Control](#)

Sanyo SPW-U253GH56

[SPW-X253GH56 4-Way Valve, Solenoid Control](#)

Sanyo SPW-X253GH56

[XHS3632 4-Way Valve, Solenoid Control](#)

Sanyo XHS3632

[KH2442 / CH2442 4-Way Valve, Solenoid Control](#)

Sanyo KH2442 / CH2442

[Mini ECO-i SPW-ASR74GXH56\(A/B\) Optional Ball Valve Kit](#)

Sanyo Mini ECO-i SPW-ASR74GXH56(A/B)

[ECO-i AHX0752 Rcs-Sh80Aab.wl For 4-Way Air Discharge Semi-Concealed \(X Type\)](#)

Sanyo ECO-i AHX0752

[KHS3632 / CH3632 4-Way Valve, Solenoid Control](#)

Sanyo KHS3632 / CH3632

This manual is also suitable for:

[Chdx09663Chdxr07263Chdx07263Uhx0762Ahx0752Uhx0962](#) ... [Show all](#)