

Outdoor Unit Alarm History Monitor - Sanyo CHDXR09663* Service Manual

2-way eco-i multi system

1

2

3

Table Of Contents

4

5

6

7

8

9

10

11

12

13

14

15

 
16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142



•

[Table of Contents](#)

•

Bookmarks




5. Outdoor Unit Alarm History Monitor


Displays outdoor unit alarms only.

Check the indoor unit alarm histories separately using the indoor unit remote controllers or other control device.


<Operating procedure>

Press and hold the  button simultaneously for 4 seconds or longer to engage outdoor unit alarm history mode.

During temperature monitoring,

The display and operations are the same as for the alarm history monitor performed from the indoor unit remote controller. However the "unit No." display shows the outdoor unit address. 

SET

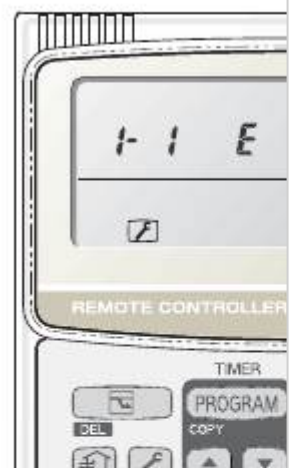

Press the button and select the outdoor unit for which to monitor the alarm history.

Press the temperature setting buttons and select the item code for the alarm history. The select outdoor unit address, the item code, and the alarm history (alarm data) are displayed.


The outdoor unit address is displayed as R.C. XX-YY.

System XX = Outdoor unit system address

R.C. XX = Outdoor unit system address


YY = Outdoor unit sub-bus address 

Item codes 01-08 are displayed. 01 indicates the most recent alarm.


The alarm history displays the alarm code. (If no alarm are present, then -- -- is displayed.) 

To clear the alarm history, press the outdoor unit alarm history will be cleared.)

To exit, press the returns to the normal display.

(CHECK) button and illuminates. 

and

button. (The 

(CHECK) button. The display

Outdoor Unit Maintenance Remote Controller

1

5

3 - 11

W-2WAY ECO-i SYSTEM

3

4

2



UNIT

SET



ManualsLib.com

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
85
86
87
88
89
90
91
92

Quick Links:

[Outdoor Unit Control Panel Led Display](#)

Related Manuals for Sanyo CHDXR09663*

[Air Conditioner Sanyo XM18AAB Installation Instructions Manual](#)

W-2way system air conditioner (50 pages)

[Air Conditioner Sanyo ECO-i AHX0752 Technical Data Manual](#)

(265 pages)

[Air Conditioner Sanyo MINI ECO-i XHX1252 Service Manual & Test Run Service Manual](#)

(190 pages)

[Air Conditioner Sanyo ECO-i CHDZR07263 Series Service Manual](#)

(146 pages)

[Air Conditioner Sanyo CHDZ07263 Service Manual](#)

(128 pages)

[Air Conditioner Sanyo AHX0752 Service Manual](#)

W-2way eco-i multi system (114 pages)

[Air Conditioner Sanyo W-3WAY ECO-i 85464369098000 Installation Instructions Manual](#)

W-3way eco-i system air conditioner (106 pages)

[Air Conditioner Sanyo 85464359982001 Installation Instructions Manual](#)

W-2way system air conditioner (96 pages)

[Air Conditioner Sanyo Mini ECO-i CHXR03652 Service Manual](#)

(93 pages)

[Air Conditioner Sanyo Mini ECO-i 85464359981002 Installation Instructions Manual](#)

Sanyo air conditioner installation instructions (90 pages)

[Air Conditioner Sanyo R410A Installation Instructions Manual](#)

W-3way eco-i system air conditioner (54 pages)

[Air Conditioner Sanyo ECO R410A Installation Instructions Manual](#)

Eco-i system air conditioner (48 pages)

[Air Conditioner Sanyo XHX1252 Instruction Manual](#)

Split system air conditioner (20 pages)

[Air Conditioner Sanyo THX2452 User Manual](#)

(4 pages)

[Air Conditioner Sanyo DHX4852 Manual](#)

Indoor unit (4 pages)

[Air Conditioner Sanyo THX1852 Manual](#)

Indoor unit (4 pages)

Related Content for Sanyo CHDXR09663*

[XM18AAB Outdoor Unit](#)

Sanyo XM18AAB

[Mini ECO-i SPW-ASR74GXH56\(A/B\) Outdoor Unit](#)

Sanyo Mini ECO-i SPW-ASR74GXH56(A/B)

[MINI ECO-i XHX1252 Outdoor Unit Pcb Setting](#)

Sanyo MINI ECO-i XHX1252

[C2432A Outdoor Unit](#)

Sanyo C2432A

[ECO-i AHX0752 Outdoor Unit](#)

Sanyo ECO-i AHX0752

[SAP-CMRV3143GJH Outdoor Unit](#)

Sanyo SAP-CMRV3143GJH

[SPW-C256VH Monitoring The Outdoor Unit Alarm History: Display Of Outdoor Unit Alarm History](#)

Sanyo SPW-C256VH

[C4272R Monitoring The Outdoor Unit Alarm History: Display Of Outdoor Unit Alarm History](#)

Sanyo C4272R

This manual is also suitable for:

[Chdx09663Chdxr07263Chdx07263Uhx0762Ahx0752Uhx0962](#) ... [Show all](#)