

Mode Settings - Sanyo CHDXR09663* Service Manual

2-way eco-i multi system

1

2

3

Table Of Contents

4

5

6

7

8

9

10

11

12

13

14

15

 
16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142



•

[Table of Contents](#)

•

Bookmarks



6. Mode Settings

Setting mode 1



<Operating procedure>

Press and hold the (VENTILATION) button simultaneously for 4 seconds or longer.

Press the temperature setting buttons to change the item code. The item codes and setting data are shown in the table of "List of Item Codes" of the next page.

Press the timer time change the setting data.

To confirm the changed setting data, press the button.

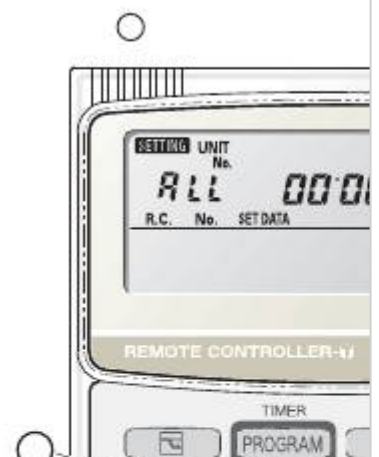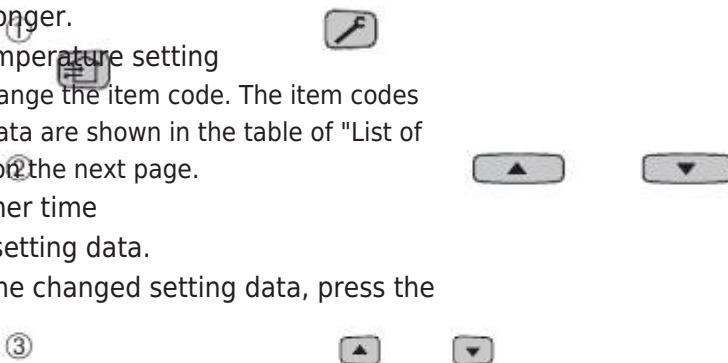

(At this time, all displays stop blinking and remain lit.)

During this mode, "

The outdoor unit address display section displays "ALL," the item code and number (DN value in the

table), and the setting data (8 digits).

(The setting data is displayed in 8 digits. The display changes between the first 4 digits (Fig. and the last 4 digits (Fig.

When the first 4 digits are displayed, the top dot of the colon is illuminated.)

To exit the setting mode, press the button.

DN

Snowfall sensor usage

Outdoor unit fan Quiet mode

Energy saving mode

Energy saving operation plug

Demand 1 current

Demand 2 current

button and

to
 ayed, blinking.

(CHECK)

Parameter

0 = Sensor input not present. Control is performed.

1 = Sensor input present. Control is performed.

2 = Sensor input not present. Control is not performed.

3 = Sensor input present. Control is not performed.

0 = Disabled

2 = Quiet mode 2

4 = Quiet mode 4

0 = None

1 = Discharge temp. control only (Mode 3)

2 = Demand only (Mode 2)

3 = Discharge temp. control + Demand (Mode 1)

0 = Independent

1 = All indoor units linked

0 = 0% 1 = 40 ... 4 = 70 7 = 100 8 = 120

9 = 140 10 = 160 11 = 200 12 = -1 (no limit)

0 = 0% 1 = 40 ... 4 = 70 7 = 100 8 = 120

9 = 140 10 = 160 11 = 200 12 = -1 (no limit)

Outdoor Unit Maintenance Remote Controller

Display of first 4 digits

A



5

1

	05	

SETTING

ManualsLib.com

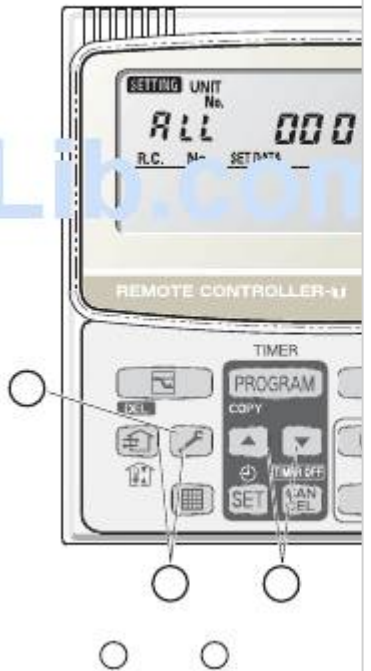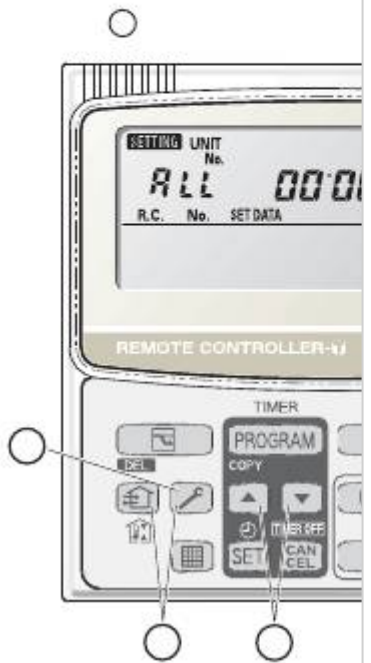

Display of last 4 digits

B

A

)

5

1

and

A

B

(Example shows display of 0000 0001.)

Description

1 = Quiet mode 1

3 = Quiet mode 3

3 - 12

W-2WAY ECO-i SYSTEM

3

3

are displayed alternately.

2

2




①



②

③

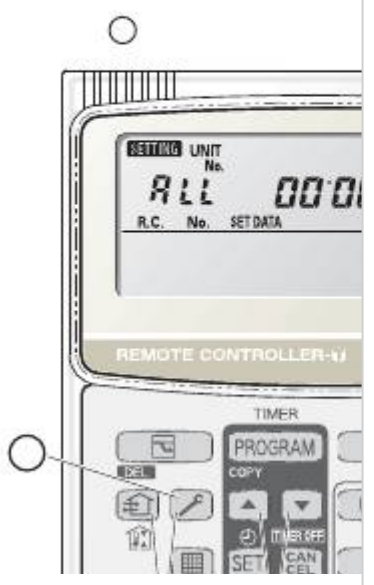

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
86
87
88
89
90
91
92
93

Quick Links:

[Outdoor Unit Control Panel Led Display](#)

Related Manuals for Sanyo CHDXR09663*

[Air Conditioner Sanyo XM18AAB Installation Instructions Manual](#)

W-2way system air conditioner (50 pages)

[Air Conditioner Sanyo ECO-i AHX0752 Technical Data Manual](#)

(265 pages)

[Air Conditioner Sanyo MINI ECO-i XHX1252 Service Manual & Test Run Service Manual](#)

(190 pages)

[Air Conditioner Sanyo ECO-i CHDZR07263 Series Service Manual](#)

(146 pages)

[Air Conditioner Sanyo CHDZ07263 Service Manual](#)

(128 pages)

[Air Conditioner Sanyo AHX0752 Service Manual](#)

W-2way eco-i multi system (114 pages)

[Air Conditioner Sanyo W-3WAY ECO-i 85464369098000 Installation Instructions Manual](#)

W-3way eco-i system air conditioner (106 pages)

[Air Conditioner Sanyo 85464359982001 Installation Instructions Manual](#)

W-2way system air conditioner (96 pages)

[Air Conditioner Sanyo Mini ECO-i CHXR03652 Service Manual](#)

(93 pages)

[Air Conditioner Sanyo Mini ECO-i 85464359981002 Installation Instructions Manual](#)

Sanyo air conditioner installation instructions (90 pages)

[Air Conditioner Sanyo R410A Installation Instructions Manual](#)

W-3way eco-i system air conditioner (54 pages)

[Air Conditioner Sanyo ECO R410A Installation Instructions Manual](#)

Eco-i system air conditioner (48 pages)

[Air Conditioner Sanyo XHX1252 Instruction Manual](#)

Split system air conditioner (20 pages)

[Air Conditioner Sanyo THX2452 User Manual](#)

(4 pages)

[Air Conditioner Sanyo DHX4852 Manual](#)

Indoor unit (4 pages)

[Air Conditioner Sanyo THX1852 Manual](#)

Indoor unit (4 pages)

Related Content for Sanyo CHDXR09663*

[SAP-K71GJA-S Night Setback Mode](#)

Sanyo SAP-K71GJA-S

[SAP-K71GJHA Night Setback Mode](#)

Sanyo SAP-K71GJHA

[MINI ECO-i XHX1252 Remote Controller Test Run Settings](#)

Sanyo MINI ECO-i XHX1252

[ECO-i AHX0752 Mode Setting](#)

Sanyo ECO-i AHX0752

[MINI ECO-i SPW-CR365GXH56B Address Settings \(Outdoor Units\)](#)

Sanyo MINI ECO-i SPW-CR365GXH56B

[SAP-K91AA Night Setback Mode](#)

Sanyo SAP-K91AA

[SPW-D253GH56 Auto. Mode For Automatic Heating/Cooling Switching](#)

Sanyo SPW-D253GH56

[SAP-FDRV96EH Night Setback Mode](#)

Sanyo SAP-FDRV96EH

This manual is also suitable for:

[Chdx09663Chdxr07263Chdx07263Uhx0762Ahx0752Uhx0962](#) ... [Show all](#)