

Compressor Control - Sanyo CHDXR09663* Service Manual

2-way eco-i multi system

1

2

3

Table Of Contents

4

5

6

7

8

9

10

11

12

13

14

15

 
16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142



•

[Table of Contents](#)

•

Bookmarks



3. Compressor Control

3-1. Compressors Mounted in the Outdoor Units

[CHDX07263, CHDX09663]

 
 
Installed
compressor

3-2. Compressor Selection Rules

In cooling mode, all inverter compressors in the outdoor units are designed to operate simultaneously. All

compressors will stop at a time when the outdoor is stopped accordingly. Constant-speed compressors

operate in the order of the shortest amount of operating time. In heating mode, the inverter compressor with the



amount of operating time runs at first followed by the compressors in order of the shortest amount of operating time including inverter units.

* Immediately after installation, all compressors have an operating time of zero. In this case, the compressors

start in the following sequence: Inverter compressor > Constant-speed compressor 1 > Constant-speed compressor 2.

Examples of accumulated operating time: ODU=Outdoor Unit

Suppose the following tentative system.

Compressor Selection Sequence in Cooling Mode:

Inverter compressors are firstly selected simultaneously.

Compressor Selection Sequence in Heating Mode:

First, the inverter compressor with the shortest amount of operating time is selected. And then, the remained

other compressors are selected and start in the order of shortest amount of operating time .

Comp 1

Comp 2

Capacity

DC Inverter

Compressor 1

Rotary

Compressor 2

Scroll

INV

Compressor 1

Type 72

ODU 1

ODU 2

100 hrs.

70 hrs.

150 hrs.

160 hrs.

ODU 1

ODU 2

1st

1st

3rd

4th

ODU 1

ODU 2

3rd

1st

4th

2nd

72

96


DC Inverter

5 hp

hp = horsepower

Constant

INV

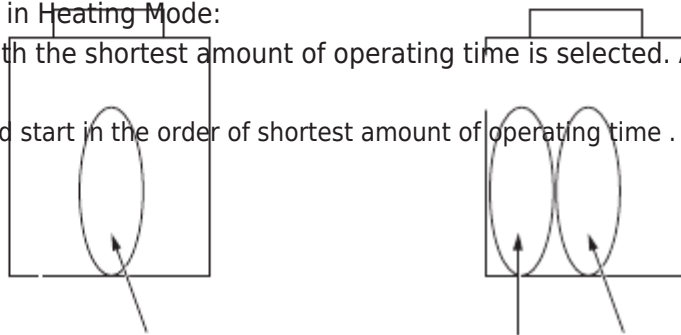





speed

Compressor 2 Compressor 1

Type 96

1 - 4

W-2WAY ECO-i SYSTEM

Control Functions

[Table of Contents](#)

[Previous Page](#)

[Next Page](#)

1
...
6
7
8
9
10
11
12
13

Quick Links:

[Outdoor Unit Control Panel Led Display](#)

Related Manuals for Sanyo CHDXR09663*

[Air Conditioner Sanyo XM18AAB Installation Instructions Manual](#)

W-2way system air conditioner (50 pages)

[Air Conditioner Sanyo ECO-i AHX0752 Technical Data Manual](#)

(265 pages)

[Air Conditioner Sanyo MINI ECO-i XHX1252 Service Manual & Test Run Service Manual](#)

(190 pages)

[Air Conditioner Sanyo ECO-i CHDZR07263 Series Service Manual](#)

(146 pages)

[Air Conditioner Sanyo CHDZ07263 Service Manual](#)

(128 pages)

[Air Conditioner Sanyo AHX0752 Service Manual](#)

W-2way eco-i multi system (114 pages)

[Air Conditioner Sanyo W-3WAY ECO-i 85464369098000 Installation Instructions Manual](#)

W-3way eco-i system air conditioner (106 pages)

[Air Conditioner Sanyo 85464359982001 Installation Instructions Manual](#)

W-2way system air conditioner (96 pages)

[Air Conditioner Sanyo Mini ECO-i CHXR03652 Service Manual](#)

(93 pages)

[Air Conditioner Sanyo Mini ECO-i 85464359981002 Installation Instructions Manual](#)

Sanyo air conditioner installation instructions (90 pages)

[Air Conditioner Sanyo R410A Installation Instructions Manual](#)

W-3way eco-i system air conditioner (54 pages)

[Air Conditioner Sanyo ECO R410A Installation Instructions Manual](#)

Eco-i system air conditioner (48 pages)

[Air Conditioner Sanyo XHX1252 Instruction Manual](#)

Split system air conditioner (20 pages)

[Air Conditioner Sanyo THX2452 User Manual](#)

(4 pages)

[Air Conditioner Sanyo DHX4852 Manual](#)

Indoor unit (4 pages)

[Air Conditioner Sanyo THX1852 Manual](#)

Indoor unit (4 pages)

Related Content for Sanyo CHDXR09663*

[SAP-CMRV1923GJ Compressor Temperature Control](#)

Sanyo SAP-CMRV1923GJ

[SAP-CMRV1923GJH Compressor Temperature Control](#)

Sanyo SAP-CMRV1923GJH

[SPW-C483GYH8 Compressor Control](#)

Sanyo SPW-C483GYH8

[XS3632 Compressor Does Not Run.43](#)

Sanyo XS3632

[KS3032 \(10\) Compressor Does Not Run](#)

Sanyo KS3032

[SAP-K181AA Remote Control Unit Installation Position](#)

Sanyo SAP-K181AA

[CHDZ07263 Setting Of Unit Control Pcb](#)

Sanyo CHDZ07263

[SAP-K181GJH Remote Control Unit Installation Position](#)

Sanyo SAP-K181GJH

This manual is also suitable for:

[Chdx09663Chdxr07263Chdx07263Uhx0762Ahx0752Uhx0962](#) ... [Show all](#)