

Busy Indicator - Toshiba R6472 - DVD±RW Drive - IDE Specifications

Dvd writable drive

1

2

3

4

Table Of Contents

5

6

7

8

9

10

11

12

13

14

15

16

17


18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35

•

[Table of Contents](#)

•

Bookmarks

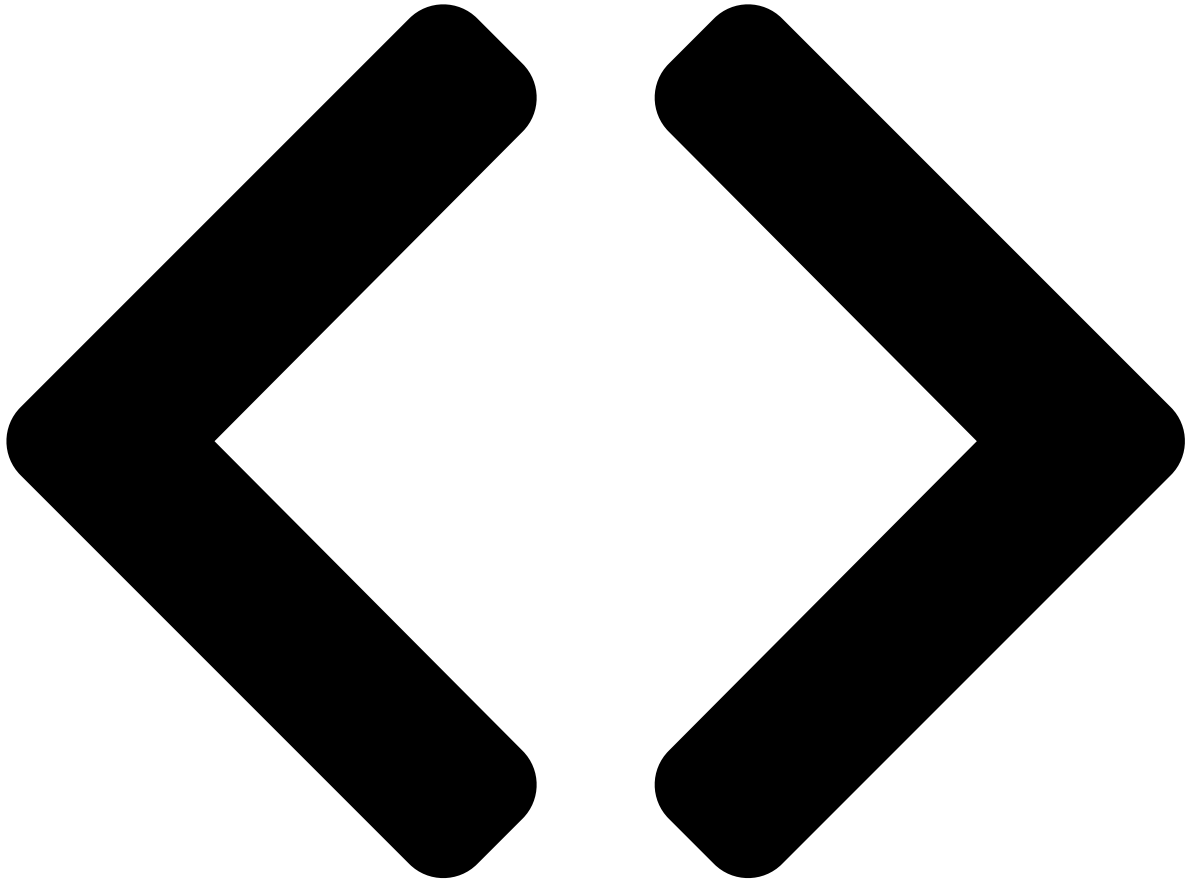

10. Busy Indicator

The Busy LED (hereafter 'the indicator') on the front panel indicates the drive state.

Color: Amber

(1) The indicator remains turned off when the drawer is open.

(2) When the drawer is closed, the indicator blinks for several seconds at intervals of 0.8 seconds, then

moves into the following states.

(2-1) The indicator is turned off when the drive is in Standby status.

0.8 s

(2-2) The indicator is turned off when no disc is mounted in the drawer.

0.8 s

(2-3) The indicator remains turned on when the disc read fails.

0.8 s



(3) The indicator blinks at intervals of 1.6 seconds when reading an audio CD.

(4) The indicator remains turned on while accessing data, transferring data and writing.

Figure 14 Standby

Figure 15 No disc mounted

Figure 16 Disk read failed

1.6 s

Figure 17 Audio CD reading

Light On

Figure 18 Data accessing, data transferring, and writing

23 / 28

Light Off

Light Off

Light On

TS-L532A (SD-R6472) Rev.1.1

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
26
27
28
29
30
31
32
33

Related Manuals for Toshiba R6472 - DVD±RW Drive - IDE

[DVD Drive Toshiba SD-R6472 User Manual](#)

Dvd rewriteable mobile drive (14 pages)

[DVD Drive Toshiba PA3761U-1DV2 - External USB 2.0 DVD Super Multi Drive Product Specifications](#)

Specifications (1 page)

[DVD Drive Toshiba SD-M1612 User Manual](#)

Dvd-rom drive (17 pages)

[DVD Drive Toshiba SD-C2732 User Manual](#)

Dvd-rom mobile drive (12 pages)

[DVD Drive Toshiba SD-M1712 User Manual](#)

Dvd-rom drive (16 pages)

[DVD Drive Toshiba SD-C2612 User Manual](#)

Dvd-rom mobile drive (12 pages)

[DVD Drive Toshiba SD-R2002 User Manual](#)

Cd-rw/dvd-rom combination mobile drive (12 pages)

[DVD Drive Toshiba SD-R1312 User Manual](#)

Cd-rw/dvd-rom combo drive (16 pages)

[DVD Drive Toshiba SD-C2512 User Manual](#)

Dvd-rom mobile drive (12 pages)

[DVD Drive Toshiba PA3454U-1DV2 - External USB 2.0 DVD Super Multi Drive User Manual](#)

External dvd supermulti drive (65 pages)

[DVD Drive Toshiba PA3352 1CD2 Series User Manual](#)

External cd-rw/dvd-rom drive (32 pages)

[DVD Drive Toshiba SD-R6112 User Manual](#)

Dvd rewriteable mobile drive (13 pages)

[DVD Drive Toshiba SD-R6112 Product Specification](#)

Dvd-r/-rw drive (34 pages)

[DVD Drive Toshiba H802A - SD - Disk Drive Features Manual](#)

Half height hd dvd-rom drive (1 page)

[DVD Drive Toshiba SD-M1502 User Manual](#)

Sd-m1502 dvd-rom drive user manual (16 pages)

[DVD Drive Toshiba SD-M1212 - DVD-ROM Drive - IDE Specifications](#)

Dvd-rom drive (35 pages)

Related Content for Toshiba R6472 - DVD±RW Drive - IDE

[SD-R6112 Busy Indicator](#)

Toshiba SD-R6112

This manual is also suitable for:

[Sd-r6472](#)