

Optional Connection; Connections; Inserting An Sd Card; Connect Power - Toshiba BDX1100KC Owner's Manual

Blu-ray disc player

1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47

•


[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

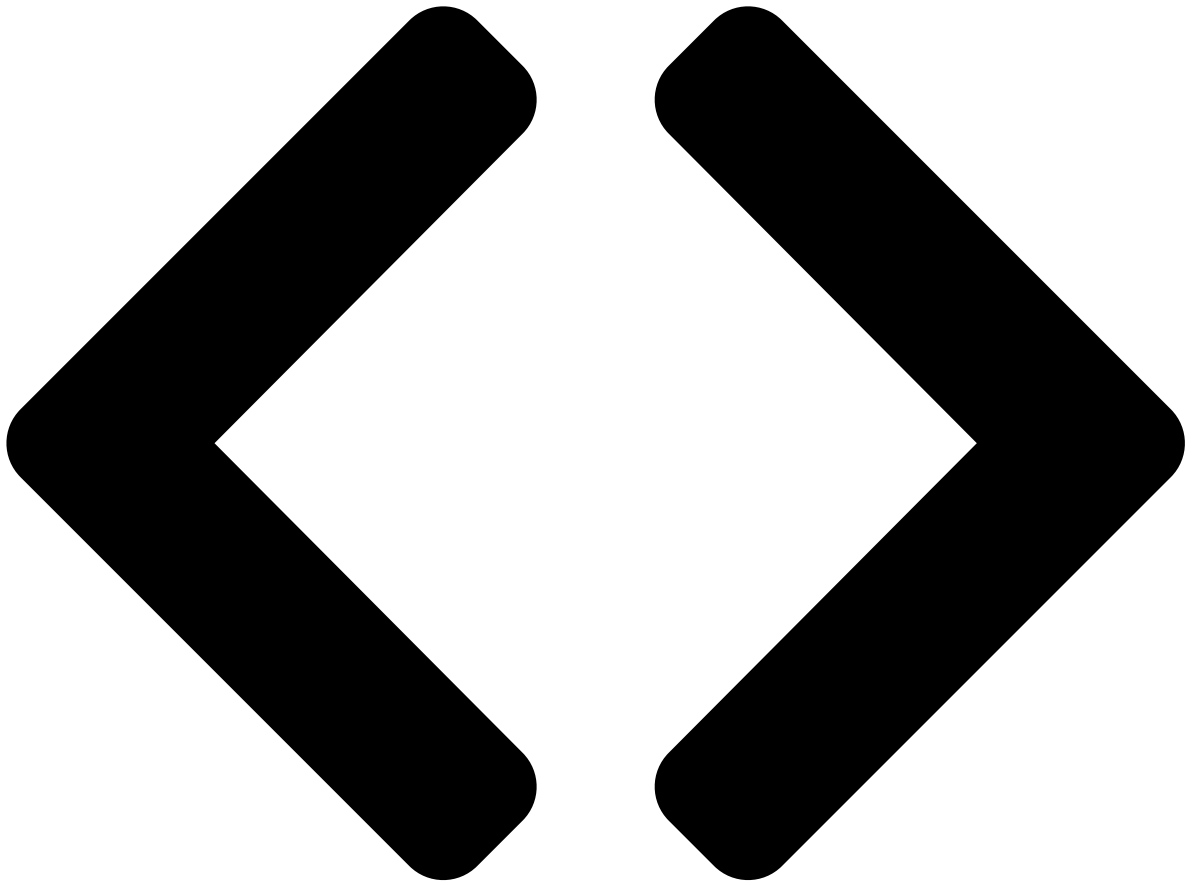

Enlarged version

Optional Connection

Option 1: Connect to digital amplifier/
receiver

Option 2: Connect to analogue stereo
system

Option 3: Connect to network

Option 1: Connect to the digital
amplifier/receiver

Route the sound from this player to other
device to enhance audio output.

DIGITAL AUDIO
INPUT
COAXIAL



1. Connect a coaxial cable from the COAXIAL jack on this product to the COAXIAL jack on the device.

Option 2: Connect to an analogue stereo system

1. Connect the audio cable from the analogue AUDIO OUT jacks on this product to the audio input jacks on the system.

Option 3: Connect to network

Connect this product to the network to enjoy BD-Live bonus content.

1. Connect the network cable from the LAN jack on the product to the LAN jack on the network system.



Inserting an SD Card

An SD card provides an additional memory to software upgrade and enjoy BD-Live bonus content. You can also enjoy playing back MP3/JPEG/MPEG4 files stored in the card.

1. Gently push the SD card, with its label side facing up, into the SD card slot until it clicks.

Notes:

- Insert only SD Card to the SD card slot on this product.

- When you enjoy BD-live bonus content, as your local storage, use a 1 GB or larger SD Card.

- TOSHIBA does not guarantee 100% compatibility with all SD Cards.

Connect Power

1. Connect the AC power cable to:
- the wall socket.

• The product is ready to be set up for use.

Notes:

- Before connecting the AC power cord, ensure you have completed all other connections.

ManualsLib.com

- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back of the unit.

- The type plate is located on the back of the unit.

□

[Table of Contents](#)

[Previous Page](#)

[Next Page](#)

1
...
6
7
8
9
10
11
12
13

Quick Links:

[Troubleshooting](#)

Related Manuals for Toshiba BDX1100KC

[Blu-ray Player Toshiba BDX1100KU Owner's Manual](#)

Bdx1100ku user's guide (46 pages)

[Blu-ray Player Toshiba BDX1100 Specifications](#)

Toshiba bdx1100: specifications (2 pages)

[Blu-ray Player Toshiba BDX1200KU Owner's Manual](#)

Bdx1200ku user's guide (46 pages)

[Blu-ray Player Toshiba BDX1250KB Owner's Manual](#)

Blu-ray player with usb connectivity (48 pages)

[Blu-ray Player Toshiba BDX1300KB Owner's Manual](#)

Bdx1300 blu-ray player (36 pages)

[Blu-ray Player Toshiba BDX1300KB Owner's Manual](#)

Blu-ray disc player (21 pages)

[Blu-ray Player Toshiba BDX1300 Owner's Manual](#)

(23 pages)

[Blu-ray Player Toshiba BDX1200 Quick Manual](#)

(2 pages)

[Blu-ray Player Toshiba BDX1200 Owner's Manual](#)

Owners manual (48 pages)

[Blu-ray Player Toshiba BDX3100KB How To Upgrade](#)

How to upgrade the f/w (3 pages)

[Blu-ray Player Toshiba BDX1200KE Owner's Manual](#)

(88 pages)

[Blu-ray Player Toshiba BDX2300KE Owner's Manual](#)

Blu-ray disc player (41 pages)

[Blu-ray Player Toshiba BDX1300KY Owner's Manual](#)

Blu-ray disc player (40 pages)

[Blu-ray Player Toshiba BDX1400KU User Manual](#)

Blu-ray disc/dvd player (37 pages)

[Blu-ray Player Toshiba BDX1250KE Owner's Manual](#)

Blu-ray disc player (73 pages)

[Blu-ray Player Toshiba BDX1250KE Service Manual](#)

(32 pages)

Related Content for Toshiba BDX1100KC

[BDX3100KY Optional.connection](#)

Toshiba BDX3100KY

[BDX3200KR Optional.connection](#)

Toshiba BDX3200KR

[BDX3200KY Optional.connection](#)

Toshiba BDX3200KY

[BDX2300KE Optional Connection](#)

Toshiba BDX2300KE

[BDX4300 Optional Connection](#)

Toshiba BDX4300

[BDX1200 Optional.connection](#)

Toshiba BDX1200

[BDX2100 Optional.connection](#)

Toshiba BDX2100

[BDX5300KB Optional Connection](#)

Toshiba BDX5300KB