



Toshiba 23PU200 series Owner's Manual

1	
2	
Table Of Contents	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	
16	
17	

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32

--

•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

--

Quick Links

[1 Tv Panel Controls](#)

[2 Tv Back Panel Connections](#)

[3 Connecting Hdmi or DVI Devices](#)

[4 Troubleshooting](#)

[5 Specifi Cations](#)

[Download this manual](#)



O
TOSHIBA
WNER'S **Leading Innovation >>>**

LED TV

23PU200 Series

32PU200 Series **TOSHIBA** 40PU200 Series

Leading Innovation

1000 Series

M

ANUAL

Owner's Record

You will find the model number and serial number on the back of the TV. Record these numbers in the spaces provided below. Refer to them whenever you call upon your TOSHIBA dealer regarding this product.

Model number:

Serial number:

TD/J

VX1A00253600

HDMITM
HIGH DEFINITION MULTIMEDIA INTERFACE

DOLBYTM
DIGITAL

DivXTM
HD

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba 23PU200 series

[LED TV Toshiba 19L4200U User Manual](#)

Integrated high definition led television (141 pages)

[LED TV Toshiba 19L4200UOM User Manual](#)

Integrated high definition led television (139 pages)

[LED TV Toshiba 26SL400U Specifications](#)

720p hd led tv (2 pages)

[LED TV Toshiba 23L1350U Resource Manual](#)

Integrated high definition led television (2 pages)

[LED TV Toshiba 39L2300U User Manual](#)

Integrated high definition led television (123 pages)

[LED TV TOSHIBA 50L2300U User Manual](#)

(123 pages)

[LED TV Toshiba 23L2300U Resource Manual](#)

Integrated high definition led television (2 pages)

[LED TV Toshiba 23PB200 Series Owner's Manual](#)

(29 pages)

[LED TV Toshiba 23L2300UC Resource Manual](#)

Integrated high definition led television (2 pages)

[LED TV Toshiba 23L1400UC User Manual](#)

Integrated high definition led television (110 pages)

[LED TV Toshiba 32L110U Quick Setup Manual](#)

28" 720p, 60hz, led tv; 32" 720p, 60hz, led tv (2 pages)

[LED TV Toshiba 24W144*DG Online Manual](#)

Led backlight lcd satellite tv (48 pages)

[LED TV Toshiba Digital 19EL93 Series Owner's Manual](#)

(41 pages)

[LED TV Toshiba 24L3965 Owner's Manual](#)

(25 pages)

[LED TV Toshiba 24L3965EA Owner's Manual](#)

(29 pages)

[LED TV Toshiba 24L2900 Owner's Manual](#)

(26 pages)

Summary of Contents for Toshiba 23PU200 series

Page 1 You will find the model number and serial number on the back of the TV. Record these numbers in the spaces 32PU200 Series provided below. Refer to them whenever you call upon your TOSHIBA dealer regarding this product. 40PU200 Series Model number: Serial number: ©2012 TOSHIBA CORPORATION...

Page 2: Pedestal Stand Assembling

Warning: Ensure the power cable is not pinched M6 mm when attaching the pedestal stand as this could cause an electric shock. 23PU200 Series models M5 × 2 × Warning: Ensure the power cable is not pinched when attaching the pedestal stand as this could cause an electric shock.

[Page 3: Table Of Contents](#)

Welcome to Toshiba Important Safety Instructions • Thank you for purchasing this Toshiba LED TV. This Be sure to observe the following instructions and manual will help you use the exciting features of precautions to ensure safe use of this TV.

[Page 4](#) and approved type and the fuse cover must be electric light or power circuits. refitted. If the aerial falls down or drops, it may cause an injury or an electric shock. About the use

- Make sure to insert the plugs firmly, when plugging the AC power cord into the TV set 1)

Never place hot objects or open flame sources, end and wall outlet end.

[Page 5](#) When cleaning the surface of the LCD display, owner's manual. wipe the panel surface gently with a soft, dry • Toshiba is not liable for any damage caused by cloth. misuse or malfunction through simultaneous use 2) Periodically disconnect the power plug from of this product and the connected equipment.

[Page 6: Connecting An Aerial](#)

Your Toshiba dealer or service personnel can best advise you on which aerial to use in your area. Effective range Before connecting the aerial cable, turn off all main power switches.

[Page 7: Learning About The Remote Control](#)

p / o (programme position or input source) 11 Stereo/Bilingual selection — This button switches to the programme 12 Number buttons (0-9) position or the input source selection. 13 To display the Channel List 14 To return to the previous programme Learning about the remote control 15 To display on-screen information Initial/Index function for Teletext...

[Page 8](#) • o HDMI 1 (input terminal) — High-Definition Connecting an audio system Multimedia Interface input receives digital audio You can enjoy high quality dynamic sound by and uncompressed digital video from an HDMI connecting the TV to an audio system. device.



[Page 9: Connecting Hdmi Or Dvi Devices](#)

- HDMI: High-Definition Multimedia Interface Connecting an amplifier equipped with a digital audio
- HDCP: High-bandwidth Digital Content Protection (optical) input
- CEA-861-D compliance covers the transmission of uncompressed digital video with high-bandwidth digital content protection, which is being Amplifier equipped with standardized for reception of high-definition digital audio input...



[Page 10: Turning The Tv On](#)

to be away from your TV, unplug the power cord to Signal names for mini D-sub 15 pin connector prevent the TV from turning on in your absence. Pin assignment for RGB/PC terminal Tuning the TV for the first time Before switching on the TV, put your decoder and media recorder to standby, if they are connected, Pin No.



[Page 11: Using The Quick Menu](#)

Press the  or  to turn the Signal Booster Tuning or if you would like to preset channels to specific position numbers one by one. On or Off . H. Label Manual Tuning Station labels appear under the programme Pos.

[Page 12: Learning About The Menu System](#)

Learning about the menu system Watching TV programmes We suggest you familiarize yourself with the display Selecting the menu language charts before using the menu system: • Press MENU to display menu, then press  or  Choose from 10 different languages (English, to select main menu headings.

[Page 13: Selecting The Video Input Source To View](#)

Sorting positions Selecting the PC/HDMI 2 Audio mode Ex.: To swap channel ABCD (Prog.1) for channel You can select PC audio or HDMI audio when using MNOP (Prog.4): this function. From the SETUP menu, press  or  to select •...

[Page 14](#) Super Live Using the picture still This setting will enlarge a 4:3 image to fit the screen • Press to freeze the picture. by stretching the image horizontally and vertically, Even if an image is frozen on the TV screen, the holding better proportions at the centre of the pictures

are running on the input source.

[Page 15: Sound Adjustment](#)

to reproduce a smooth motion and picture quality, Sound adjustment select the On mode. Effective signal and setup conditions: Setting the MTS (Multi-channel TV Sound) • When the Video input mode is selected. Auto mode • When the input signal format is 480i, 576i or 1080i signals.

[Page 16: Other Features Settings](#)

Selecting the monaural programmes Other features settings If sound distortion, interruptions or silence arises in the low sound volume level, setting the e Mono 2 Selecting the TIMER menu mode will mitigate the problem. The Timer is especially useful if you want the TV to When a monaural programme is received, e Mono turn itself on or off after a selected period of time.

[Page 17: Teletext](#)

Teletext general information For further information on your particular text system(s), see the broadcast teletext index page or button consult your local Toshiba dealer. Pressing once will bring up the teletext screen. Press again to superimpose the teletext over a normal broadcast picture. Press again to return to normal TV mode.

[Page 18: Using The Pc Settings](#)

Using List mode To enlarge the teletext display size: Press once to enlarge the top half of the page, Press to access teletext. press again to enlarge the bottom half of the page. Press again to revert to the normal size. TEXT M00 14:58:55 To select a page while viewing a normal picture:...

[Page 19: Using The Media Player](#)

You must obtain any required permission from copyright owners to download or use Press QUICK to open the Quick Menu. copyrighted content. TOSHIBA cannot and does Press ☐ or ☐ to select Device Information. not grant such permission. To close the Media Player: Press EXIT.

[Page 20](#) Note: Viewing photo files Pressing ☐ or ☐ while in the Slide Show mode will There are three types of viewing modes. stop the slideshow and rotate the photo. Multi View To set Slide Show Effect setting: This view allows you to search for photos in a grid Press QUICK to open the Quick Menu.

[Page 21](#) Notes: Viewing movie files • The information may not be correctly displayed You can select movies from a Multi View of depending on the contents. available files. • During playback, you can adjust the PICTURE and SOUND menu functions from the Quick Menu. Multi View •...

[Page 22](#) ® To register your TV to a DivX account: To playback DivX Plus HD content: This TV allows you to play back files purchased or • To play in fast reverse or fast forward directions, press CC or cc during playback. Each time you ®...

[Page 23](#) Playing music files To set the repeat mode: You can listen to music from a Multi View of Press QUICK to open the Quick Menu. available files. Press ☐ or ☐ to select Repeat. Multi View Press ☐ or ☐ to select Off , All or 1. Music //MP3 Mode...

[Page 24: Media Player Supported Formats](#)

Media Player Supported Formats Media Media File Video/Audio codec Note Player Format Extension JPEG .jpg JPEG Data compatibility: JPEG Exif ver 2.1 .jpeg Maximum viewable resolution: • JPEG 65536 × 65536 (Base-line only) • PNG 65536 × 65536 .png • BMP Photo 65536 ×...

[Page 25](#) Media Media File Video/Audio codec Note Player Format Extension MPEG-2 .vob Video) MPEG-1 Video MPEG-2 Video Audio) MPEG-1/2 Layer2 MPEG-1/2 Layer3 Dolby Digital (AC-3) L-PCM .mov Video) H.264 (MPEG-4 AVC) MPEG-4 part2 DivX Plus HD MJPEG Audio) MPEG-1/2 Layer3 Dolby Digital (AC-3) L-PCM ADPCM MPEG-2/4 LC AAC...

[Page 26](#) Media Media File Video/Audio codec Note Player Format Extension .mkv Video) MPEG-1 Video .xdiv MPEG-2 Video MPEG-4 part2 H.264 (MPEG-4 AVC) DivX Plus HD Xvid Audio) MPEG-1/2 Layer2 MPEG-1/2 Layer3 Dolby Digital (AC-3) L-PCM ADPCM MPEG-2/4 LC AAC MPEG-4

HE-AAC WMA7/8/9 Std RealMedia .rm Video) RealVideo 8, 9, 10...

[Page 27](#) Media Media File Video/Audio codec Note Player Format Extension .mp3 MPEG-1/2 Layer3 Maximum number of files: 4096 per folder .mp4 MPEG-2/4 LC AAC .m4a MPEG-2 HE-AAC MPEG-4 HE-AAC .wma WMA7/8/9/ Std RealAudio .ra Dolby Digital (AC-3) MPEG-2/4 LC AAC .rmvb MPEG-4 HE-AAC RA-COOK...

[Page 28: Troubleshooting](#)

Troubleshooting Some pixels of the screen do not light up • The LCD display panel is manufactured Before calling a service technician, please check the using an extremely high level of precision following table for a possible cause of the symptom technology, however, sometimes some pixels and some solutions.

[Page 29: Broadcast System](#)

Broadcast system Specifications LED TV Broadcast transmission systems of each country or region Model 23PU200 Series, Asia M.E. 32PU200 Series, 40PU200 Series Country or region Colour Sound Power source Bahrain, Kuwait, Israel, Oman, 110-240 V AC, 50/60 Hz Qatar, Power consumption United Arab Emirates, Yemen, 23"...

[Page 30](#) For more detailed information about o (2) Input recycling of this product, Phono jacks please visit our website([http://www. O DIGITAL AUDIO Output toshiba-india.com](http://www.O DIGITAL AUDIO Output toshiba-india.com)) or contact call (optical) Bitstream / PCM center (1800-200-8674). O AUDIO Output Audio L / Mono, R (FIXED)

[Page 31](#) • THIS PRODUCT IS LICENSED UNDER THE MPEG- Trademark Information 4 VISUAL PATENT PORTFOLIO LICENSE FOR • HDMI, the HDMI logo, and High-Definition THE PERSONAL AND NON COMMERCIAL USE Multimedia Interface are trademarks or registered OF A CONSUMER FOR (i) ENCODING VIDEO trademarks of HDMI Licensing LLC in the United IN COMPLIANCE WITH THE MPEG-4 VISUAL States and other countries.

This manual is also suitable for:

32pu200 series40pu200 series