



# TOSHIBA

## Toshiba WAL13CS Operation Manual

Wall mounting for lcd color tv



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13

--

•

Bookmarks

--

[Download this manual](#)

### Quick Links





# Operation Manual

For LCD Color TV

Toshiba **TOSHIBA** Wall Mounting

Model

## WAL13CS

VX1A00189900

---



## [Table of Contents](#)

[Next Page](#)

1  
2  
3  
4  
5

# Related Manuals for Toshiba WAL13CS

## [TV Mount Toshiba WAL7C User Manual](#)

Wall mounting for lcd color tv (2 pages)

## [TV Mount Toshiba WAL14C Operation Manual](#)

For lcd color tv toshiba wall mounting (18 pages)

## Summary of Contents for Toshiba WAL13CS

[Page 1](#) Operation Manual For LCD Color TV Toshiba Wall Mounting Model WAL13CS  
VX1A00189900...

[Page 2](#) For correct use, please read this manual carefully. This wall mounting is designed exclusively for a Toshiba LCD color TV. Before use of this wall mounting, please confirm the model of the LCD color TV applicable or not (see page 13).

### [Page 3: Notice For Safety](#)

Direction Exemptions • Toshiba is not liable for any damage caused by natural disaster (such as fire, earthquake), by the act of the third person, accidents, owner's intentional acts, negligence, misuse, or uses in other improper conditions. • Toshiba is not liable for incidental damages (such as profit loss or interruption in business, loss of TV subscribing fee etc.) caused by use or being unable to use of the product.

[Page 4](#) Notice for Safety continued Notice for LCD color TV users Warning Please ask qualified installers to install or move the equipment to or from the wall. Direction The application defect could result in injury. If the equipment has to be dismantled for scrapping, etc. please also ask qualified installers to do it.

[Page 5](#) If the check, adjustment or repair inside the TV is required, please contact the dealer. Do not install in vibrant places Vibration may lead to TV moving or toppling, resulting in injury. Prohibition It is designed exclusively for a Toshiba LCD TV. Do not use it elsewhere. Otherwise may cause injury. Prohibition...

[Page 6](#) Notice for Safety continued Warning Tighten all screws properly at the TV bracket. If the installation is improper, the TV may fall, resulting in death, injury, TV or floor damage etc. Use of other screws may cause installation defect. Direction Please choose proper wall mounting screws and fixing bolts in accordance with the installation places.

### [Page 7: Preparation Before Installation](#)

Preparation before installation-1. (LCD TV with stand type) • LCD TV must be kept in vertical position when remove the stand. Caution • Please read this LCD TV operation manual. • Before operation, please make sure all the parts in parts list are included on page 12. •...

### [Page 8: Assembling And Installation](#)

Assembling and Installation (The operation must be done by qualified installers) • Before the operation, make sure all components and parts listed in the addendum are included. Attach the TV Fix bracket to LCD TV with supplied screws. 1. To prevent damage of the screen, put a blanket or alike on a flat place in advance. Then place the LCD color TV with the screen side facing down.

[Page 9](#) Assembling and Installation Continued Install the wall-mounting metal fixture on the wall. Put the "UP" sign of the wall mounting upwards. Secure the bracket with market available mounting bolts or screws, make sure that it can bear sufficient weight. Fix mounting bolts and screws firmly at a consolidated place. (Choose proper mounting bolts or screws in accordance

with the wall structure and material).

[Page 10](#) Assembling and Installation Continued The operation must be done by two persons or more. Attach the LCD color TV on the wall brackets assembly. Hang the upper protruding portions of the TV fix brackets on the notches on the upper side of the wall brackets.

[Page 11](#) Change and extension of connections If the extension and change of the connection is required after the installation, please consult the dealer or ask the qualified installers to do it. Before extending and changing the connections, remove the TV from the wall mounting first. The operations must be done by more than two persons.

[Page 12](#) Applicable picture size 24" ~ 55" LCD color TV Model WAL13CS This wall mounting is applicable for Toshiba LCD color TV. Disassemble the stand When this product is used on LCD color TV, first remove the stand attached to the TV body by the following steps, then assemble in accordance with the operation manual.

### [Page 13: Specification](#)

(TV fix bracket pitch 400 type) Lcd TV Specification MODEL : WAL13CS Dimension : (W) 160mm, (H) 345mm, (D) 58mm (Pitch 100 Type) (W) 260mm, (H) 345mm, (D) 58mm (Pitch 200 Type) (W) 460mm, (H) 345mm, (D) 58mm (Pitch 400 Type) Mass : 1.3kg...