

Status - Status Tab - Asus WL-100G User Manual

Wireless local area network card for 802.11g and 802.11b wireless networks

1

2

3

Table Of Contents

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74



•

-

Troubleshooting

•

Bookmarks



Status - Status Tab

You can view the information about the ASUS WLAN Card from the general menu. These fields are blank if the ASUS WLAN Card does not exist.

Scanning

Radio Disabled

Chapter 3 - Reference

You can turn OFF the ASUS WLAN Card by clicking the "Disable Radio" button.

ASUS WLAN Card

Connected

ASUS WLAN Card Settings



ASUS WLAN Card Settings

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
24
25
26
27
28
29
30
31

Troubleshooting

[Troubleshooting Utility](#) 54

[Troubleshooting](#) 60

Related Manuals for Asus WL-100G

[PCI Card Asus SpaceLink WL-100g User Manual](#)

Wlan pc card (68 pages)

[Network Card Asus WL-106gM User Manual](#)

Wireless local area network card for 240 mimo wireless network (39 pages)

[Network Card Asus WL-107g User Manual](#)

Wireless local area network card for 802.11g & 802.11b wireless networks (76 pages)

[Network Card Asus WL-100W User Manual](#)

Wireless local area network card for superspeed n wireless network (38 pages)

[Network Card Asus WL-100GE User Manual](#)

Wireless local area network card for 802.11g & 802.11b wireless networks (58 pages)

[Network Card Asus WL-103b User Manual](#)

Wireless local area network card (for 802.11b wireless networks) (72 pages)

[Network Card Asus WL-103b Quick Start Manual](#)

Wireless local area network card for 802.11b wireless network (62 pages)

[Network Card Asus WL-107 User Manual](#)

Wireless local area for 802.11b wireless networks (72 pages)

[Network Card Asus WL-107 Quick Start Manual](#)

Wireless local area network card (6 pages)

[Network Card Asus WL-103g User Manual](#)

Wireless local area card for 802.11g and 802.11b wireless networks (74 pages)

[Network Card Asus WL-160N User Manual](#)

Wireless local area network adapter for 802.11n draft, 802.11g & 802.11b networks (39 pages)

[Network Card Asus WL-130N Quick Start Manual](#)

Wireless local area network adapter (178 pages)

[Network Card Asus WL-138g User Manual](#)

Wireless local area network card (for 802.11g and 802.11b wireless networks) (72 pages)

[Network Card Asus WL-169GE User Manual](#)

Wireless local area network card for 802.11g & 802.11b wireless networks (40 pages)

[Network Card Asus WL-167g deluxe User Manual](#)

Wireless local area network adapter for 802.11g & 802.11b wireless networks (44 pages)

[Network Card Asus WL-120g V2A User Manual](#)

Wireless local area for 802.11g and 802.11b wireless networks (71 pages)

Related Content for Asus WL-100G

[WL-127 Status - Status Tab](#)

Asus WL-127

[WL-100GE Status - Status Tab](#)

Asus WL-100GE

[E1337 Status - Status Tab](#)

Asus E1337

[WL-107g Status - Status Tab](#)

Asus WL-107g

[WL-167g deluxe Status Tab](#)

Asus WL-167g deluxe

[WL-103g Status - Connection Tab](#)

Asus WL-103g

[WL-120g V2A Status - Connection Tab](#)

Asus WL-120g V2A

[WL-107 Status - Connection Tab](#)

Asus WL-107