



# Advanced Options - Asus WL-100G User Manual

Wireless local area network card for 802.11g and 802.11b wireless networks



1

2

3

Table Of Contents

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

68  
69  
70  
71  
72  
73  
74



•

Table of Contents

- 

Troubleshooting

•

## Bookmarks







## Chapter 3 - Reference

### Dialing settings

Specify how the call will be dialed. This is useful if you want to change the call to a calling card, use your computer from different locations, or add a dial prefix, country code, or area code automatically.

---

### Dialup Networking settings

Dialup Networking settings include four tabs: Device, Phone Number, Server Type, and TCP/IP.

#### Device

Choose the modem you want to use by Dial-Up Networking to connect to another computer for this connection.

## Phone Number

Specify area code, telephone number, and country code for this connection. Clear the Use area code and Dialing Properties checkbox, if you want to ignore area code and dialing settings.

---

## Server Type

Type of Dial-Up Server - Select the server type for this connection.

## Advanced options

Select Log on to network checkbox to specify that Dial-Up Networking will attempt to log on to the network you are connecting to, using the user name and password you typed when you logged on to Windows.

Select Enable software compression checkbox to specify whether incoming or outgoing information is compressed before it is sent. This is useful to speed up the transfer of information. Compression occurs only if both computers are using compatible compression.

ASUS WLAN Card

51

[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1  
...  
48  
49  
50  
**51**  
52  
53  
54  
55

# Troubleshooting

[Troubleshooting Utility](#) 54

[Troubleshooting](#) 60

## Related Manuals for Asus WL-100G

[PCI Card Asus SpaceLink WL-100g User Manual](#)

Wlan pc card (68 pages)

[Network Card Asus WL-106gM User Manual](#)

Wireless local area network card for 240 mimo wireless network (39 pages)

[Network Card Asus WL-107g User Manual](#)

Wireless local area network card for 802.11g & 802.11b wireless networks (76 pages)

[Network Card Asus WL-100W User Manual](#)

Wireless local area network card for superspeed n wireless network (38 pages)

[Network Card Asus WL-100GE User Manual](#)

Wireless local area network card for 802.11g & 802.11b wireless networks (58 pages)

[Network Card Asus WL-103b User Manual](#)

Wireless local area network card (for 802.11b wireless networks) (72 pages)

[Network Card Asus WL-103b Quick Start Manual](#)

Wireless local area network card for 802.11b wireless network (62 pages)

[Network Card Asus WL-107 User Manual](#)

Wireless local area for 802.11b wireless networks (72 pages)

[Network Card Asus WL-107 Quick Start Manual](#)

Wireless local area network card (6 pages)

[Network Card Asus WL-103g User Manual](#)

Wireless local area card for 802.11g and 802.11b wireless networks (74 pages)

[Network Card Asus WL-160N User Manual](#)

Wireless local area network adapter for 802.11n draft, 802.11g & 802.11b networks (39 pages)

[Network Card Asus WL-130N Quick Start Manual](#)

Wireless local area network adapter (178 pages)

[Network Card Asus WL-138g User Manual](#)

Wireless local area network card (for 802.11g and 802.11b wireless networks) (72 pages)

[Network Card Asus WL-169GE User Manual](#)

Wireless local area network card for 802.11g & 802.11b wireless networks (40 pages)

[Network Card Asus WL-167g deluxe User Manual](#)

Wireless local area network adapter for 802.11g & 802.11b wireless networks (44 pages)

[Network Card Asus WL-120g V2A User Manual](#)

Wireless local area for 802.11g and 802.11b wireless networks (71 pages)

## Related Content for Asus WL-100G

[WL-138GV2 Windows Xp Wireless Options](#)

Asus WL-138GV2

[WL-127 Config - Advanced](#)

Asus WL-127

[WL-160W Windows Xp Wireless Options](#)

Asus WL-160W

[WL-100GE Status - Advanced](#)

Asus WL-100GE

[E1337 Config - Advanced](#)

Asus E1337

[WL-167g deluxe Other Right-Click Options](#)

Asus WL-167g deluxe

[WiFi-b Other Support Cd Options](#)

Asus WiFi-b

[WL-169GE Config - Advanced](#)

Asus WL-169GE