

Errors - Toshiba 4679 User Manual

Gcs dot printer

1

2

3

Table Of Contents

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58


--

•

[Table of Contents](#)

•

Bookmarks

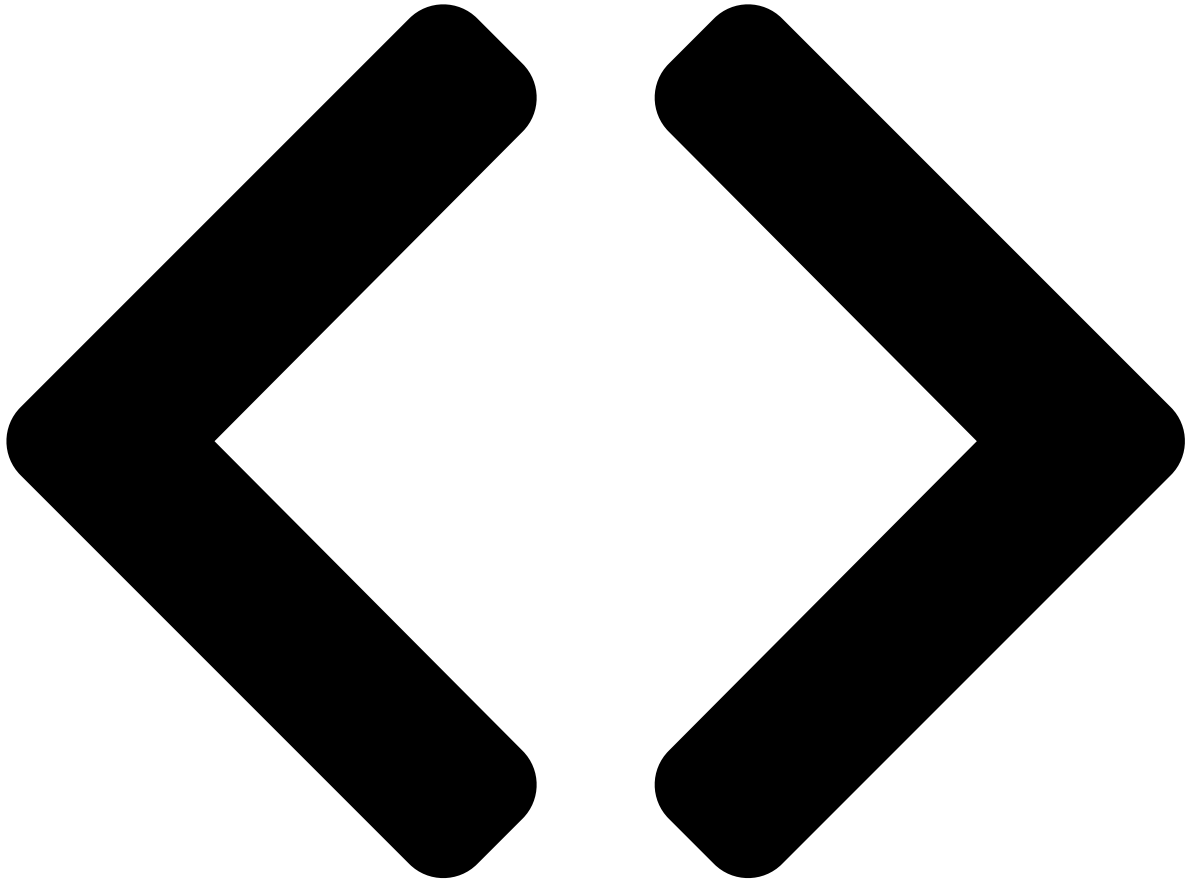

6-3. Errors

1) Recoverable error

Error Description			
Paper end error			
Printer cover open error			
Front cover open error			
Paper near end			

error

Head high temperature detection

Board high temperature detection

Cutter error (on models with cutter)

Mechanical error (other than cutter error)

Black mark detection error

Link disconnection detection

*1 Automatically recovered by loading a new paper roll, then closing the printer cover.

*2 Automatically recovered by closing the printer cover.

*3 Automatically recovered by closing the front cover.

*4 Automatically recovered by loading a new paper roll, then closing the printer cover.

*5 Automatically the printer is recovered after the print head has cooled.

A print head temperature error is not abnormal.

*6 Automatically the printer is recovered after the board has cooled.

POWER lamp

On

On

Flashes (On: 0.5 sec./Off: 0.5 sec.)

On

Flashes (On: 1 sec./Off: 1 sec.)

Flashes (On: 2 sec./Off: 2 sec.)

On

On

On

Flashes at 2-second intervals

ERROR lamp

Flashes (On: 1 sec./
Off: 1 sec.)

On

On

Flashes (On: 2
sec./Off: 2 sec.)

Off

Off

Flashes (On: 0.125
sec./Off: 0.125
sec.)

Flashes (On: 0.25
sec./Off: 0.25 sec.)

Flashes (On: 0.5
sec./Off: 0.5 sec.)

Flashes at 2-second intervals

- 22 -

Buzzer

4 short beeps (0.13
sec.) repeated

twice

Beep

Beep

None

None

None

3 short beeps (0.13
sec. + 0.13 sec. +
0.5 sec.)

2 short beeps (0.13
sec. + 0.5 sec.)

3 short beeps (0.13
sec. + 0.13 sec. +

0.13 sec.)

—

Recovery

Conditions

*1

*2

*3

*4

*5

*6

*7

*8

*9

*10

Table of Contents

[Previous Page](#)
[Next Page](#)

1
...
24
25
26
27
28
29
30
31

Related Manuals for Toshiba 4679

[Printer Toshiba e-studio 3511 Network Administrator's Manual](#)

Multifunctional digital systems (222 pages)

[Printer Toshiba TEC B 452 User Functions Manual](#)

Multifunctional digital systems (184 pages)

[Printer Toshiba e-studio 452 Printing Manual](#)

Multifunctional digital system (398 pages)

[Printer Toshiba SureMark 4610 User Manual](#)

Point-of-sale fiscal printer (60 pages)

[Printer Toshiba 4610 SureMark User Manual](#)

Three-station printer (82 pages)

[Printer Toshiba SureMark 4610 Service Manual](#)

Hardware service guide - model 1nf (118 pages)

[Printer Toshiba SureMark 4610-SJ6 User Manual](#)

Fiscal printer (52 pages)

[Printer Toshiba E-studio 207L Operation Manual](#)

(172 pages)

[Printer Toshiba SureMark 4610 1NR Hardware Manual](#)

(64 pages)

[Printer Toshiba E-STUDIO2323AM Topaccess Manual](#)

Multifunctional digital systems (84 pages)

[Printer Toshiba B-FV4T-GS12-QM-R Owner's Manual](#)

B-fv4t series (63 pages)

[Printer Toshiba E-STUDIO2010AC Operator's Manual](#)

Multifunctional digital color systems (32 pages)

[Printer Toshiba B-FP3D SERIES Owner's Manual](#)

(39 pages)

[Printer Toshiba B-FP3D-GH30-QM-R Owner's Manual](#)

(21 pages)

[Printer Toshiba B-SA4TP SERIES Owner's Manual](#)

Toshiba thermal printer owner's manual (114 pages)

[Printer Toshiba e-STUDIO 282 Sales Manual](#)

Toshiba printer sales guide (48 pages)

Related Content for Toshiba 4679

[e-STUDIO500P Service Errors \(9Xx.xx's\)](#)

Toshiba e-STUDIO500P

This manual is also suitable for:

[Sp712 series](#)[Sp742 series](#)