

 


Asus DRW-0804P-D User Manual

External dvd±r/rw drive dual format

1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26



•

•

Bookmarks

[Download this manual](#)

Quick Links



DRW-0804P-D

External DVD R/RW Drive

Dual Format

User Guide



Table of Contents

[Next Page](#)

1
2
3
4
5

Related Manuals for Asus DRW-0804P-D

[DVD Drive Asus E976 User Manual](#)

Asus dvd-rom drive atapi / enhanced ide interface user's manual (31 pages)

[DVD Drive Asus DRW-0804P User Manual](#)

Dvd±r/rw drive dual format (46 pages)

[DVD Drive Asus DVD-E616P1 User Manual](#)

Dvd-rom drive (36 pages)

[DVD Drive Asus DVD-R/RW Drive DVR-104 User Manual](#)

Asus dvr-104 dvd-r/rw drive user's manual (24 pages)

[DVD Drive Asus DVD-E616P2 User Manual](#)

Dvd-rom drive (34 pages)

[DVD Drive Asus DRW-24B3ST Quick Manual](#)

(3 pages)

[DVD Drive Asus DRW-0402P/D User Manual](#)

Dvd±r/rw drive dual format (24 pages)

[DVD Drive Asus DRW-1604P User Manual](#)

Dvd+-r/rw drive supports dual format and double layer (24 pages)

[DVD Drive Asus SDRW-08D2S-U Quick Installation Manual](#)

External slim optical drive (28 pages)

[DVD Drive Asus SDRW-08U9M-U Quick Installation Manual](#)

External slim dvd-writer (36 pages)

[DVD Drive Asus SCB-2424A-U User Manual](#)

External slim combo drive 24x/24x/24x cd-rw drive 8x dvd-rom drive (28 pages)

[DVD Drive Asus BW-12D1S-U Quick Installation Manual](#)

External h/h optical drive (24 pages)

[DVD Drive Asus ZenDrive V1M Quick Installation Manual](#)

(20 pages)

[DVD Drive Asus ESEDRW-08-H User Manual](#)

User manual (2 pages)

[DVD Drive Asus SDRW-08D6S-U Quick Installation Manual](#)

External slim optical drive (23 pages)

Summary of Contents for Asus DRW-0804P-D

[Page 1](#) DRW-0804P-D External DVD R/RW Drive Dual Format User Guide...

[Page 2](#) Product warranty or service will not be extended if: (1) the product is repaired, modified or altered, unless such repair, modification or alteration is authorized in writing by ASUS; or (2) the serial number of the product is defaced or missing.

[Page 3: Table Of Contents](#)

Using the emergency eject pinhole24 Using compact discs25 Cleaning a disc25 Handling a disc25 Technical information26 Environmental specifications26 Electrical specifications26 ASUS DRW-0804P-D external DVD R/RW drive...

[Page 4: Notices](#)

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications. This class B digital apparatus complies with Canadian ICES-003. ASUS DRW-0804P-D external DVD R/RW drive...

[Page 5: Asus Contact Information](#)

+49-2102-959911 Online contact www.asuscom.de/sales Technical Support Telephone
+49-2102-95990 +49-2102-959911 Online support www.asuscom.de/support Web site
www.asuscom.de/news ASUS COMPUTER (Middle East and North Africa) Address P.O. Box
64133, Dubai, U.A.E. Telephone +9714-283-1774 +9714-283-1775 Web site
www.ASUSarabia.com ASUS DRW-0804P-D external DVD R/RW drive...

[Page 6: Safety Information](#)

Do not attempt to disassemble or repair the drive. Opening the drive can result to exposure to laser radiation. ASUS DRW-0804P-D external DVD R/RW drive...

[Page 7: Conventions Used In This Guide](#)

CAUTION: Information to prevent damage to the components when trying to complete a task.
IMPORTANT: Instructions that you MUST follow to complete a task. NOTE: Tips and additional information to help you complete a task. ASUS DRW-0804P-D external DVD R/RW drive...

[Page 8: Package Contents](#)

Package contents Upon opening your ASUS DRW-0804P-D external drive package, check if all the following items are present and in good condition. If any of the items is damaged or missing, contact your retailer immediately. • ASUS DRW-0804P-D external drive • ...

[Page 9: Welcome](#)

Welcome! Thank you for buying the ASUS DRW-0804P-D Drive! Read the instructions and important information in this manual for proper use and installation of this device. Product introduction Specifications The DRW-0804P-D has the following specifications: Write Speeds 8X/6X/4X/2.4X on DVD+R 4x/2.4X on DVD+RW...

[Page 10: Features](#)

Features The ASUS DRW-0804P-D is an external DVD R/RW drive that supports both 8X DVD-Write and 8X DVD+Write. The drive also enables 4X DVD- ReWrite, 4X DVD+ReWrite, 12X DVD-ROM, 24X CD-Write, 24X CD- ReWrite and 40X CD-ROM. The drive complies with the Universal Serial Bus 2.0 (USB 2.0) and IEEE 1394 specifications and comes equipped with...

[Page 11](#) FlextraLink™ technology The ASUS FlextraLink™ technology provides a seamless combination of flexibility and ultra-reliable recording quality. FlextraLink™ incorporates a flexible strategy that prevents buffer underrun problems caused by an empty data buffer. This optical drive technology allows continuous monitoring of the data buffer status during the write process.

[Page 12](#) Double Dynamic Suspension System (DDSS II) The DDSS II is an enhanced follow-up to the DDSS anti-vibration system developed by ASUS. The DDSS technology is designed to reduce the vibration generated from spindle rotation of over 8900 rpm of 40X optical drives.

[Page 13](#) CAV method allows faster recording speed because the rotation speed does not have to change when the head writes data to different areas of the disc. Speed Time CAV Recording Method ASUS DRW-0804P-D external DVD R/RW drive...

[Page 14: Front Panel](#)

Button. Place a CD or DVD on the tray with the label side up. Press the Eject Button or push the front part of the tray to load the disc. 4. Eject button Press this button to eject the tray and load or remove a disc. ASUS DRW-0804P-D external DVD R/RW drive...

[Page 15: Rear Panel](#)

7. Power switch Turns the power supply ON or OFF. Switching to “|” icon means ON and

switching to "O" side means OFF. 8. Power connector This connector is for the power adapter cable. ASUS DRW-0804P-D external DVD R/RW drive...

[Page 16: Installation](#)

4. For perfect fit and balance, 5. Make sure that the drive is make sure that the triangle on securely in place. the drive aligns with the line on the stand. ASUS DRW-0804P-D external DVD R/RW drive...

[Page 17: Connecting The Drive Cables](#)

USB A series plug IEEE 1394 Power outlet cable USB B series plug Power adapter Power adapter cable AC power cable Power plug types may vary in different countries or regions around the world. ASUS DRW-0804P-D external DVD R/RW drive...

[Page 18: Installing The Device Driver](#)

Click Next. ® 6. Windows 98SE/ME automatically searches the best driver for the device. Select the (Recommended) option. Click Next. 7. Specify the location of the driver .INF file then click Browse. ASUS DRW-0804P-D external DVD R/RW drive...

[Page 19](#) 9. The specific location of the drive appears on the combo list box. Click Next. 10. After searching, the location of the driver appears. Click Next. 11. Click Finish to start using your external drive! ASUS DRW-0804P-D external DVD R/RW drive...

[Page 20: Checking The Drive In The System Properties](#)

3. Click the Device Manager tab on the system properties dialog box. 4. Click the name of the optical drive from the list to display the device that you installed. Screen display might vary depending on the operating system (OS) version. ASUS DRW-0804P-D external DVD R/RW drive...

[Page 21: Unplugging The Device Properly](#)

Left-click the icon. 2. Click the name of the hardware device to unplug. 3. Click Safely Remove to stop the device. 4. You can now safely unplug the device from the system. Click OK. ASUS DRW-0804P-D external DVD R/RW drive...

[Page 22: External Optical Drive Basics](#)

1. Press the eject button on the front of the drive to eject the tray. VERTICAL HORIZONTAL 2. When the drive tray ejects out of the drive, place the disc on the tray with the label side facing up. HORIZONTAL VERTICAL ASUS DRW-0804P-D external DVD R/RW drive...

[Page 23: Ejecting A Disc From The Drive](#)

1. Press the eject button on the front of the drive to eject the tray. 2. Carefully remove the disc from the tray. 3. Press the drive eject button or lightly push the center of the drive tray to load the tray back into the drive. ASUS DRW-0804P-D external DVD R/RW drive...

[Page 24: Using The Emergency Eject Pinhole](#)

HORIZONTAL 2. Carefully pull the tray out and remove the disc. VERTICAL HORIZONTAL Do not force the tray open; wait until the eject pin has dislodged the tray to avoid breaking the tray panel. ASUS DRW-0804P-D external DVD R/RW drive...

[Page 25: Using Compact Discs](#)

Spray the disc with compressed air for about five seconds to get rid of the dust on a disc. Handling a disc Hold a disc by the edges. Do not touch the disc surface. ASUS DRW-0804P-D external DVD R/RW drive...

[Page 26: Technical Information](#)

* ODC - Operating Duty Cycle Electrical specifications Power source Input linear voltage 100/240 V AC Input linear frequency 50/60 Hz Input linear current 1.2 A I/O terminal USB terminal USB B type (high speed) IEEE 1394 ASUS DRW-0804P-D external DVD R/RW drive...

