 


Crisp; Jet Start - Whirlpool AMW 732 Installation, Quick Start

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
Table Of Contents
29



•

-

Troubleshooting

•

Bookmarks





P
S

START BUTTON TO AUTOMATICALLY START
PRESS THE

and the cooking time set to 30 seconds. Each additional press increases the time with 30 seconds.


Y

YOU MAY ALSO ALTER THE TIME BY PRESSING THE
increase the time after the function has started.



M
P

MANUAL BUTTON

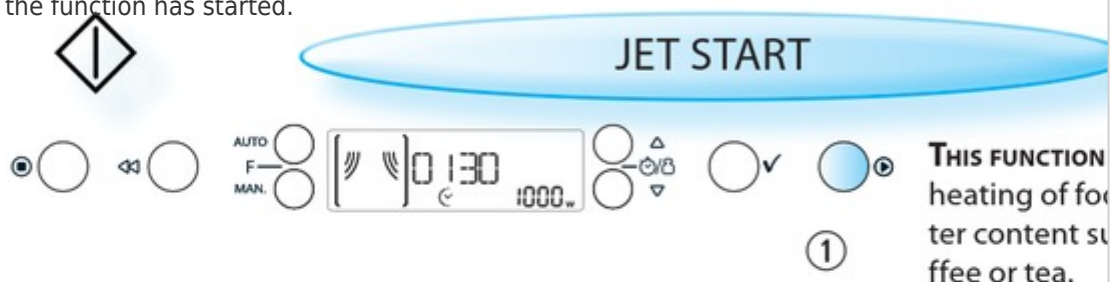

THIS FUNCTION
heating of fo
ter content su
ffee or tea.

PRESS THE



P

+/-

PRESS THE
BUTTONS



P

S

PRESS THE
START BUTTON

T

THE OVEN AUTOMATICALLY

Crisp-plate. This way the Crisp-plate will rapidly reach its working temperature and begin to brown and crisp the food.

E

ENSURE that the Crisp-plate is correctly placed in the middle of the Glass

TURN

turntable.

T

THE OVEN AND THE CRISP

D

DO NOT PLACE THE HOT CRISP

B

BE CAREFUL

U

USE OVEN MITTENS

or the special Crisp handle supplied when removing the hot Crisp-plate.

O

ONLY USE

available Crisp plates on the market will not give the correct result when using this function.

12

JET START

with full microwave power level

CRISP



repeatedly until you find the Crisp function.

to set the cooking time.

use Microwaves and Grill in order to heat the

become very hot when using this function.

PLATE

-

on any surface susceptible to heat.

PLATE



JET START



THIS FUNCTION heating of food with low water content such as coffee or tea.

①

- 1 **PRESS THE START BUTTON TO AUTOMATICALLY START** with full microwave power level and the cooking time set to 30 seconds. Each additional press increases the cooking time with 30 seconds.

YOU MAY ALSO ALTER THE TIME BY PRESSING THE +/- BUTTONS to increase or decrease the time after the function has started.



CRISP



USE THIS FUNCTION to cook pizzas and other food. It is also suitable for cooking bacon and eggs etc.

①

②

③

- 1 **PRESS THE MANUAL BUTTON** repeatedly until you find the Crisp function.

- 2 **PRESS THE +/- BUTTONS** to set the cooking time.

- 3 **PRESS THE START BUTTON.**

THE OVEN AUTOMATICALLY use Microwaves and Grill in order to heat the Crisp-plate. This way the Crisp-plate will rapidly reach its working temperature and begin to brown and crisp the food.

ENSURE that the Crisp-plate is correctly placed in the middle of the Glass turntable.

THE OVEN AND THE CRISP-PLATE become very hot when using this function.

DO NOT PLACE THE HOT CRISP-PLATE on any surface susceptible to heat.

BE CAREFUL, NOT TO TOUCH the ceiling beneath the Grill element.

USE OVEN MITTENS

or the special Crisp handle supplied when removing the hot Crisp-plate.

the ceiling beneath the Grill element.

NOT TO TOUCH

the supplied Crisp plate with this function. Other avai-

THIS FUNCTION IS USED

heating of food with a high wa-
ter content such as; clear soups, co-

ffee or tea.


to increase or de-

BUTTONS

USE THIS FUNCTION TO

cook pizzas and other dough based
food. It is also good for frying ba-

con and eggs, sausages, hambur-
gers etc.
for quick re-
reheat and

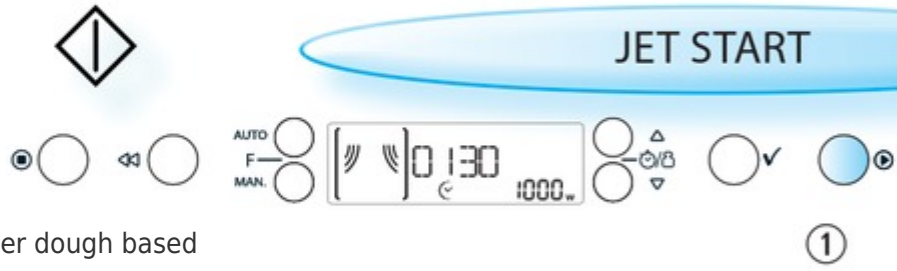

THIS FUNCTION
heating of fo
ter content su
ffee or tea.

1 PRESS THE START BUTTON TO AUTOMATICALLY START with full microwave power level and the cooking time set to 30 seconds. Each additional press increases time with 30 seconds.

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
9
10
11
12
13
14
15
16

Quick Links:

[Installation](#)

[Deep-Frying](#)

[Clock Setting](#)

[Changing Settings](#)

[Crisp](#)

[Grill Combi](#)

[Auto Cook](#)

[Troubleshooting Guide](#)

Related Manuals for Whirlpool AMW 732

[Microwave Oven Whirlpool AMW 732 Installation, Quick Start](#)

(29 pages)

[Microwave Oven Whirlpool AMW 731 Installation, Quick Start](#)

(25 pages)

[Microwave Oven Whirlpool AMW 599 Installation And Quick Start Manual](#)

(48 pages)

[Microwave Oven Whirlpool AMW 730 Instructions For Use Manual](#)

(29 pages)

[Microwave Oven Whirlpool AMW 490 IX Instructions For Use Manual](#)

Mini built-in microwave oven amw 490 ix (17 pages)

[Microwave Oven Whirlpool AMW 735 IX Instructions For Use Manual](#)

Ambient' space chef built-in 60cm microwave oven amw 735 ix (29 pages)

[Microwave Oven Whirlpool AMW 735 Instructions For Use Manual](#)

(29 pages)

[Microwave Oven Whirlpool AMW 730/NB Manual](#)

(25 pages)

[Microwave Oven Whirlpool AMW 730/NB Daily Reference Manual](#)

(33 pages)

[Microwave Oven Whirlpool AMW 7096 Installation, Quick Start](#)

(21 pages)

[Microwave Oven Whirlpool AMW 705 Instructions For Use Manual](#)

(25 pages)

[Microwave Oven Whirlpool AMW 761 Installation, Quick Start](#)

(33 pages)

[Microwave Oven Whirlpool AMW 730/IX Manual](#)

(33 pages)

[Microwave Oven Whirlpool AMW770IX Daily Reference Manual](#)

(33 pages)

[Microwave Oven Whirlpool AMW 731/WH Installation Instructions Manual](#)

(13 pages)

[Microwave Oven Whirlpool AMW 731/WH Owner's Manual](#)

(25 pages)

Related Content for Whirlpool AMW 732

[AMW 833 Th Sense Crisp](#)

Whirlpool AMW 833

[AMW 798 Auto Crisp](#)

Whirlpool AMW 798

[AMW 732 Auto Crisp](#)

Whirlpool AMW 732

[AMW 761 Auto Crisp](#)

Whirlpool AMW 761

[AMW 735 Auto Crisp](#)

Whirlpool AMW 735

[AMW 842 Th Sense Crisp](#)

Whirlpool AMW 842

[JQ 276 Manual Crisp](#)

Whirlpool JQ 276

[AMW 832 Th Sense Crisp](#)

Whirlpool AMW 832

This manual is also suitable for:

Amw 735Amw 758Amw 735 series