

Message Sending; Called Station Messaging - Toshiba Strata DK8 User Manual

Dk digital lcd telephone

| |
|-------------------|
| 1 |
| 2 |
| Table Of Contents |
| 3 |
| 4 |
| 5 |
| 6 |
| 7 |
| 8 |
| 9 |
| 10 |
| 11 |
| 12 |
| 13 |
| 14 |
| 15 |
| 16 |
| 17 |

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48

•

[Table of Contents](#)

•

Bookmarks



5. If desired, enter a message number.

6. Press the Redial button to record the data in memory.

To Set a Called Station

Message:

1. Dial the station number (station rings but does not answer or is busy).

4-10

Personal message (10 ~ 19) and system (60 ~ 99). The message does not display when setting a timed reminder—it displays when the reminder activates. Messages are set using the Record a Message method. The LCD displays "DATA PROGRAMED". You will hear a confirmation

tone. The message will be displayed at the specified time, and a beeping tone will be heard for 30 seconds (or until it is canceled by pressing the **Mode button and then dialing 0 or lifting your handset**).

MESSAGE SENDING

The Alphanumeric Messaging feature on your LCD digital telephone enables you to set short text (up to 32 characters) at your station to ensure that you do not miss important calls. Any station may record a message; however, only stations with the LCD are able to display messages. Stations that do not use Soft Keys (Soft Keys Off: Mode 7 0)

may send messages "live" to other LCD station users. To record messages, see the Recording a Message section in this guide.

Your system has up to 40 preprogrammed messages that may be sent to other LCD digital or electronic telephones. You can temporarily add to or change any of these messages, in order to leave a personalized message at your station.

All stations may record and save up to 10 personal messages to be used for all types of station messaging. This is a station option that is enabled in system programming.

CALLED STATION MESSAGING

Your station number and a message indication may be sent to another LCD station. When that station responds, it will receive the message.

IMPORTANT NOTE!

Soft Keys must be off (MODE 70) at the sending station for this feature to operate.



[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
39
40
41
42
43
44
45
46

Related Manuals for Toshiba Strata DK8

[Telephone System Toshiba Strata DK8 Installation And Maintenance Manual](#)

Digital key telephone systems (609 pages)

[Telephone Toshiba strata DK8 Installation Instructions Manual](#)

(584 pages)

[Telephone System Toshiba Strata DK 16 Installation And Maintenance Manual](#)

Toshiba digital key telephone systems installation and maintenance manual (321 pages)

[Telephone Toshiba Strata DK8 User Manual](#)

Digital telephone (90 pages)

[Telephone System Toshiba Strata DK8 General Description Manual](#)

Digital key telephone system (46 pages)

[Telephone TOSHIBA Strata DK8 User Manual](#)

Standard telephone (26 pages)

[Telephone Toshiba Strata DK16 User Manual](#)

Add-on module and direct station selection console (18 pages)

[Telephone Toshiba Strata DK8 Quick Reference Manual](#)

Business telephone (9 pages)

[IP Phone Toshiba DK User Manual](#)

Includes lcd, add-on module, and direct station selection console (163 pages)

[IP Phone Toshiba CT User Manual](#)

Includes lcd, add-on module, and direct station selection console (136 pages)

[Telephone Toshiba Strata DK User Manual](#)

Electronic telephone (134 pages)

[Handsets Toshiba Strata AirLink Integrated Wireless Handset User Manual](#)

Toshiba integrated wireless handset user guide (131 pages)

[Cordless Telephone Toshiba Strata DK User Manual](#)

Cordless digital telephone (107 pages)

[Telephone Toshiba Strata DK System Administration Manual](#)

(60 pages)

[IP Phone Toshiba Strata DK User Manual](#)

Digital single line telephone (60 pages)

[Telephone System Toshiba Strata DK14 System Administrator Manual](#)

Strata dk digital business telephone systems (56 pages)

Related Content for Toshiba Strata DK8

[Strata DK24 Station Message Detail Recording \(Smdr\) Printer/Call](#)

[Accounting Device Options](#)

Toshiba Strata DK24

[Strata DK 2000 Series Message Waiting](#)

Toshiba Strata DK 2000 Series

[Perception 4000 Message Waiting](#)

Toshiba Perception 4000

[DP5000 Series Manage Mailbox/Message Play Back](#)

Toshiba DP5000 Series

[STRATA CIX Message Waiting](#)

Toshiba STRATA CIX

[Strata CTX28 Station Message Detail Recording \(Smdr\)](#)

Toshiba Strata CTX28

[Strata DK14 Message Waiting](#)

Toshiba Strata DK14

[DKT3000 Series Message Waiting](#)

Toshiba DKT3000 Series

This manual is also suitable for:

[Strata dk16](#)