



# **TOSHIBA**

Toshiba 15V300PG Owner's Manual



1	
Table Of Contents	
2	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	
16	
17	

18  
19  
20  
21  
22  
23  
24

--	--

•

•

Bookmarks

--

## Quick Links

[1 Connecting External Equipment](#)

[2 Pc Mode](#)

[3 Specifications and Accessories](#)

[Download this manual](#)







[Table of Contents](#)

[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Toshiba 15V300PG

### [Remote Control Toshiba 15V300PG At-A-Glance Manual](#)

(2 pages)

### [TV Toshiba CPBRO2005Eu Catalog](#)

Home cinema catalogue 2005-6 (21 pages)

### [TV Toshiba 15V31B Service Manual](#)

(39 pages)

### [TV Toshiba 15V31D Service Manual](#)

(37 pages)

### [TV Toshiba 15V31D Service Manual](#)

(37 pages)

### [TV Toshiba 15VL56B Service Manual](#)

Lcd color television (77 pages)

### [TV Toshiba 15LZJ28 Owner's Manual](#)

Toshiba color television owners manual 15lzf28, 15lzf17, 15lzf28, 15lzf28x (2 pages)

### [TV Toshiba 15V330DB Owner's Manual](#)

(33 pages)

### [TV Toshiba 20VL64 series Owner's Manual](#)

(26 pages)

### [TV Toshiba 15SZ2E Service Manual](#)

Toshiba s3e chassis color television service manual (28 pages)

### [TV Toshiba 15V11B Service Manual](#)

(42 pages)

### [TV Toshiba 15V11F Service Manual](#)

(38 pages)

### [TV Toshiba 53N21F2 Service Manual](#)

(40 pages)

### [TV Toshiba 20HF5335D Addendum To Instruction Manual](#)

Hospitality television (70 pages)

### [TV Toshiba stasia 15LV33 Owner's Manual](#)

(80 pages)

### [TV Toshiba 15VL34 Service Manual](#)

(86 pages)

## Summary of Contents for Toshiba 15V300PG

### [Page 2: Table Of Contents](#)

Text – setting up and general information, control buttons  
PROBLEM SOLVING Questions and Answers – answers to some of the more common queries  
Notes – for your own records  
INFORMATION Specifications and Accessories – technical information about the television, supplied accessories  
15V300PG Declarations English - 2 -...

### [Page 3: Safety Precautions](#)

Safety Precautions This equipment has been designed and manufactured to meet international

safety standards but, like any electrical equipment, care must be taken to obtain the best results and for safety to be assured. Please read the points below for your own safety.

#### [Page 4: Installation And Important Information](#)

NOTE: A Toshiba wall bracket or stand, where available, must be used. If a non Toshiba wall bracket or stand is used the products' BEAB approval will become void and the equipment is then used at the consumers own risk. If stationary images generated by text services, channel identification logos, computer displays, video games, on screen menus, etc.

#### [Page 5: The Remote Control](#)

OK to confirm your selection. Choose to control your Toshiba TV, VCR or DVD player. No function. No function. When in TV mode: When using a Toshiba VCR or DVD: When in Text mode: press to PAUSE/STEP page 18 for functions of...

#### [Page 6: Connecting External Equipment](#)

Connecting external equipment. Before connecting any external equipment, disconnect from the main power. English - 6 -...

[Page 7](#) Connecting external equipment continued, Connecting the PC via PC input. Aerial cables: • Power off both computer and TV before making any connections. • Connect the aerial to the socket on the rear of the television. • If you use a decoder and/or a media recorder it is •...

#### [Page 8: Connections And Controls](#)

Connections and controls. Whilst all the necessary adjustments and controls for the television are made using the remote control, the buttons on the top of the television may be used for some functions. VOLUME PROGRAMME POWER TV/AV MENU UP / DOWN UP / DOWN ON/OFF VOLUME...

[Page 9](#) Initial Tuning and programme sorting. Before switching on the television put your decoder and media recorder to Standby if they are connected and ensure the aerial is connected to your television. To set up the television use the buttons on the remote control as detailed on page 5.

#### [Page 10: Manual Tuning](#)

Manual tuning. The television can be tuned-in manually using INSTALL. For example: if the television cannot be connected to a media recorder/decoder with a SCART lead or to tune-in a station on another System. Manual tuning. To allocate a programme position on the television for a decoder and media recorder: turn the decoder on, insert a pre-recorded film into the media recorder and press PLAY, then manually tune.

[Page 11](#) APS, choosing a language. APS (AUTOMATIC PROGRAMMING SYSTEM). When the APS (AUTOMATIC PROGRAMMING SYSTEM) feature is selected all channels and settings will be lost, the television will return to factory settings and then re-tune. □ Press MENU and using the Up or Down button select INSTALL menu.

#### [Page 12: Selecting Programme Positions](#)

General controls, time display, stereo/bilingual transmissions, child lock, sleep timer. Selecting programme positions. To select a programme position use the numbered buttons on the remote control. Programme positions can also be selected using buttons on the remote control and the top of the TV. Press to display the on-screen information i.e.

#### [Page 13: Picture Format](#)

Picture controls — picture format, picture mode, hue, colour temperature, room lighting. Picture format □ Press the Left and Right buttons to adjust Hue to suit your preference. Depending on the type of broadcast being transmitted, Press OK to store the settings. programmes can be viewed in a number of formats. Press button repeatedly to select between Auto, Wide, or 4:3.

#### [Page 14: Sound Controls - Volume, Sound Mute, Equalizer, Balance, Avl,](#)

## [Effect](#)

Sound controls — volume, sound mute, equalizer, balance, AVL, effect Sound Controls Using the Up and Down buttons select a frequency and then Left and Right buttons to adjust to suit personal taste. Note that user mode settings are stored automatically.

## [Page 15: Input Selection](#)

Input selection, AV connections See page 6 and 7 for a clear view of the back connection recommendations, and page 8 for the side connections. Input selection Use the Input Selection if the television does not switch over automatically. Press the external source selection button to select an input from the menu displayed.

## [Page 16: Pc Mode](#)

PC Mode PC Picture Position and PC Picture menus are described below. The other menu items are identical to TV mode menus. Please see the previous sections. For connections please refer to page 6. Autoposition Clock If you shift the picture horizontally or vertically to an unwanted position, use this item to put the picture into correct vertical banding in dot intensive presentations like spreadsheets...

## [Page 17: Pc Input Display Modes](#)

PC Input Display Modes Resolution Mode Frequency (Hz) Horizontal Vertical IBM, VGA VESA VESA VESA VESA 1024 VESA 1024 VESA English - 17 -...

## [Page 18: Text Services](#)

For further information on your particular text system(s), see the broadcast text index page or, consult your local Toshiba dealer. Below is a guide to the functions of the remote control text buttons. English - 18 -...

## [Page 19: Cleaning The Screen And Cabinet](#)

Below are the answers to some of the most common queries. For more information go to [www.toshiba.co.uk](http://www.toshiba.co.uk) Why don't the controls on the right side of the...

## [Page 20](#) Notes For your own records English - 20 -...

## [Page 21](#) Notes For your own records English - 21 -...

## [Page 22: 15V300Pg](#)

Specifications and accessories 15V300PG Broadcast Systems / Channels Programme Positions UHF UK21-UK69 PAL I VHF E2-E 12, S 1-S 41 Nicam, German Stereo PAL-B /G UHF E21-E 69 2 carrier system VHF E2-E 12, S 1-S 41...

[Page 23](#) European Service Centre, Admiralty Way, Camberley, Surrey GU15 3DT. dichiara che i prodotti Televisori a colori - Toshiba - Modelli 15V300PG, é costruito in conformità alle prescrizioni del D.M. n. 548 del 28/8/95 pubblicato sulla G.U. n. 301 del 28/12/95 ed in particolare é...