 


C: Tv Shape Setting - Toshiba D-R4SU Owner's Manual

Dvd video recorder

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
Table Of Contents
53




•

[Table of Contents](#)

•

Bookmarks

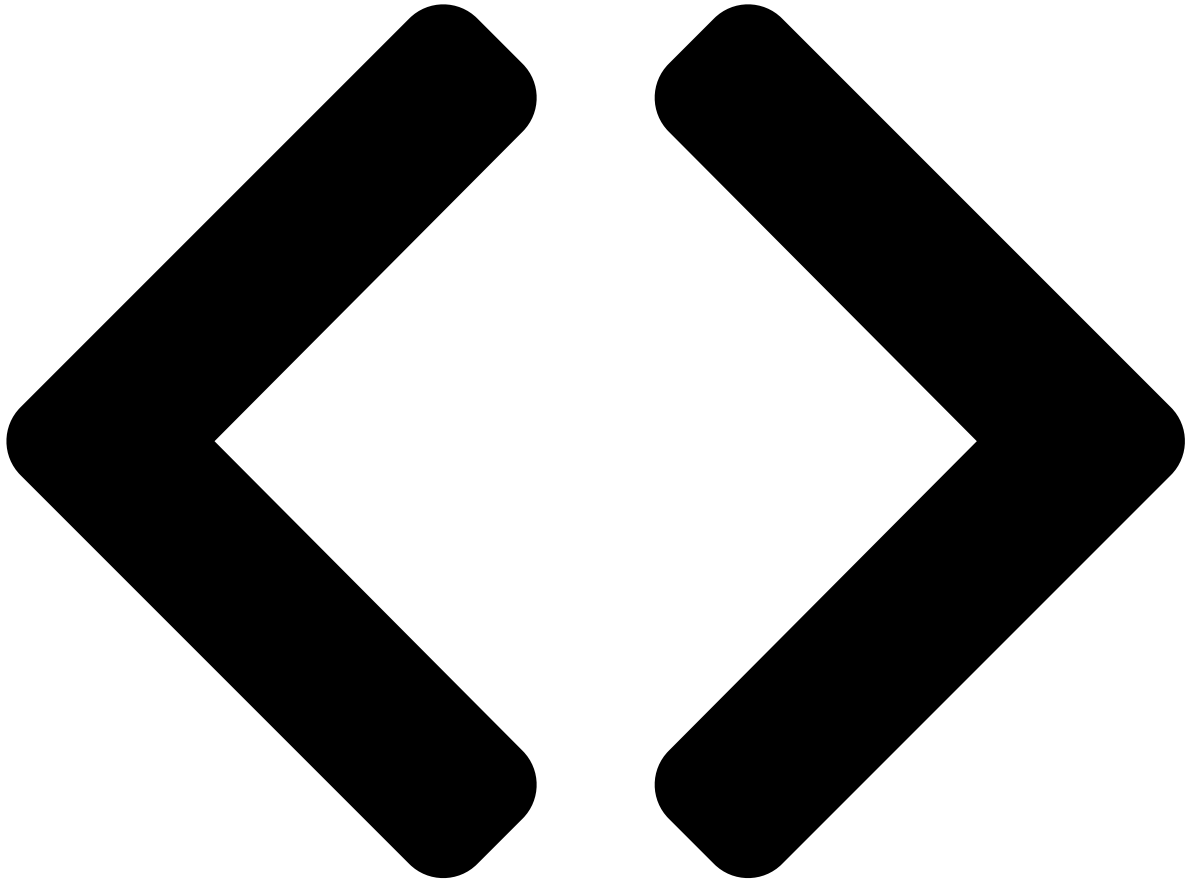

Press **• / •** to select the picture shape.

4:3 LB:

Select when a standard

4:3 TV is connected.

Displays theatrical images with masking

bars above and below the picture.

4:3 normal:

Select when a standard

4:3 TV is connected.

Displays theatrical images

4

Press **▲ / ▼** to select the picture

4:3 | B•

cropped

to fill your TV screen. Either or both sides of the picture are cut off.

16:9 wide

Select when a 16:9 wide TV is connected.

16:9 shrink:

Select when a 16:9 wide TV is connected.

When a 4:3 aspect ratio image has been elongated to 16:9 wide picture size, use this setting.

Masking bars to the right and left appears.

Once the proper setting

is selected,

press

SELECT/ENTER.

The submenu disappears.

To exit the setting menu, press the SETUP button.

Notes

• Actual picture shape may depend on signal type of broadcast or input source, or settings on the connected TV. Refer to the owner's manual of the TV.


• When a DVD video disc has a particular available picture shape, the contents may not be compatible with other picture shape.

"C: TV shape setting" is complete. Go to "D: Remote control settings". (@ page 42)

41

4

Press ▲ / ▼ to select the picture

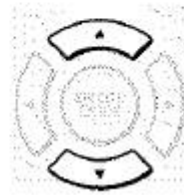

4:3 LB:

Select when a standard 4:3 TV connected.

Displays theatrical images with masking bars above and below picture.

4:3 normal:

Select when a standard 4:3 TV connected.

Displays theatrical images cropped to fill your TV screen. Either or

[Previous Page](#)
[Next Page](#)

1
...
38
39
40
41
42
43
44
45

Quick Links:

[Basic Setup](#)

[A: Initial Settings](#)

Related Manuals for Toshiba D-R4SU

[DVD Recorder Toshiba D-R4SU Owner's Manual](#)

Dvd video recorder (195 pages)

[DVR Toshiba D-R4SU Owner's Manual](#)

(131 pages)

[DVD Recorder Toshiba D-R4SC Owner's Manual](#)

Dvd video recorder (131 pages)

[DVD Recorder Toshiba D-R4SU Service Manual](#)

Dvd video recorder (22 pages)

[DVR Toshiba D-KR4 Owner's Manual](#)

Toshiba d-kr4: installation guide (52 pages)

[DVD Recorder Toshiba DR420 Specifications](#)

Dvd recorder with 1080p upconversion (2 pages)

[DVD Recorder Toshiba D-R410 Specification Sheet](#)

Dvd recorder with 1080p upconversion (2 pages)

[DVD Recorder Toshiba D-R400 Owner's Manual](#)

Toshiba dvd video recorder owner's manual (103 pages)

[DVD Recorder Toshiba D-R400 Specifications](#)

Dvd recorder with 1080p upconversion (2 pages)

[DVD Recorder Toshiba DR430 Specifications](#)

Dvd recorder with 1080p upconversion (2 pages)

[DVD Recorder Toshiba DR430KC Quick Manual](#)

Dvd video recorder (2 pages)

[DVD Recorder Toshiba D-R1SU Owner's Manual](#)

Dvd video recorder (144 pages)

[DVD Recorder Toshiba D-R160SB Owner's Manual](#)

Dvd video recorder (67 pages)

[DVD Recorder Toshiba D-KR2SU Owner's Manual](#)

Dvd video recorder (56 pages)

[DVD Recorder Toshiba DVR D-R17DTKB Owner's Manual](#)

Dvd video recorder (88 pages)

[DVD Recorder Toshiba D-R255-SG Owner's Manual](#)

Dvd recorder (93 pages)

Related Content for Toshiba D-R4SU

[D-R250SB Case 1 : Connecting To Your Tv](#)

Toshiba D-R250SB

[D-VR30SG Connecting Dvd Recorder & Vcr To The Tv Using The Rf Cable](#)

Toshiba D-VR30SG

[D-VR25SB Connecting Dvd Recorder & Vcr To The Tv Using The Rf Cable](#)

Toshiba D-VR25SB

[W808 Recording A Tv Program](#)

Toshiba W808

[RD-85DTSB Tv View Operation](#)

Toshiba RD-85DTSB

[SD-V594SC Cable Tv Connections](#)

Toshiba SD-V594SC

[D-R3 Method 1 : Antenna + Dvd Recorder + Tv](#)

Toshiba D-R3

[D-KR10KU Connection To A Tv](#)

Toshiba D-KR10KU

This manual is also suitable for:

[D-r4scD-kr4su](#)