



Sanyo LED-32XR10F Instruction Manual

Led-lcd tv

1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38

--

•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

Quick Links

[1 Identification of Controls](#)

[2 Setting up](#)

[3 Connections](#)

[4 Troubleshooting](#)

[5 Specifications](#)

[Download this manual](#)



INSTRUCTION MANUAL

LED-LCD TV

Before connecting, operating or adjusting this product, please read the manual completely.

Please keep this manual for future reference.

LED-32XR10F



Table of Contents

[Next Page](#)

1
2
3
4
5

Related Manuals for Sanyo LED-32XR10F

[TV Sanyo LED-42XR10FH Service Manual](#)

Led-lcd tv (48 pages)

[LCD TV Sanyo LED-46XR10FH Service Manual](#)

Led-lcd tv (48 pages)

[LED TV SANYO LED-22XR10F Instruction Manual](#)

Led-lcd tv (38 pages)

[LED TV SANYO LED-32XR10FH Instruction Manual](#)

Led-lcd tv (38 pages)

[LED TV Sanyo LED-DP32242 Service Manual](#)

(56 pages)

[LED TV Sanyo LCD-27XR1 Operating Manual](#)

(36 pages)

[LED TV Sanyo LED-19XZ11 Service Manual](#)

(37 pages)

[LED TV Sanyo XT-43FHD4S Owner's Manual](#)

(34 pages)

[LED TV Sanyo XT-32A081H Owner's Manual](#)

Hd/fhd (28 pages)

[LED TV Sanyo XT-49S7200F Owner's Manual](#)

(18 pages)

[LED TV Sanyo FW32D06F Quick Start Manual](#)

32 class led lcd hdtv (2 pages)

[LED TV Sanyo XT-43S8100FS Owner's Manual](#)

Full hd (23 pages)

[LED TV Sanyo XT-43S7200F Owner's Manual](#)

(18 pages)

[LED TV Sanyo DP39842 Owner's Manual](#)

1080p hdtv lcd (2 pages)

[LED TV Sanyo XT-32S7201H Owner's Manual](#)

(20 pages)

[LED TV Sanyo XT-43S7300F Owner's Manual](#)

Fhd (20 pages)

Summary of Contents for Sanyo LED-32XR10F

[Page 1](#) LED-32XR10F INSTRUCTION MANUAL LED-LCD TV Before connecting, operating or adjusting this product, please read the manual completely. Please keep this manual for future reference.

[Page 2: Table Of Contents](#)

Contents Important Information Important Safety Precautions Important Notice Identification of Controls Setting Up Connections First Time Configuration / Basic Operations Memorizing the Channels Programme Edit Adjusting the Picture Adjusting the Sound Adjusting Basic Settings Setting Clock & Timer Setting Child and Rating Locks Making Use of Time Shift Function Teletext

&...

[Page 3: Important Information](#)

IMPORTANT INFORMATION If a television is not positioned in a sufficiently stable location, it can be potentially hazardous due to falling. Many injuries, particularly to children, can be avoided by taking simple precautions such as: ! Using cabinets or stands recommended by the manufacturer of the television. ! Only using furniture that can safely support the television.

[Page 4: Important Safety Precautions](#)

Important Safety Precautions Electrical energy can perform many useful functions, but it can also cause personal injuries and property damage if improperly handled. This product has been engineered and manufactured with the highest priority on safety. But **IMPROPER USE CAN RESULT IN POTENTIAL ELECTRICAL SHOCK OR FIRE HAZARD**. In order to prevent potential danger, please observe the following instructions when installing, operating and cleaning the product.

Page 5 Important Safety Precautions (Continued) 15. Stand---Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. Do not place the product on an unstable trolley, stand, tripod or table. Placing the product on an unstable base **SOURCE MENU** can cause the product to fall, resulting in serious personal injuries as well as damage to the product.

[Page 6: Important Notice](#)

Important Notice About Temperature Do not use in hot and cold rooms (locations) When the unit is used in rooms (locations) with low temperature, the picture may leave trails or appear slightly delayed. This is not a malfunction, and the unit will recover when the temperature returns to normal.

[Page 7: Identification Of Controls](#)

Identification of Controls Main Unit (front/side view) 1. Remote sensor/Light sensor Receives signals from the remote control. Do not block. The light sensor will measure the room brightness, do not put anything around the sensor. 2. Power indicator Lights blue when in operating mode. **SOURCE MENU** Lights red when in standby mode.

[Page 8: Remote Control Unit](#)

Identification of Controls (Continued) Remote control unit 1. **POWER**: Switches the TV power on or Standby. 2. **S.MODE**: Selects sound mode. 3. **P .MODE**: Selects picture mode. 4. **FAV.LIST**: Displays the favorite channel list. 5. **FAV+ / FAV-**: Selects the favorite channel. 6.

[Page 9: Setting Up](#)

Setting Up You should select a location for the TV: Selecting a location Where direct light does not reflect on the screen. · That has indirect and soft lighting. · Where the TV has access to an antenna or cable TV connection. · ...

[Page 10: Connections](#)

Connections Cautions Before Connecting When connecting an external device to the TV, make sure that the TV and the device are turned off. Check the plugs on the ends of cables to make sure that they are the correct type before you try plugging them into jacks on the TV.

Page 11 Connections (Continued) Connecting a USB device Insert your USB device into the USB port. To play from the USB device: To USB port 1. Turn on your TV, then press **SOURCE** button. The Input Source TV Side menu opens. 2. Press 5 to select USB, then press **OK** to confirm.

Page 12 Connections (Continued) How to connect an HDMI device: Connecting an HDMI device Connect the HDMI cable between the HDMI jack on the TV (HDMI1 and HDMI2 located at TV rear, while HDMI3 at TV side) and HDMI output jack on the device. Note: If your device has an HDMI connection, we **MUSIC/AUDIO D-Sub...**

Page 13 Connections (Continued) Connecting an AV device for playback To connect an AV device (such as VCR, camcorder, or game console) : Connect the Audio/Video cables between the Audio (L/R)/Video jacks on the TV and AV device. Camcorder AV cable TV Side To play the

AV device: Game console 1.

[Page 14: First Time Configuration/Basic Operations](#)

First Time Configuration/Basic Operations Turning on your TV for the first time The first time you use the TV, you need to configure your TV: To configure your TV: Energy Save Mode Make sure that you have inserted the batteries in the To use this TV for displaying in a store, please select [Store/Dynamic].

[Page 15](#) Basic Operations (Continued) Selecting the input source Input Source To select the input source: Press SOURCE button. The Input Source list appears. Press 6 or 5 to select the input source, then press OK or 4 to confirm your choice. Component The TV switches to the selected source.

[Page 16: Basic Operations](#)

Basic Operations (Continued) Adjusting the volume To adjust the volume: Press the VOL+/- to increase or decrease the volume. Press the MUTE button to temporarily turn off the sound. To restore the sound, press the MUTE button again. Press the INFO button to display the information banner. Displaying the Information Banner The information banner displays current status information such as the channel number and signal source.

[Page 17: Picture Menu](#)

Basic Operations (Continued) On-screen menu overview PICTURE menu SOUND menu PICTURE SOUND TIME OPTION LOCK CHANNEL PICTURE SOUND TIME OPTION LOCK CHANNEL Sound Mode User Picture Mode User Treble Contrast Bass Brightness Balance Colour Auto Volume Sharpness Surround Sound Tint SELECT MOVE RETURN...

[Page 18: Memorizing The Channels](#)

Memorizing the Channels Note: If the Lock System is On, Auto Tuning/DTV manual tuning/ATV manual tuning can not be operated without password. For details, please see <Setting Child and Rating Locks> section. Auto Tuning will completely re-tune the TV and can be used to Auto Tuning update the channel list.

[Page 19: Programme Edit](#)

Memorizing the Channels & Programme Edit Use the Manual Tuning operation if desired channels can not be preset ATV manual tuning - analogue only - by Auto Tuning or if you would like to preset channels to specific position numbers one by one. In CHANNEL menu, press 6 to select ATV Manual Tuning, then press 4...

[Page 20: Programme Edit](#)

Programme Edit (Continued) You can create a favourite channel list so you can quickly browse Setting up a favourite channel list through your favourite channels by pressing FAV.LIST, then selecting a channel from the favourite channel list. Navigate to the CHANNEL menu, press 5 to select PICTURE SOUND...

[Page 21: Skipping Channels](#)

Programme Edit (Continued) You can skip unnecessary channels so that only the channels you want Skipping channels to watch can be selected by CH / CH . You can still tune to the skipped channel by using the number buttons. Navigate to the CHANNEL menu, press 5 to select PICTURE...

[Page 22: Adjusting The Picture](#)

Adjusting the Picture To adjust the picture: Adjusting the picture Press MENU. The on-screen menu opens with the PICTURE menu displayed, then press 6 to access. Press 6 to highlight an option, press 3 to adjust the option; if a sub-menu exits, press 4 or OK to access.

[Page 23: Adjusting The Sound](#)

Adjusting the Sound To adjust the sound: Adjusting the sound Press MENU. The on-screen menu opens. Press 3 or 4 to select SOUND menu, press 6 to access. PICTURE SOUND TIME OPTION LOCK CHANNEL Press 6 or 5 to highlight an option, press 3 or 4 to adjust the Sound Mode...

[Page 24: Adjusting Basic Settings](#)

Adjusting Basic Settings Adjusting basic settings To adjust basic settings: Press MENU. The on-screen menu opens. PICTURE SOUND TIME OPTION LOCK CHANNEL Press 3 to display OPTION menu, press 6 to access. OSD Language English Hearing Impaired S/PDIF Output AUTO Press 6 or 5 to select an option, press 3...

[Page 25: Setting Clock & Timer](#)

Setting Clock & Timer To set TV clock Setting TV clock - For DTV programs, the clock displays the current time using time data received from your TV service provider. This information is based on a digital channel and does not need to be set manually, but you need to select your time zone PICTURE SOUND...

[Page 26: Setting Sleep Timer](#)

Setting Clock & Timer (continued) To set Sleep timer Setting Sleep timer Sleep timer lets you select the amount of time before your TV turns itself off automatically. This setting is cleared when the TV is turned off. PICTURE SOUND TIME OPTION LOCK...

[Page 27: Setting Child And Rating Locks](#)

Setting Child and Rating Locks You can prevent your children from watching TV by locking the TV and using age ratings. To enable child lock and rating feature, you must set Lock System to On through LOCK menu. Also you can set Lock System to On to lock auto tuning/manual tuning to protect some TV settings from being accidentally changed.

[Page 28](#) Setting Child and Rating Locks (continued) Setting parental ratings To set and enable parental ratings - digital only - Some digital broadcasters rate their programmes according to age. You can set your TV to display only programmes with age ratings higher than your child's age. Before setting PICTURE SOUND TIME...

[Page 29: Making Use Of Time Shift Function](#)

Making Use of Time Shift Function Checking File System before Time Shift Time Shift function is the recording of DTV programme to an external memory device (portable hard disk or USB device) to be viewed at a later time more convenient to the user. But before operation you must pay attention to the following notes: Before Time Shift, you need to check the File System successfully.

[Page 30: Teletext & Subtitle](#)

Teletext & Subtitle What Is Teletext? Your System receives Teletext signals broadcast by a TV network, and decodes them into graphical format for viewing. News, weather and sports information, stock exchange prices and programme previews are among the many services available. To Turn On/Off Teletext Select a TV channel providing the Teletext program.

[Page 31: Adjusting The Computer Image & Setting Hotel Mode](#)

Adjusting the Computer Image & Setting Hotel Mode Before adjusting the screen, make sure that you select the Adjusting the PC image correct source (D-SUB). To adjust the computer image: PICTURE SOUND TIME OPTION LOCK CHANNEL Press MENU. The on-screen menu opens with PICTURE Adaptive Contrast menu displayed.

[Page 32: Using Music Player /Using Usb Multi Media Player](#)

Using MUSIC Player & Using USB Multi Media Player Using MUSIC player You can connect your MP3 player to MUSIC jack on the TV rear to listen to music from your TV. Be sure to switch to MUSIC source firstly by pressing SOURCE button. During music playing and you want to save power, please go to OPTION menu and set Audio Only to Power Saving, then a message "Audio Only, it will go to power saving mode"...

[Page 33: Playing Music](#)

Using USB Multi Media Player (continued) Playing music Generally, audio player supports MP3, WMA and USB 2.0 AAC formats, but for the sake of technical updating, some formats above may not be supported. PHOTO MUSIC MOVIE TEXT MUSIC To listen to music: Page 1 / 1 Connect USB device and switch to USB mode, MSTPVR...

[Page 34](#) Using USB Multi Media Player (continued) During movie play, you can press: Playing

movie (continued) : Play /pause. USB 2.0 : Stop playing. : Fast forward. : Fast reverse. PHOTO MUSIC MOVIE TEXT Subtitle: Shows subtitle if available. Page 1 / 1 MOVIE STEREO: Selects audio track if available.

[Page 35: Troubleshooting](#)

Troubleshooting If, after reading these operating instructions, you have additional questions related to the use of your television, please call the services center in your local area. Before calling service, please check the symptoms and follow suggested solutions. Remote Control Problem Possible Solutions The batteries could be weak.

[Page 36: Specifications](#)

Specifications Type: Integrated Digital TV Panel: 80 cm TFT LCD (with LED backlight) Analogue TV system: PAL-B/G (CCIR), NTSC(AV) Compliant Standard: DVB-T, 7 MHz Bandwidth Digital TV system: Video Decoding: MP@ML & MP @ HL ® | Audio Decoding: Dolby Digital, MPEG (&II) Audio Sampling Rate: 32, 44.1, 48 kHz Power Requirement: AC 220-240 V, 50/60 Hz...

[Page 37: Appendix: Installing The Stand](#)

Appendix: Installing the Stand If the stand is provided, please read these instructions thoroughly before attempting this installation. You must install your TV into the stand in order for it to stand upright on a cabinet or other flat surface. If you intend to mount your TV on a wall or other vertical surface, you must remove the stand column.

[Page 38](#) 5944037630 Ver.1.0...

This manual is also suitable for:

[Led-42xr10fhLed-46xr10fh](#)