



Sanyo LCD-22VT10DVD Instruction Manual

Lcd tv with dvd player

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43

--

•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

Quick Links

[1 Features](#)

[2 Overview of the Remote Control](#)

[3 Lcd Tv and Operating Buttons](#)

[4 Digital Tv Menu System](#)

[5 Tv Setup](#)

[Download this manual](#)



INSTRUCTION MANUAL

LCD TV WITH DVD PLAYER

Before connecting, operating or adjusting this product, please read the manual completely.
Please keep this manual for future reference.

LCD-22VT10DVD(C)



Table of Contents

[Next Page](#)

1
2
3
4
5

Chapters

[Table of Contents](#) 3

[Features](#) 34

Related Manuals for Sanyo LCD-22VT10DVD

[TV DVD Combo Sanyo LCD-19VT11DVD Service Manual](#)

Lcd tv dvd built-in (92 pages)

[TV DVD Combo Sanyo LCD-19VT11DVD Service Manual](#)

Lcd tv dvd built-in (92 pages)

[TV DVD Combo Sanyo LCD-22VT11DVD Service Manual](#)

Lcd tv dvd built-in (93 pages)

[TV DVD Combo Sanyo DP26671 Owner's Manual](#)

26" and 31.5" hdtv lcd/dvd combo (41 pages)

[TV DVD Combo Sanyo DP26670 Owner's Manual](#)

Hdtv lcd / dvd combo (41 pages)

[TV DVD Combo Sanyo DP32671 Service Manual](#)

32 inch hdtv lcd/dvd combo (81 pages)

[TV DVD Combo Sanyo DP26670 Service Manual](#)

18.5" hdtv lcd (75 pages)

[TV DVD Combo Sanyo DP32671 Service Manual](#)

32" hdtv lcd / dvd combo factory code z6cf (80 pages)

[TV DVD Combo Sanyo DP26671 Service Manual](#)

26" hdtv lcd / dvd combo (78 pages)

Summary of Contents for Sanyo LCD-22VT10DVD

[Page 1](#) INSTRUCTION MANUAL LCD-22VT10DVD(C) LCD TV WITH DVD PLAYER Before connecting, operating or adjusting this product, please read the manual completely. Please keep this manual for future reference.

[Page 3: Table Of Contents](#)

Contents Features2 Timers 15 Accessories2 Common Interface 15 Introduction 2 TV Setup15 Preparation 2 Setup16 Safety Precautions3 Configuration 16 Power Source 3 Time Settings(**)16 Power Cord

[Page 4: Features](#)

Features Accessories • Remote controlled colour LCD TV. • Fully integrated digital TV (DVB-T - MPEG2) (DVB-T- MPEG4). • HDMI connectors for digital video and audio. This INFO connection is also designed to accept high definition SLEEP SCREEN SOURCE PRESETS signals.

[Page 5: Safety Precautions](#)

Safety Precautions Lightning Please read the following recommended safety In case of storm and lightning or precautions carefully for your safety. when going on holiday, disconnect the power cord from the wall outlet. Power Source Replacement Parts The TV set should be operated only from a 220-240 V AC, 50 Hz outlet.

[Page 6: Warning](#)

Warning Do not leave your TV in standby or operating mode when you leave your house. When you use the wall mount kit (optional) with the LCD TV, we would definitely recommend to plug all your cables into the back of the LCD before mounting to the wall.

[Page 7: Overview Of The Remote Control](#)

Overview of the Remote Control Standby Image size Sleep timer Numeric buttons Return / Exit (in DTV mode) / Index page (in TXT mode) Cursor up / Page up (in TXT mode) Cursor left Programme up (Page down in DTV mode) Programme down (Page up in DTV mode) Mono-Stereo / Dual I-II / Current language (in DTV mode) (*)

[Page 8: Lcd Tv And Operating Buttons](#)

LCD TV and Operating Buttons Standby button TV/AV button Programme Up/Down buttons Volume Up/Down buttons " " / " " Note: Press buttons at the same time to view main menu. Viewing the Connections- Back Connectors SCART socket inputs or outputs for external devices. Connect the SCART cable between SCART socket on TV and SCART socket on your external device (such as a decoder, a VCR or a DVD player).

[Page 9: Viewing The Connections - Side Connectors](#)

S/PDIF Out outputs digital audio signals of the currently watched source. Use an S/PDIF coaxial cable to transfer audio signals to a device that has S/PDIF input. You should also set SPDIF Out option in the Sound Menu as On. RF Input connects to an antenna or a cable.

[Page 10: Power Connection](#)

Anti-theft Protection USB Memory Connection Your Tv has an anti-theft lock hole for theft • Plug your USB device to the USB input of the TV. protection. IMPORTANT: The TV supports only FAT32 disk You can use an optional lock to physically fix the TV formatting.

[Page 11: Using Side Av Connectors](#)

Note: These three methods of connection perform the connection. You should also set SPDIF Out option same function but in different levels of quality. It is not in the Sound menu as On. necessary to connect by all three methods. Using Side AV Connectors Connecting Other Equipment via You can connect a range of optional equipment...

[Page 12: Switching The Tv On/Off](#)

Note: You can mark desired source options by SOURCE pressing the OK button. Therefore, when button is pressed, only the marked source options will be available (except for the TV source). Note: Remove the battery from remote control handset when it is not to be used for a long period. Otherwise it can be damaged due to any leakage of batteries.

[Page 13: Initial Settings](#)

Programme Selection (Previous or Next Programme) • Press "P -" button to select the previous programme. • Press "P +" button to select the next programme. Programme Selection (Direct Access) • Press numeric buttons on the remote control to select programmes between 0 and 9.

[Page 14: Information Banner](#)

according to LCN (logical channel number). Select • The information banner can also be displayed by "NO" for using frequency sort. (This feature is pressing the INFO button at any time while watching available for only Germany, Austria and Italy country the TV.

[Page 15: Programme Options](#)

the normal broadcasting, there are also channels with just digital teletext broadcasting. • The aspect ratio (picture shape) when watching a channel with just digital teletext broadcasting is the same as the aspect ratio of the picture viewed previously. • When you press the TELETEXT () button again, the digital teletext screen will be displayed.

[Page 16: Moving The Channels In The Channel List](#)

• To watch a specific channel, highlight it using " " or " " buttons and then press OK button, while the "Select" item on Channel List menu is highlighted via " " or " " buttons. Moving the

channels in the channel list Renaming channels •...

[Page 17: Program Guide](#)

Start: Starting time is entered via the Left/Right or the numeric buttons. End: Ending time is entered via the Left/Right or the numeric buttons. Duration: Displays the duration of the recording. Duration item will be automatically displayed after the starting and ending times are entered. Change / Delete: permits or prohibits any modifi...

[Page 18: Setup](#)

The digital TV Setup menu screen is accessed from • Use “ ” or “ ” buttons to highlight Parental Control. the main menu. Press the MENU button to display Press OK button to enter Parental Control menu. A the main menu and use or buttons to highlight “TV dialog box asking for the lock key is displayed: Setup”.

[Page 19](#) Dolby Digital In the Configuration Menu, highlight the Dolby D item by pressing “ ” or “ ” buttons. Use the “ ” or “ ” buttons to set the Dolby Digital as On or Off. If the channel that you are watching supports Dolby Digital Use “...

[Page 20: Language Settings](#)

Preferred Language Use “ ” or “ ” buttons to highlight the menu item that will be adjusted and then press “ ” or “ ” button By pressing the “ ” or “ ” buttons the preferred audio to set. description language is being changed.

[Page 21](#) First Time Installation The user can use this item to load default settings, which were loaded to the receiver at the factory. To install factory settings, highlight “First Time Installation” menu item and press OK button, then you will be asked whether or not to delete the settings. Selecting “Yes”...

[Page 22: Media Browser \(In Dtv Mode\)](#)

Play This (OK) : Plays the selected fi le. Highlight “Yes” item by pressing “ ” or “ ” buttons and press OK button to start installation. After search Play (GREEN) : Play all media fi les in the folder is completed for digital channels, a message asking starting with the selected one.

[Page 23: Video Playback](#)

(If the loop function is not enabled, the slideshow will Note: Hue option can only be visible when the TV stop at the end. If the loop function is enabled, after receives an NTSC signal. the slideshow ends, it will start again and again). Colour Temp Loop (GREEN) : Slideshow goes on continuously and Press “...

[Page 24: Sound Menu](#)

Reset Press “ ” or “ ” button to select Balance. Press “ ” or “ ” button to change the level of the balance. Press “ ” or “ ” button to select Reset. Press Balance level can be adjusted between -32 and + “...

[Page 25: Feature Menu](#)

Feature Menu Menu Background Press “ ” or “ ” button to select Menu Background. You can set menu background level by pressing “ ” or “ ” button. Power Save Mode You can reduce energy consumption by using this feature.

[Page 26: Install Menu](#)

Note: If you connect an HDMI device and switch the Install Menu in AV Modes TV to HDMI mode, this feature will be visible (except The following screen appears in the install menu when for 1080i/1080P resolution). the TV is in AV modes. Note that limited options will be available.

[Page 27: Source Menu](#)

The fi rst letter of the selected name will be highlighted. Press “ ” or “ ” button to change that letter and “ ” or “ ” button to select the other letters. By pressing the RED button, you can store the name. Move Select the programme which you want to move by navigation buttons.

[Page 28: Displaying Tv Information](#)

To cancel mute, there are two alternatives; the first Select Autoposition item by using “ ” or “ ” buttons. one is pressing the “ ” button and the second one Press OK or “ ”, “ ” button. is increasing the volume level.

[Page 29: Teletext](#)

Teletext Teletext system transmits information such as news, sports and weather on your TV. Note that is the signal Panoramic degrades, for example in poor/adverse weather conditions, some text errors may occur or the teletext This stretches the left and right sides of a normal mode may be aborted.

[Page 30: Tips](#)

Remote Control Tips Your TV no longer responds to the remote control. Screen Care Perhaps the batteries are exhausted. If so you can still Clean the screen with a slightly damp, soft cloth. Do use the local buttons at the bottom of the TV. not use abrasive solvents as they may damage the Input Sources coating layer of the TV screen.

[Page 31: Appendix A: Pc Input Typical Display Modes](#)

Appendix A: PC Input Typical Appendix B: AV and HDMI Signal Display Modes Compatibility (Input Signal Types) The display has a maximum resolution of 1600 X 1200. The following table is an illustration of some of Supported Source Available Signals the typical video display modes.

[Page 32: Appendix C: Supported File Formats For Usb Mode](#)

Appendix C: Supported File Formats for USB Mode Format Remarks File Media Extension Video Audio (Maximum resolution/Bit rate etc.) XviD/ 3ivx PCM/MP3 XviD Version up to: 1.1.2 Movie MPEG4 PCM/MP3 .avi (optional) MS ISO PCM/MP3 Support SP and ASP MPEG4 Sample Rate: 8K ~ 48KHz MPEG 1/2 Music...

[Page 33: Specifications](#)

Specifications Digital Reception (DVB-T) TV BROADCASTING Transmission Standards: PAL/SECAM B/G D/K K' I/I' L/L' DVB-T, MPEG2,DVB-T, MPEG4 HD RECEIVING CHANNELS i. DEMODULATION VHF (BAND I/III) -Symbol rate: COFDM with 2K/8K FFT mode. UHF (BAND U) - Modulation: 16-QAM - 64-QAM FEC for all DVB modes (automatically found) HYPERBAND ii.

[Page 34: Features](#)

Features Contents Features 32 General Properties General Properties.....32 • DVD / CD / CD-R / CD-RW / MP3 / JPEG / MPEG Safety Information33 / DivX playback. Notes on Discs 33 • NTSC/PAL playback (according to disc content) On handling discs

[Page 35: Safety Information](#)

On cleaning Safety Information • Before playing, clean the disc with a cleaning cloth. CAUTION Wipe the disc from the center out. DVD Player is a class 1 laser product. However this product uses a visible laser beam which could cause hazardous radiation exposure.

[Page 36: Dvd Control Panel Buttons](#)

DVD Control Panel Buttons A. Disc loader B. Play / Pause Plays/pauses the disc. When DVD menu (root menu) is active, this button functions as “button select” (selects the highlighted item in menu) if this is not prohibited by the disc.

[Page 37: General Operation](#)

General Operation You can operate DVD, movie CD, music or picture CD's content by using the proper buttons on your remote control. Below are main functions of commonly used remote control buttons. Buttons on the Movie Picture Music Remote Control Playback Playback...

[Page 38: General Playback](#)

Reverse stepping is not available. General Playback For your convenience: Basic Play If you attempt to enter a number greater than the total Press on the power button time of the current title, the time search box disappears Please insert a disc to the loader. and “ ...

[Page 39: Preferences](#)

Preferences Troubleshooting The picture quality is poor (DVD) • Make sure the DVD disc surface is not damaged. (Scratch, fingerprint etc.) • Clean the DVD disc and try again. See instructions described in "Notes on Discs" to clean your disc properly. •...

[Page 40: No Response From Remote Control](#)

No response from remote control Title Number • Make sure the remote control is in the correct These numbers are recorded on DVD discs. When a mode. disc contains two or more movies, these movies are numbered as title 1, title 2, etc. •...

[Page 41: Disc Types Compatible With This Unit](#)

Disc Types Compatible with This Unit Baseline Max resolution 2150 X 1432 Progressive Max resolution 1400 X 900 English - 39 -...

[Page 42: Supported File Formats](#)

Supported File Formats Format Remarks File Media Extension Video Audio (Maximum resolution/Bit rate etc.) MPEG Layer MPEG1 .mpg/ .dat/ 1/2/3 .vob MPEG2 MPEG2 Movie XviD/ 3ivx PCM/MP3 XviD Version up to: 1.1.2 / DivX 3.1.x, 4.x, 5.x MPEG4 PCM/MP3 .avi MS ISO PCM/MP3 Support SP and ASP...

This manual is also suitable for:

[Lcd-22vt10dvd\(c\)](#)