



# TOSHIBA

Toshiba D-R150SB Quick Reference Manual

Dvd video recorder



1  
2  
3  
4  
5  
6  
7  
8

--

•

[Table of Contents](#)

•

## Bookmarks

## Table of Contents

[1 Quick Reference](#)

[2 Turn on the Recorder](#)

[3 Load a Disc](#)

[4 Supplied Accessories](#)

[Download this manual](#)

See also: [Owner's Manual](#)





Thank you for purchasing a TOSHIBA DVD video recorder.

For your safety, read "SAFETY PRECAUTIONS", "IMPORTANT SAFETY INSTRUCTIONS", "Precautions"

and other notes and information in the INSTALLATION GUIDE.

It is important you read and understand the "SAFETY PRECAUTIONS", "IMPORTANT SAFETY

INSTRUCTIONS", "Precautions" and other notes that appear in the INSTALLATION GUIDE provided

with this TOSHIBA product before you operate your DVD video recorder. The purpose of the "SAFETY

PRECAUTIONS", "IMPORTANT SAFETY INSTRUCTIONS", "Precautions" and other notes is to provide

you with warnings and safety instructions that will assist in preventing the misuse of your DVD video recorder.

This leaflet is to help you start up your recorder and experience a basic operation.

To learn about the recorder and obtain its full performance, refer to the OWNER'S MANUAL.



is reference page in the INSTALLATION GUIDE, and

Insert the batteries into the remote control.

# 1 TOSHIBA

Open the cover.

H PM002XXXX010

D-R150SBquick

## DVD VIDEO RECORDER

# D-R150SB



## Quick Reference

# 2

Insert batteries (R6 type).

Make sure to match the + and - on the batteries to the marks inside the battery compartment.

1

xx

o

in the OPERATIONS.)

ManualsLib.com

# 3



05.7.12, 4:15 PM

Close the cover.

[Table of Contents](#)

[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Toshiba D-R150SB

### [DVR Toshiba D-R150SB Owner's Manual](#)

Dvd video recorder (48 pages)

### [DVD Recorder TOSHIBA D-R150SB Owner's Manual](#)

Dvd video recorder (48 pages)

### [DVD Recorder Toshiba D-R1 Specification Sheet](#)

Toshiba dvd recorder specification sheet (2 pages)

### [DVD Recorder Toshiba D-R1SU Owner's Manual](#)

Dvd video recorder (144 pages)

### [DVD Recorder Toshiba D-R160SB Owner's Manual](#)

Dvd video recorder (67 pages)

### [DVD Recorder Toshiba DVR D-R17DTKB Owner's Manual](#)

Dvd video recorder (88 pages)

### [DVD Recorder Toshiba D-R5SC Owner's Manual](#)

Toshiba dvd video recorder owner's manual d-r5su, d-r5sc (58 pages)

### [DVD Recorder Toshiba D-R400 Owner's Manual](#)

Toshiba dvd video recorder owner's manual (103 pages)

### [DVD Recorder Toshiba D-R4SU Owner's Manual](#)

Dvd video recorder (53 pages)

### [DVD Recorder Toshiba D-R4SU Owner's Manual](#)

Dvd video recorder (195 pages)

### [DVD Recorder Toshiba D-R4SU Service Manual](#)

Dvd video recorder (22 pages)

### [DVD Recorder Toshiba D-RW2SU/D-RW2SC Owner's Manual](#)

Toshiba dvd video recorder owner's manual (159 pages)

### [DVD Recorder Toshiba D-R3 Owner's Manual](#)

Toshiba dvd recorder owner's manual d-r3 (89 pages)

### [DVD Recorder Toshiba D-R3 Owner's Manual](#)

(89 pages)

### [DVD Recorder Toshiba D-KR2SU Owner's Manual](#)

Dvd video recorder (56 pages)

### [DVD Recorder Toshiba D-R250SB Owner's Manual](#)

(93 pages)

## Summary of Contents for Toshiba D-R150SB

### [Page 1: Quick Reference](#)

It is important you read and understand the "SAFETY PRECAUTIONS", "IMPORTANT SAFETY INSTRUCTIONS", "Precautions" and other notes that appear in the INSTALLATION GUIDE provided with this TOSHIBA product before you operate your DVD video recorder. The purpose of the "SAFETY PRECAUTIONS", "IMPORTANT SAFETY INSTRUCTIONS", "Precautions" and other notes is to provide you with warnings and safety instructions that will assist in preventing the misuse of your DVD video recorder.

[Page 2](#) Make a connection first. - Plug & Auto Set Up function If you make a simple connection and plug in, your recorder will automatically store TV stations in memory and set its clock (Plug

& Auto Set Up function), to be ready for recording and viewing of TV programmes. Follow the procedure below.

[Page 3](#) Channel setting & clock setting The recorder can also be set up manually. If the Plug & Auto Set Up function failed, or if you want to add or change channels or adjust the clock, follow this procedure. Channel setting OPEN/CLOSE ON/STANDBY The recorder contains a built-in tuner used to receive...

#### [Page 4: Turn On The Recorder](#)

Launching your recorder play. 1 Turn on the TV. OPEN/CLOSE ON/STANDBY 2 Turn on the recorder. Flashing "Loading" means the recorder is preparing. Please wait until it + 10 CLEAR disappears. TIME SLIP INPUT SEL. After disappearing, a current broadcast will appear. TV VOL T.SEARCH PROGRESSIVE...

#### [Page 5: Load A Disc](#)

OPEN/CLOSE To load a disc, press to open the disc tray. DVD-RAM disc with cartridge (TYPE1/TYPE2/TYPE4) Disc without cartridge Face the side to use (for double sided disc) or the printed side (for single sided disc) up, and insert the cartridge into the tray frame following the direction of the arrow on the cartridge.

[Page 6](#) To record programmes For future programme 1 Load a disc which can be recorded. 2 Select "Timer Recording" by ENTER press ENTER Timer Programming 10/2 (Su) 9:00 1/ 1 MENU Exec Date Start Media Mode Rate Audio ENTER "REC MENU Timer Programming" appears. - - - -  
-----...

[Page 7](#) To play recorded contents 1 Select "Play Contents" by ENTER press ENTER "CONTENT MENU (Title List)" appears. e.g. CONTENT DVD-RAM (VR) Title List 1 / 2 Page MENU 001: 2005/10/08 7 : 00 2005/10/08 23 : 00 2 Select a title by ENTER Ch : 4 Ch : 6...

#### [Page 8: Supplied Accessories](#)

Do not disconnect the power plug from a wall outlet while product. the unit is turned on. Toshiba is not liable for any damage caused by neglect of Do not disconnect the power plug from the wall outlet or the instructions described in the owner's manual.