

TOSHIBA

Toshiba e570 Instruction Manual

Pocket pc

1

2

3

4

5

6

7

8

Table Of Contents

9

10

11

12

13

14

 
15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103



•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

Quick Links

[Download this manual](#) See also: [User Manual](#)



Introduction

TOSHIBA Pocket PC e570

Pocket PC e570

Instruction Manual

Table of Contents

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba e570

[Handhelds Toshiba e570 User Manual](#)

E570 user's guide (109 pages)

[Handhelds Toshiba e310 User Manual](#)

Toshiba user's manual pocket pc e310 (104 pages)

[Handhelds Toshiba Pocket PC e350 Specifications](#)

Toshiba pocket pc e350: specifications (1 page)

[Handhelds Toshiba e350 User Manual](#)

Toshiba user's manual pocket pc e350 (105 pages)

[Handhelds Toshiba e355 User Manual](#)

E355 user's guide (116 pages)

[Handhelds Toshiba e400 User Manual](#)

Toshiba pocket pc user's manual e400, e405 (118 pages)

[Handhelds Toshiba Pocket PC e400 Specifications](#)

Toshiba pocket pc e400: specifications (1 page)

[Handhelds Toshiba e740 User Manual](#)

Toshiba user's manual pda e740 (182 pages)

[Handhelds Toshiba FREEDOM E330 User Manual](#)

Toshiba pda user manual (105 pages)

[Handhelds Toshiba e750 User Manual](#)

Toshiba pocket pc user's manual e750 (215 pages)

[Handhelds Toshiba e755 User Manual](#)

Toshiba pocket pc user's guide (187 pages)

[Handhelds Toshiba Pocket PC e750 Specifications](#)

Toshiba pocket pc e750: specifications (2 pages)

[Handhelds Toshiba e800 User Manual](#)

Toshiba pocket pc user's guide (236 pages)

[Handhelds Toshiba Pocket PC e800 Specifications](#)

Toshiba pocket pc e800: specifications (2 pages)

[Handhelds Toshiba Pocket PC e755 Specifications](#)

Toshiba pocket pc e755: specifications (1 page)

[Handhelds Toshiba e830 User Manual](#)

(30 pages)

Summary of Contents for Toshiba e570

[Page 1](#) Introduction TOSHIBA Pocket PC e570 Pocket PC e570 Instruction Manual Instruction Manual...

[Page 2](#) Always store this manual in a convenient place for future reference. Copyright © 2001 by Toshiba Corporation. All rights reserved. Under the copyright laws, this manual cannot be reproduced in any form without the prior written permission of Toshiba. No patent liability is assumed, with respect to the use of the information contained herein.

[Page 3: Safety Instructions](#)

Introduction Safety instructions There are two categories of Safety Instructions included in this manual: Product Warnings, (i.e., what must never be done to assure avoiding those hazards that could cause bodily injury or property damage); and User Directions (i.e., what must always be done to assure the safe use of your Pocket PC).

[Page 4](#) Introduction WARNING Certain locations, such as hospitals, may restrict the use of Pocket PCs and other devices that emit low-level RF energy. Always comply with posted prohibitions of the use of RF-emitting devices, such as in hospitals. Failure to follow such directives could result in the interference with medical equipment and/or devices.

[Page 5](#) Introduction Never drop your Pocket PC or subject it to severe shock. Dropping your Pocket PC or subjecting it to severe shock could cause the built-in battery to leak, ignite and/or rupture. Always immediately remove your Pocket PC and its battery from the vicinity of any open flame in the event the built-in battery leaks liquid or emits an unusual odor.

[Page 6](#) Introduction WARNING Always use the AC Adaptor and the Battery Charger that have been provided with your Pocket PC. Bodily injury or property damage could occur as a result of the use of an unauthorized and incompatible AC Adaptor or Battery Charger in violation of this Warning.

[Page 7](#) Introduction Never use a worn or damaged AC Adaptor Power Supply Cable or plug, or a worn or damaged extension cord or plug. The use of a worn or damaged Power Supply Cable or plug could result in electric shock or fire.

[Page 8](#) Introduction Take care not to sit on your Pocket PC when it is located in the back pocket of trousers, etc. This could cause damage to your Pocket PC or malfunction of the Pocket PC functions. Do not place objects on top of your Pocket PC or drop them on top of your Pocket PC.

[Page 9: Table Of Contents](#)

Table of Contents TOSHIBA Pocket PC e570 Table of Contents Chapter 1 Getting Started
.....1-1 Welcome.....1-1 Where to Find Information.....1-2 Chapter 2 Basic
Skills 2-1 Parts Names and Function2-1 Battery Charging 2-5
Initial Setup 2-7 Setup Method of Options.....

[Page 10](#) Table of Contents Chapter 5 Companion Programs5-1 Pocket
Word..... 5-1 Pocket Excel5-6 MSN Messenger5-7 Windows
Media Player for Pocket PC.....5-11 Microsoft Reader..... 5-12 Chapter 6 Pocket
Internet Explorer..... 6-1 The Mobile Favorites Folder.....6-1 Mobile Favorites

[Page 11: Chapter 1 Getting Started](#)

TOSHIBA Pocket PC e570 Chapter 1 Getting Started Welcome Congratulations on purchasing a TOSHIBA Pocket PC. Due to the size and capabilities of this Pocket PC, you can keep your most important business and personal information up-to-date and close at hand. ®...

[Page 12: Where To Find Information](#)

Getting Started Where to Find Information This book describes your Pocket PC hardware, provides an overview of the programs on your Pocket PC, and explains how to connect your Pocket PC to a desktop computer, a network, or the Internet. For instructions on setting up your Pocket PC and installing ActiveSync, see the Quick Start card.

[Page 13: Chapter 2 Basic Skills](#)

Basic Skills TOSHIBA Pocket PC e570 Chapter 2 Basic Skills You can easily learn to use your Pocket PC. This chapter describes the use and customization of your Pocket PC. Parts Names and Function Main unit (front view) Alarm Lamp LED...

[Page 14](#) Basic Skills The USB Cradle Initial Setting of Program Button Program button 1 = Calendar Program button 2 = Tasks Program button 3 = Home Program button 4 = Contacts Program button 5 = Voice recorder Main unit (back view) Stylus Holder CF Card slot SD Card Slot...

[Page 15: Power Button](#)

Basic Skills Power Button The power button turns the unit and the front light on and off. Power button When the power is When the power is Press it for some time. The power turns on. The front light alternately turns on/off. Press it quickly.

Page 16 Basic Skills How to Use the Stylus The stylus is used for menu selection or data input on the touch-screen of the Pocket PC. Tap: Touch the screen once with the stylus to open items and select options. Drag: Hold the stylus on the screen and drag it across to select text and images.

[Page 17: Battery Charging](#)

Basic Skills Battery Charging A built-in battery is installed in the Pocket PC. When using the Pocket PC for the first time, set the battery switch to the supply side, then charge the built-in battery with the supplied AC adaptor. **How to Charge the Battery** You can use two charging methods.

[Page 18: Battery Life](#)

Basic Skills How to Prolong Battery Life Use the Pocket PC with the AC adaptor. When you use the Pocket PC under the following conditions, the power consumption will be large. Please use the AC adaptor when: The Pocket PC is operated while connected to your computer. The Pocket PC is operated with storage card or with any other optional equipment.

[Page 19: Initial Setup](#)

Basic Skills Initial Setup When using the Pocket PC for the first time, carry out initial setup according to the procedures below after a built-in battery has been charged. Press the power button to turn the power on. The Welcome screen appears.

[Page 20: Setup Method Of Options](#)

Basic Skills Setup Method of Options Method of Setting Card into CF Card Slot To insert a card: Turn off the power. Open the card cover. Insert the CF card confirming the direction of the card. Line up side groove of the card and the groove edge of the card slot. Insert the card smoothly and completely to the end.

Page 21 Basic Skills Method of Setting Card into SD Card Slot To insert a card: Turn off the power. Open the card cover. Insert the card with its contact surface (metal contact surface) facing backward into the Pocket PC. To remove a card: Turn off the power.

Page 22 Basic Skills To connect Remote Control-Fitted Earphone Microphone You can listen to the sound output from your Pocket PC by connecting the optional remote control-fitted earphone microphone. (See Quick Start Card.) Insert the remote control-fitted earphone plug into the stereo headphone jack as shown in the figure below.

Page 23 Basic Skills Connecting to a Desktop Computer Before connecting your Pocket PC to a desktop computer, check the follows. ActiveSync has been installed on your desktop. (See Chapter 3.) Make sure that the Pocket PC and the desktop computer are both turned off.

Page 24 Basic Skills To connect using a separately sold serial cradle: Connect the serial cradle to the serial port of the desktop computer. Connect the Pocket PC to the serial cradle. To connect directly using a connection cable: Connect the Pocket PC directly to your desktop computer using a USB cable (sold separately).

[Page 25: Today Screen](#)

Basic Skills Today Screen When you turn on your Pocket PC for the first time each day (or after 4 hours of inactivity), you'll see the Today screen. You can also display it by tapping and then Today. On the Today screen, you can see at a glance important information for the day.

[Page 26: Programs](#)

Basic Skills Status Icon Meaning Synchronization is occurring Notification that one or more instant messages were received Notification that one or more e-mail messages were received If more notification icons need to be displayed than there is room to display them, the Notification

icon, , will display.

[Page 27](#) **Basic Skills** The following table contains a partial list of programs that are on your Pocket PC. Look on the Pocket PC Companion CD for additional programs that you can install onto your Pocket PC. Icon Program Description ActiveSync Synchronize information between your Pocket PC and desktop computer.

[Page 28: Navigation Bar And Command Bar](#)

Basic Skills Navigation Bar and Command Bar The navigation bar is located at the top of the screen. It displays the active program and current time, and allows you to switch to programs and close screens. Use the command bar at the bottom of the screen to perform tasks in the open program.

[Page 29: Pop-Up Menus](#)

Basic Skills Pop-up Menus With pop-up menus, you can quickly choose an action for an item. For example, you can use the pop-up menu in the contact list to quickly delete a contact, make a copy of a contact, or send an e-mail message to a contact.

[Page 30: Enter Information On Your Pocket Pc](#)

Basic Skills Enter Information on Your Pocket PC You have several options for entering new information: Use the input panel to enter typed text by using the soft keyboard or other input method. Write directly on the screen. Draw pictures on the screen. Speak into your Pocket PC microphone to record a message.

[Page 31](#) **Basic Skills** When you use the input panel, your Pocket PC anticipates the word you are typing or writing and displays it above the input panel. When you tap the displayed word, it is inserted into your text at the insertion point. The more you use your Pocket PC, the more words it learns to anticipate.

[Page 32: Writing On The Screen](#)

Basic Skills To use Block Recognizer: With Block Recognizer you can input character strokes using the stylus that are similar to those used on other devices. Tap the arrow next to the Input Panel button and then Block Recognizer. Write a letter in the box. When you write a letter, it is converted to typed text that appears on the screen.

[Page 33](#) **Basic Skills** To write on the screen: Tap the Pen button to switch to writing mode. This action displays lines on the screen to help you write. Tap the Pen button and use your stylus like a pen. Some programs that accept writing may not have the Pen button. See the documentation for that program to find out how to switch to writing mode.

[Page 34](#) **Basic Skills** To convert writing to text: Tap Tools and then Recognize. If you want to convert only certain words, select them before tapping Recognize on the Tools menu (or tap and hold the selected words and then tap Recognize on the pop-up menu). If a word is not recognized, it is left as writing.

[Page 35](#) **Basic Skills** If the conversion is incorrect, you can select different words from a list of alternates or return to the original writing. To do so, tap and hold the incorrect word (tap one word at a time). On the pop-up menu, tap Alternates.

[Page 36: Drawing On The Screen](#)

Basic Skills Drawing on the Screen You can draw on the screen in the same way that you write on the screen. The difference between writing and drawing on the screen is how you select items and how they can be edited. For example, selected drawings can be resized, while writing cannot.

[Page 37: Recording A Message](#)

Basic Skills Recording a Message In any program where you can write or draw on the screen, you can also quickly capture thoughts, reminders, and phone numbers by recording a message. In Calendar, Tasks, and Contacts, you can include a recording in the Notes tab.

[Page 38: Using My Text](#)

Basic Skills Using My Text When using Inbox or MSN Messenger, use My Text to quickly insert preset or frequently used messages into the text entry area. To insert a message, tap My Text and tap a message. Tap to select a prewritten message. You can add text after inserting a My Text message before sending it.

[Page 39: Find And Organize Information](#)

Basic Skills Find and Organize Information The Find feature on your Pocket PC helps you quickly locate information. On the menu, tap Find. Enter the text you want to find, select a data type, and then tap Go to start the search. To quickly find information that is taking up storage space on your Pocket PC, select Larger than 64 KB in Type.

[Page 40: Customize Your Pocket Pc](#)

Basic Skills Customize Your Pocket PC You can customize your Pocket PC by adjusting the settings and installing additional software. Adjusting Settings You can adjust device settings to suit your preferences. To see available options, tap , Settings, then the Personal or System tab located at the bottom of the screen.

[Page 41](#) Basic Skills Read any installation instructions, Read Me files, or documentation that comes with the program. Many programs provide special installation instructions. Connect your Pocket PC and desktop computer. Double-click the *.exe file. If the file is an installer, the installation wizard will begin. Follow the directions on the screen.

[Page 42](#) Basic Skills To add a program to the Start menu: , Settings, Menus, the Start Menu tab, and then the check box for the program. If you do not see the program listed, you can either use File Explorer on the Pocket PC to move the program to the Start Menu folder or use ActiveSync on the desktop computer to create a shortcut to the program and place the shortcut in the Start Menu folder.

[Page 43](#) Basic Skills To Set Front Light You can set the screen brightness for better sight according to a place of use. You can also set the time that elapses until the front light turns off automatically after the last operation. and then Settings.

[Page 44](#) Basic Skills Setting Power You can set to confirm the built-in battery remaining power and the time that elapses until the power turns off after the last operation. and then Settings. On the System tab, tap Power. Set the Power. Displays the built-in battery remaining power.

[Page 45](#) Basic Skills To confirm usage status of a storage card: Tap Storage card tab on the Memory setting screen. Capacity of a storage card being inserted. Free space. Capacity in use. When finished, tap OK to return to the System tab screen. If storage cards are inserted both in the CF card slot and the SD card slot, the usage status is displayed only for one (basically, the firstly inserted one) of these cards.

[Page 46: Chapter 3 Microsoft Activesync](#)

Microsoft ActiveSync TOSHIBA Pocket PC e570 Chapter 3 Microsoft ActiveSync ® ® Using Microsoft ActiveSync , you can synchronize the information on your desktop computer with the information on your Pocket PC. Synchronization compares the data on your Pocket PC with your desktop computer and updates both computers with the most recent information.

[Page 47](#) Microsoft ActiveSync After installation is complete, the ActiveSync Setup Wizard helps you connect your Pocket PC to your desktop computer, set up a partnership so you can synchronize information between your Pocket PC and your desktop computer, and customize your synchronization settings. Your first synchronization process will automatically begin when you finish using the wizard.

[Page 48: Chapter 4 Microsoft Pocket Outlook](#)

Microsoft Pocket Outlook TOSHIBA Pocket PC e570 Chapter 4 Microsoft Pocket Outlook ® Microsoft Pocket Outlook includes Calendar, Contacts, Tasks, Inbox, and Notes. You can use these programs individually or together. For example, e-mail addresses stored in Contacts can be used to address e- mail messages in Inbox.

[Page 49: Calendar: Scheduling Appointments And Meetings](#)

Microsoft Pocket Outlook Calendar: Scheduling Appointments and Meetings Use Calendar to schedule appointments, including meetings and other events. You can check your appointments in one of several views (Agenda, Day, Week, Month, and Year) and easily switch views by tapping one of the 5 view icons at the bottom of the screen or by pressing the Calendar Program (button #1 on front of Pocket PC).

[Page 50](#) Microsoft Pocket Outlook To create an appointment: If you are in Day or Week view, tap the desired date and time for the appointment. Tap New. Tap to return to the calendar (the appointment is saved automatically). Tap to choose from predefined text. Tap to choose from previously entered locations.

[Page 51: Using The Summary Screen](#)

Microsoft Pocket Outlook Using the Summary Screen When you tap an appointment in Calendar, a summary screen is displayed. To change the appointment, tap Edit. View appointment details. View. Tap to change appointment. Creating Meeting Requests You can use Calendar to set up meetings with users of Outlook or Pocket Outlook.

[Page 52: Contacts: Tracking Friends And Colleagues](#)

Microsoft Pocket Outlook Contacts: Tracking Friends and Colleagues Contacts maintains a list of your friends and colleagues so that you can easily find the information you're looking for, whether you're at home or on the road. Using the Pocket PC infrared (IR) port, you can quickly share Contacts information with other device users.

[Page 53: Finding A Contact](#)

Microsoft Pocket Outlook To create a contact: Tap New. Tap to return to the contact list (the contact is saved automatically). Scroll to see more fields. Notes is a good place for maps and directions. Using the input panel, enter a name and other contact information. You will need to scroll down to see all available fields.

[Page 54](#) Microsoft Pocket Outlook Using the Summary Screen When you tap a contact in the contact list, a summary screen is displayed. To change the contact information, tap Edit. View contact details. Tap to change contact information. Tap to view notes. Instruction Manual...

[Page 55: Tasks: Keeping A To Do List](#)

Microsoft Pocket Outlook Tasks: Keeping a To Do List Use Tasks to keep track of what you have to do. Select the category of tasks you want displayed in the list. Select the sort order of the list. Indicates high priority. Tap to display or edit the task details.

[Page 56](#) Microsoft Pocket Outlook To create a task: Tap New. Tap to return to the task list (the task is saved automatically). Tap to choose from predefined subjects. Notes is a good place for maps and drawings. Using the input panel, enter a description. You can enter a start date and due date or enter other information by first tapping the field.

[Page 57](#) Microsoft Pocket Outlook Using the Summary Screen When you tap a task in the task list, a summary screen is displayed. To change the task, tap Edit. View task details. Tap to show and hide additional summary information. View notes. Tap to change task.

[Page 58: Notes: Capturing Thoughts And Ideas](#)

Microsoft Pocket Outlook Notes: Capturing Thoughts and Ideas Quickly capture thoughts, reminders, ideas, drawings, and phone numbers with Notes. You can create a written note or a recording. You can also include a recording in a note. If a note is open when you create the recording, it will be included in the note as an icon.

[Page 59: Inbox: Sending And Receiving E-Mail Messages](#)

Microsoft Pocket Outlook To create a note: Tap New. Create your note by writing, drawing, typing, and recording. For more information about using the input panel, writing and drawing on the screen, and creating recordings, see Chapter 2. Tap to return to the note list (the note is saved automatically).

[Page 60](#) Microsoft Pocket Outlook E-mail messages in the Outbox folder on your Pocket PC are transferred to Exchange or Outlook, and then sent from those programs. E-mail messages in

subfolders must be selected in ActiveSync on your desktop computer in order to be transferred. You can also synchronize e-mail messages with your desktop computer from a remote location.

[Page 61: Using The Message List](#)

Microsoft Pocket Outlook Using the Message List Messages you receive are displayed in the message list. By default, the most recently received messages are displayed first in the list. Select the service and folder you want to display. Select the sort order for messages. Tap and hold to display a pop-up menu of actions.

[Page 62: Composing Messages](#)

Microsoft Pocket Outlook When you connect to your e-mail server or synchronize with your desktop computer, by default, you'll receive messages from the last five days only, the first 100 lines of each new message, and file attachments of less than 100 KB in size.

[Page 63](#) Microsoft Pocket Outlook Compose your message. To enter preset or frequently used messages, tap My Text and select a message. Tap Send when you've finished the message. If you are working offline, the message is moved to the Outbox folder and will be sent the next time you connect.

[Page 64: Chapter 5 Companion Programs](#)

Companion Programs TOSHIBA Pocket PC e570 Chapter 5 Companion Programs ® ® The companion programs consist of Microsoft Pocket Word, Microsoft ® Pocket Excel, Microsoft Money, Windows Media Player for Pocket PC, ® and Microsoft Reader. To switch to a companion program on your Pocket PC, tap Programs on menu, and then tap the program name.

[Page 65](#) Companion Programs Pocket Word contains a list of the files stored on your Pocket PC. Tap a file in the list to open it. To delete, make copies of, and send files, tap and hold a file in the list. Then, select the appropriate action on the pop-up menu.

[Page 66: Typing Mode](#)

Companion Programs Typing Mode Using the input panel, enter typed text into the document. For more information on entering typed text, see Chapter 2. To format existing text and to edit text, first select the text. You can select text as you do in a Word document, using your stylus instead of the mouse to drag through the text you want to select.

[Page 67: Writing Mode](#)

Companion Programs Writing Mode In writing mode, use your stylus to write directly on the screen. Ruled lines are displayed as a guide, and the zoom magnification is greater than in typing mode to allow you to write more easily. For more information on writing and selecting writing, see Chapter 2.

[Page 68: Drawing Mode](#)

Companion Programs Drawing Mode In drawing mode, use your stylus to draw on the screen. Gridlines appear as a guide. When you lift your stylus off the screen after the first stroke, you'll see a drawing box indicating the boundaries of the drawing. Every subsequent stroke within or touching the drawing box becomes part of the drawing.

[Page 69: Pocket Excel](#)

Companion Programs Pocket Excel Pocket Excel works with Microsoft Excel on your desktop computer to give you easy access to copies of your spreadsheets. You can create new spreadsheet on your Pocket PC, or you can copy spreadsheets from your desktop computer to your Pocket PC.

[Page 70: Msn Messenger](#)

Companion Programs Tips for Working in Pocket Excel Note the following when work in large spreadsheets in Pocket Excel: View in full-screen mode to see as much of your spreadsheet as possible. Tap View and then Full Screen. To exit full-screen mode, tap Restore.

[Page 71: Working With Contacts](#)

Companion Programs Setting Up Before you can connect, you must enter Passport or Exchange account information. To set up an account and sign in: In the Tools menu, tap Options. On the

Accounts tab, enter your Passport or Exchange account information.

[Page 72: Chatting With Contacts](#)

Companion Programs Chatting with Contacts Tap a contact name to open a chat window. Enter your message in the text entry area at the bottom of the screen, or tap My Text to enter a preset message, and tap Send. To invite another contact to a multi-user chat, in the Tools menu, tap Invite and tap the contact you wish to invite.

[Page 73](#) Companion Programs To know if the contact you are chatting with is responding, look for the message under the text entry area. View full chat. View status of the chat. For more information on using MSN Messenger, tap and then Help. Instruction Manual 5-10...

[Page 74: Windows Media Player For Pocket Pc](#)

Companion Programs Windows Media Player for Pocket PC Use Microsoft Windows Media Player for Pocket PC to play digital audio and video files that are stored on your Pocket PC or on a network. To switch to Windows Media Player for Pocket PC, tap, Programs, and then tap Windows Media.

[Page 75: Microsoft Reader](#)

Companion Programs Microsoft Reader Use Microsoft Reader to read eBooks on your Pocket PC. Download books to your desktop computer from your favorite eBook Website. Then, use ActiveSync to copy the book files to your Pocket PC. The books appear in the Reader Library. Each book consists of a cover page, an optional table of contents, and the pages of the book.

[Page 76: Using The Library](#)

Companion Programs Using the Library The Library is your Reader home page; it displays a list of all books stored on your Pocket PC or storage card. To open the Library: On the Reader command bar, tap Library. On a book page, tap the book title, and then tap Library on the pop-up menu.

[Page 77: Using Reader Features](#)

Companion Programs You can also page through a book by using the Up/Down control on your Pocket PC. Tap to select a navigation option. Drag to select text and then tap an option. Tap arrows to turn the page, or tap and hold page # to bring up page riffle.

[Page 78: Removing A Book](#)

Companion Programs Drawings. When you add a drawing, a Drawing icon appears in the bottom-left corner of the page, and drawing tools appear across the bottom of the page. Draw by dragging your stylus. To see a list of a book's annotations, including bookmarks, highlights, text notes, and drawings, tap Annotations Index on the book's cover page.

[Page 79: Chapter 6 Pocket Internet Explorer](#)

Pocket Internet Explorer TOSHIBA Pocket PC e570 Chapter 6 Pocket Internet Explorer ® Use Microsoft Pocket Internet Explorer to view Web or WAP pages in either of these ways: During synchronization with your desktop computer, download your favorite links and mobile favorites that are stored in the Mobile Favorites subfolder in Internet Explorer on the desktop computer.

[Page 80: Mobile Favorites](#)

Pocket Internet Explorer Mobile Favorites If you are using Microsoft Internet Explorer 5.0 or later on your desktop computer, you can download mobile favorites to your Pocket PC. Synchronize the web content of your mobile favorites downloads your Pocket PC so that you can view pages while you are disconnected from your ISP and desktop computer.

[Page 81: Using Avantgo Channels](#)

Pocket Internet Explorer Using AvantGo Channels AvantGo is a free interactive service that gives you access to personalized content and thousands of popular Web sites. You subscribe to AvantGo channels directly from your Pocket PC. Then, you synchronize your Pocket PC and desktop computer, or connect to the Internet to download the content.

[Page 82](#) Pocket Internet Explorer To view mobile favorites and channels: Tap the Favorites button to display your list of favorites. Tap the favourite you want to view. Tap to add or delete

a folder or favourite link. Tap the page you want to view. You'll see the page that was downloaded the last time you synchronized with your desktop computer.

[Page 83: Chapter 7 Getting Connected](#)

Getting Connected TOSHIBA Pocket PC e570 Chapter 7 Getting Connected You can use your Pocket PC to exchange information with other mobile devices as well as your desktop computer, a network, or the Internet. You have the following connection options: Use the infrared (IR) port on your Pocket PC to send and receive files between two devices.

[Page 84: Connect To The Internet](#)

Getting Connected Tap and hold the item, and tap Beam Item on the pop-up menu. You can also send items, but not folders, from File Explorer. Tap and hold the item you want to send, and then tap Beam File on the pop-up menu. To receive information: Align the IR ports so that they are unobstructed and within a close range.

[Page 85](#) Getting Connected In the Dialing Locations tab, specify your current location and phone type (most phone lines are tone). These settings will apply to all connections you create. To start the connection, simply start using one of the following programs. Your Pocket PC will automatically begin connecting.

[Page 86: Connect To Work](#)

Getting Connected Connect to Work If you have access to a network at work, you can send e-mail messages, view intranet pages, synchronize your Pocket PC, and possibly access the Internet. You can connect to work in one of two ways: Create a modem connection by using a RAS account.

[Page 87: End A Connection](#)

Getting Connected Send and receive instant messages with MSN Messenger. For more information, see "MSN Messenger", in Chapter 5. Synchronize. For more information, see ActiveSync Help on the desktop computer. To create an Ethernet connection to a network: You do not need to create a new connection on your Pocket PC. Instead, you must purchase and configure an Ethernet card that is compatible with your Pocket PC.

[Page 88: Connect Directly To An E-Mail Server](#)

Getting Connected Connect Directly to an E-mail Server You can set up a connection to an e-mail server so that you can send and receive e-mail messages by using a modem or network connection and Inbox on your Pocket PC. The ISP or network must use a POP3 or IMAP4 e-mail server and an SMTP gateway.

[Page 89: Chapter 8 Optional Functions](#)

Optional Functions TOSHIBA Pocket PC e570 Chapter 8 Optional Functions Home You can launch the built-in or installed applications easily by tapping the icon displayed on the Home screen. You can also set to display a desired bitmap image on your screen background.

[Page 90](#) Optional Functions Also, you can launch an application by moving the cursor button to select and pressing the center of the cursor button to confirm. You can add tabs up to a maximum of 10 kinds and icons up to 18 in a tab.

[Page 91](#) Optional Functions Display Icon List The following list shows the tabs and icons for the initial setup. Tabs Icons Applications Running — — Main Pocket Internet Explorer Windows Media Player Notes Tasks Inbox Calendar Contacts Pocket Word Pocket Excel Calculator Programs File Explorer Backup...

[Page 92](#) Optional Functions To move using drag and drop: Tap the icon you want to move and drag it to the destination tab, and then drop it. The icon is transferred and that icon in the original tab screen is deleted. If the icon is dragged and dropped in the same tab, it will return to its original position on the tab screen.

[Page 93](#) Optional Functions Enter an icon name in the Application name box, which is to be displayed on the Home screen. You can enter up to a maximum of 32 characters. When finished, tap OK to close the Add Application screen, and the new icon is added to the Home

screen.

[Page 94: How To Make A Backup](#)

Optional Functions To change a background: Select the background setup tab on the Tab Settings menu, and then tap Browse to display the Browse Dialog screen. Even if a storage card is inserted, the files in the storage card will not be displayed.

[Page 95](#) Optional Functions Making a Backup Insert a storage card. , Programs, and then Backup to display the Backup screen. Select Backup from Functionality, then select and tap Storage Card 1 or Storage Card 2 from Media. Select Backup from Functionality. When an SD memory card and a CompactFlash card are inserted in the slots, check which one is Storage Card 1 or Storage Card 2 by looking at...

[Page 96](#) Optional Functions Input password. Enter a password. You can enter a password up to a maximum of 16 characters. A backup can be made even without entry of a password. If a password is entered, that password is required at the time of restore. If you forget the password, you cannot restore the backup data.

[Page 97](#) Optional Functions Select Restore from Functionality, then select and tap Storage Card 1 or Storage Card 2 from Media. Select Restore from Functionality. When an SD memory card and a CompactFlash card are inserted in the slots, check which one is Storage Card 1 or Storage Card 2 by looking at the storage capacity of the card.

[Page 98](#) Optional Functions Deleting a Backup File. Insert the storage card, which contains backup data to delete. , Programs, and then Backup to display the Backup screen. Select Delete Backup File from Functionality, then select and tap Storage Card 1 or Storage Card 2 from Media. Select Delete Backup File from Functionality.

[Page 99: Chapter 9 Additional Information](#)

Additional Information TOSHIBA Pocket PC e570 Chapter 9 Additional Information Trouble Shooting Check the following guide for the possible cause of a problem and how to correct it. Symptom Cause Correction Even if the power button is The built-in battery power is Charge the battery.

[Page 100](#) Additional Information Symptom Cause Correction The operation is slow in Insufficient memory Secure the free memory. response. Quit the application if it is not in use. Some malfunction Reset the system. If no action is observed after resetting the system, initialize the system.

[Page 101: Resetting](#)

Additional Information Resetting Reset is equal to "Restart" of a desktop computer. Carry out the reset in such unusual case as when a button or tapping the screen does not respond. When your Pocket PC is reset, all data that was not stored during operation will be deleted.

[Page 102: Specifications](#)

Additional Information Specifications External dimensions 77.5(W) x 17.5(D) x 125(H)mm (excluding protrusion part) Operating conditions Temperature: 0°C to 40°C, Humidity: 30 to 80% RH, when only the Pocket PC is operating Temperature capable of charging: 5°C to 35°C Built-in battery Type Advanced Lithium Ion battery Continuing...

[Page 103](#) Additional Information Interfaces Possible to insert CompactFlash card or CF card slot CF+Card. Applicable only to Type I/Type II, 3.3V Possible to insert SD memory card or SDI/O card SD card slot Note: The security function of the SD memory card is not usable.