



# Toshiba SD-260E E User Manual

- dvd/cd-da/cd-r/cd-rw playback - vcd (video cd)/svcd playback - m 3 playback - jpeg/mpeg playback - divx /mpeg4 playback - 2 p channel analog audio output - coaxial digital audio output - component video output



1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36

--

---

•

[Table of Contents](#)

- 

Troubleshooting

•

## Bookmarks



## Quick Links

[1 Notes on Discs](#)

[2 Disc Types Compatible with this Unit](#)

[3 Rear Panel Connections](#)


[4 Connection of Your DVD Player with Tv](#)

[5 DVD Playback](#)

[6 Troubleshooting](#)

## 7 Specifications

[Download this manual](#)

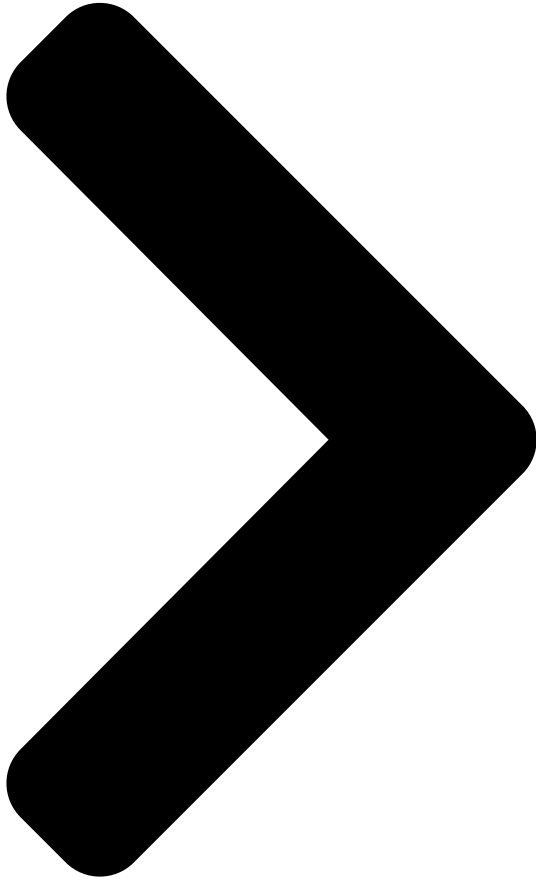

Model Name: SD-260E E

This model has the following features:

- DVD/CD-DA/CD-R/CD-RW Playback
- VCD (Video CD)/ SVCD Playback
- M 3 Playback

P

- JPEG/MPEG Playback
- DivX /MPEG4 Playback
- 2

# Channel analog audio output

- Coaxial Digital Audio output

- Component Video Output

Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories. Confidential unpublished works. Copyright 1992-1997 Dolby Laboratories, Inc. All rights reserved.

This product incorporates copyright protection technology that is protected by

method claims of certain U.S. patents and other intellectual property rights

owned by Macrovision Corporation and other rights owners. Use of this

copyright protection technology must be authorized by Macrovision

Corporation, and is intended for home and other limited viewing uses only

unless otherwise authorized by Macrovision Corporation. Reverse

engineering

"DTS" and "DTS Digital Out" are trademarks of Digital Theater Systems, Inc.

S

or  
disassembly

- 1 -

is  
prohibited.

[Table of Contents](#)

[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Toshiba SD-260E E

### [Turntable Toshiba SD-260ESE Manual](#)

(34 pages)

### [DVD Player Toshiba SD-260SA Owner's Manual](#)

Toshiba dvd video player owner's manual (61 pages)

### [DVD Player Toshiba SD-2800 Owner's Manual](#)

Dvd video player (61 pages)

### [DVD Player Toshiba SD-2815 Service Manual](#)

Dvd video player (180 pages)

### [DVD Player Toshiba SD-2700 Owner's Manual](#)

Toshiba dvd video player sd-2700 (51 pages)

### [DVD Player Toshiba SD-2705U Owner's Manual](#)

Sd-2705u user's guide (46 pages)

### [DVD Player Toshiba SD-2805 Owner's Manual](#)

Dvd player owner's manual model : sd-2805 (30 pages)

### [DVD Player Toshiba SD-2200 Owner's Manual](#)

(49 pages)

### [DVD Player Toshiba SD-2710 Owner's Manual](#)

Video (50 pages)

### [DVD Player Toshiba SD2010KB Owner's Manual](#)

Sd2010 dvd player with usb (28 pages)

### [DVD Player Toshiba SD-2107 Owner's Manual](#)

Dvd video player (42 pages)

### [DVD Player Toshiba SD-K615 Service Manual](#)

Dvd video player (83 pages)

### [DVD Player Toshiba SD-290 Owner's Manual](#)

(28 pages)

### [DVD Player TOSHIBA SD-210EB Owner's Manual](#)

Dvd video player (52 pages)

### [DVD Player Toshiba SD-2550A Service Manual](#)

(109 pages)

### [DVD Player Toshiba SD-220EB Service Manual](#)

(138 pages)

## Summary of Contents for Toshiba SD-260E E

[Page 1](#) Model Name: SD-260E E This model has the following features: - DVD/CD-DA/CD-R/CD-RW Playback - VCD (Video CD)/ SVCD Playback - M 3 Playback - JPEG/MPEG Playback - DivX /MPEG4 Playback Channel analog audio output - Coaxial Digital Audio output - Component Video Output Manufactured under license from Dolby Laboratories.

### [Page 2: Table Of Contents](#)

TABLE OF CONTENTS TABLE OF CONTENTS .....2 ABOUT THIS MANUAL .....3 SAFETY INFORMATION .....3 WARNING ..... 4 SAFETY PRECAUTIONS I .....4 SAFETY PRECAUTIONS II ..... 6 NOTES ON CD-R AND CD-RW DISCS .....6 NOTES ON DISCS

### [Page 3: About This Manual](#)

ABOUT THIS MANUAL Instructions in this manual describe the controls on the player. You can also use the controls on the remote if they have the same function as those on the DVD player. Dear Customers We would like to thank you for purchasing this DVD player. We strongly recommend you to study the operating instructions carefully before attempting to operate the unit and note the listed safety precautions.

### [Page 4: Warning](#)

WARNING To reduce the risk of fire or electric shock, do not expose this equipment to rain or moisture. To reduce the risk of fire or electric shock, and any interference, use the recommended accessories only. WARNING SAFETY PRECAUTIONS I Power Source The unit should be operated only from a 220-240V~ 50 Hz outlet.

[Page 5](#) DON'T obstruct the ventilation openings of the equipment with items such as newspapers, tablecloths, curtains, etc. Overheating will cause damage and shorten the life of the equipment. DON'T allow electrical equipment to be exposed to dripping or splashing, or objects filled with liquids, such as vases, to be placed on the equipment.

### [Page 6: Safety Precautions li](#)

SAFETY PRECAUTIONS II Notes on copyrights: It is forbidden by law to copy, broadcast, show, broadcast via cable, play in public, or rent copyright material without permission. This product is equipped with copy protection measures developed by Macrovision. Copy protection signals are recorded on some discs.

### [Page 7: Notes On Discs](#)

NOTES ON DISCS On handling discs • To keep the disc clean, handle the disc by its edge. Do not touch the surface. • Do not stick paper or tape on the disc. • If the disc is contaminated with any substance like glue, remove before using it. •...

### [Page 8: Supplied Accessories](#)

SUPPLIED ACCESSORIES In the packaging material, you will find the following: (a) Remote control (b) Two R03 (AAA) batteries for remote control. (c) Owner's Manual - 8 -...

### [Page 9: Disc Types Compatible With This Unit](#)

DISC TYPES COMPATIBLE WITH THIS UNIT This player can play the following discs. Disc Types Recording Disc Size Max. Characteristics (Logos) Types Playing Time Single - • sided; 240 min. DVD contains excellent sound and video 12 cm due to Dolby Digital and MPEG-2 System. Double - Audio sided;...

### [Page 10: General Properties](#)

GENERAL PROPERTIES ® 1) DVD/VCD/SVCD/CD-DA/CD-R/CD-RW/MP3/JPEG/MPEG4/DivX playback 2) NTSC/PAL playback 3) User-friendly multi-language OSD menu control 4) Vacuum Fluorescent Display (VFD) 5) Dolby Digital, DTS, MPEG Multi-channel, LPCM audio via coaxial digital audio output 6) Multiple Aspect Ratio support (16:9 Widescreen, 4:3 Letterbox, 4:3 Pan & Scan) 7) Multi-Audio (up to 8) support (According to disc content) 8) Multi-Subtitle (up to 32) support (According to disc content) 9) Multi-Angle (up to 9) support (According to disc content)

### [Page 11: Front Panel Functions](#)

FRONT PANEL FUNCTIONS 1. Disc Tray Place a disc on the tray. 2. Front Panel Display (VFD) Indicates the playing time, title, chapter/track, etc. 3. OPEN/CLOSE ( ) button Opens or closes the disc tray. 4. STOP button Stops playing disc. 5.

### [Page 12: Front Panel Display](#)

FRONT PANEL DISPLAY 1. Play/Pause 2. Current Disc 3. Time or Title / Chapter / Track Number 4. Dolby Digital / DTS 5. Zoom 6. Title Number 7. Angle 8. Chapter / Track Number 9. Repeat - 12 - ...



## [Page 13: Rear Panel Connections](#)

REAR PANEL CONNECTIONS 1. DIGITAL OUT (COAXIAL) connector Connects to an audio component using the coaxial digital connection cord. 2. VIDEO OUT connector Connects to the video input connector on the TV. 3. AUDIO connectors Connects to the AV amplifier or audio input connector on the TV by using 2 cords (Left, Right). 4.

## [Page 14: Connection Of Your Dvd Player With Tv](#)

CONNECTION OF YOUR DVD PLAYER WITH TV Be sure to turn off the power of each component before making the connections. Scart socket: RGB signal via scart cable gives you the best picture performance. If your DVD player will not be connected to a hi-fi set or A/V amplifier to hear better sound, scart is enough for both audio &...

## [Page 15: Component Video \(Ypbpr\)](#)

COMPONENT VIDEO (YP ) / PROGRESSIVE SCAN & CONNECTION Component Video (YP ) output jacks can be used to have the best picture quality. Your TV set must have component video (YP ) input connectors for this type of connection. These jacks are used for only video connection. For audio, red &...

## [Page 16: Connection Of Your Dvd Player With Av Amplifier](#)

CONNECTION OF YOUR DVD PLAYER WITH AV AMPLIFIER Be sure to turn off the power of each component before making the connections. Analog Audio Output Sockets: To get better sound quality, the unit can be connected to an amplifier via analog audio left/right outputs. HI-FI Tuner Video Output...

[Page 17](#) Digital Audio Output Socket: For the best sound, the unit can be connected from the coaxial digital audio output to an AV amplifier with a built-in Dolby Digital or DTS decoder. By using 6 speakers, user can enjoy the 5.1 channel surround sound. ¥...

## [Page 18: Fitting Batteries In Your Remote Control](#)

FITTING BATTERIES IN YOUR REMOTE CONTROL ® First open the battery cover on the underside of the remote control. Fit both batteries 1.5Volt (R03/AAA) referring to the imprinted symbols (+/-) in the battery case and put on the battery cover again. While using the remote control, direct it towards the front of the DVD player.

[Page 19](#) 17. SUBTITLE button 1. TIME button Changes the language of the subtitle while playing a DVD. Changes the playing time display mode of the disc, title, track etc., on the OSD and front panel display. 18. ANGLE button 2. OPEN/CLOSE ( ) button Changes the angle when playing a DVD disc recorded with multiple angles.

## [Page 20: Dvd Playback](#)

For your reference: DVD PLAYBACK “ W hen appears while a button is being pressed, it means that the corresponding operation is prohibited by the player. Preparations Stopping Play Turn on your audio system if the player is connected to an audio system.

## [Page 21: Direct Selection Of Scenes](#)

Selecting Scenes by Time DIRECT SELECTION OF SCENES You can view the DVD starting from any time point you want. Selecting Scenes by Chapter Number Press SEARCH on the remote control twice during playback. Press SEARCH on the remote control once during playback.

## [Page 22: Convenient Functions](#)

Displaying / Changing Subtitle Language CONVENIENT FUNCTIONS It is possible to change the subtitle language from the one selected at the initial settings to a different language, if available. Displaying the time information (This operation works only with discs on which multiple Press SETUP/DISP during playback.

## [Page 23: Video Cd Playback](#)

The number of recorded angles differs depending on the disc used. VIDEO CD PLAYBACK “ x ” is displayed on the screen during playback. This indicates that the multi-angle scene has just started. Also Preparations on unit’s display (VFD) “ANGLE” message appears. You Turn on your audio system if the player is connected to an will see in the upper-right corner of the screen the

number audio system.

## [Page 24: Direct Selection Of Scenes](#)

¥ After operation NOTE: When the unit is not in use, remove the disc and press ON/ • Reverse stepping is not available. STANDBY to turn the unit to standby mode. Slow Motion Play Forward ¥ NOTE: Press SLOW during playback.

## [Page 25: Convenient Functions](#)

Repeating a section between two specific points AUDIO CD PLAYBACK (A - B repeat) Preparations Press A-B RPT during playback at the point where repeat play is to commence (A). Turn on your audio system if the player is connected to an "A TO B SET A"...

## [Page 26: Direct Selection Of Tracks](#)

A track is skipped forward or backward each time the Repeating a section between two specific points button is pressed. (A - B repeat) Pause Press A-B RPT during playback at the point where repeat play is to commence (A). Press PLAY/PAUSE during playback.

## [Page 27: Smart Navi](#)

¥ Subtitle Selection for MPEG4, DivX(R), X-Vid: NOTE: • If you attempt to enter a number greater than the total number of tracks on disc, the search box disappears and Files with ' ' logo are subtitles files. Subtitle files with "...

## [Page 28: Using Setup Menu](#)

Instant Skip / Backward Program Function Press PROGRAM to select program mode in stop mode. ® Only for DivX files: PROGRAM Message appears. ® Press key for instant skip / backward during DivX Press number buttons to select files in the current files playback.

## [Page 29: Menu Items](#)

In RESUME (Pre-Stop) mode, some pages and some items cannot be accessed. On the MAIN page, you cannot access VIDEO SETUP and PARENTAL SETUP pages in RESUME mode. ¥ USING SUB MENU NOTE: • Depending on the format of the DVD disc. (eg. 2.35:1), the arrow buttons to switch between left and right picture may still have black lines above and below this menus.

[Page 30](#) If you do not see anything on the screen or if you do not PARENTAL SETUP (Parental Level): select "OK" within ten seconds, video output setting will be Parental Level can be adjusted to one of the eight levels or returned to previous setting automatically.

[Page 31](#) DEFAULTS: If you choose DEFAULTS, press ENTER button. The factory-presets are loaded. Parental level and parental password do not change. ® DivX REGISTRATION There is a registration code in this page. This code is utilized ® to register this player with the DivX Video On Demand service.

## [Page 32: Troubleshooting](#)

TROUBLESHOOTING Make sure the DVD disc surface is not damaged. (Scratch, fingerprint etc.) Clean the DVD disc and try again. Ensure that the DVD disc is on the drawer with the label facing up. A damp DVD disc or condensation may effect the equipment. Wait for 1 to 2 hours in Stand-by to dry the equipment.

## [Page 33: Specifications](#)

SPECIFICATIONS ® DVD/VCD/SVCD/CD-DA/CD-R/CD-RW/MP3/MPEG/JPEG/MPEG 4/DivX player Power 220 - 240V ~ 50 Hz Standby mod.: 6 W 56 mA Requirements Power ON mod: 12W 100 mA Auto Adjustable DVD [DVD-R/DVD-RW(Video Mode)]: SS/SL 4.7" (DVD-5) SS/DL 4.7" (DVD-9) Types of Discs DS/SL 4.7" (DVD-10) Supported DS/DL 4.7"...

## [Page 34: Definition Of Terms](#)

DEFINITION OF TERMS Angle Recorded onto some DVD discs are scenes, which have been simultaneously shot from a number different angles (the same scene is shot from the front, from the left side, from the right side, etc.). With such discs, the ANGLE button can be used to view the scene from different angles.

[Page 35](#) ® DivX ® DivX is a digital video compression technology based on MPEG-4 and developed by DivX Networks Inc. ¥ NOTE: • This DVD player may not support some MP3 recordings due to differences in recording formats or disc type. •...

This manual is also suitable for:

[Sd-260ese](#)