

TOSHIBA

Toshiba 14VL44 Series Owner's Manual

Toshiba

1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27

•

•

Bookmarks

--

Quick Links


[1 Special Features](#)

[2 Getting Started](#)

[3 Tv Setup](#)

[4 Technical Specifications Table](#)

[Download this manual](#)

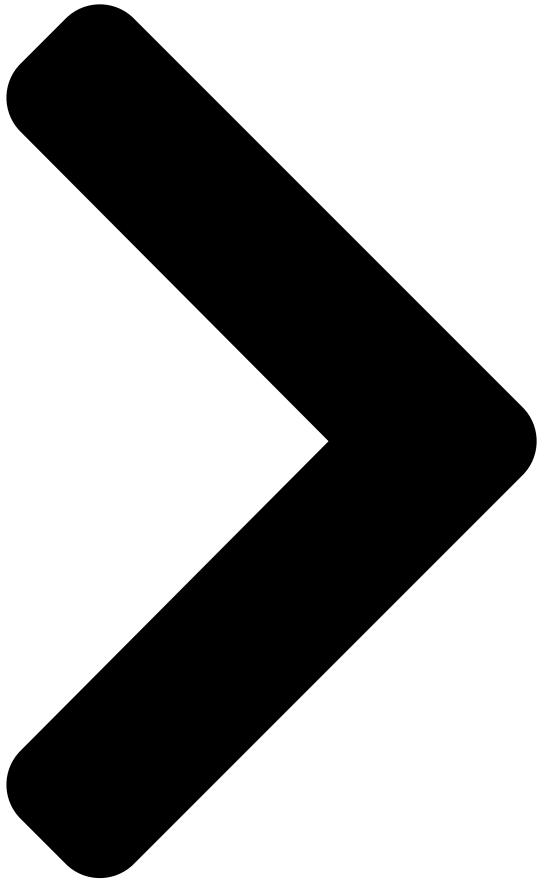

Enlarged version

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba 14VL44 Series

[TV Toshiba CPBRO2005Eu Catalog](#)

Home cinema catalogue 2005-6 (21 pages)

[TV Toshiba 20VL44 Service Manual](#)

Colour television (68 pages)

[LCD TV Toshiba 14VL43U Owner's Manual](#)

Toshiba lcd tv owner's manual 14vl43u, 20vl43u (32 pages)

[LCD TV Toshiba 20DL74 Owner's Manual](#)

Lcd color tv (28 pages)

[LCD TV Toshiba 14DL74 Service Manual](#)

Service manual (42 pages)

[LCD TV Toshiba 14VL43C Owner's Manual](#)

(28 pages)

[LCD TV Toshiba 20VL43P Service Manual](#)

(39 pages)

[LCD TV Toshiba 15DL15 Owner's Manual](#)

Toshiba lcd color television owner's manual 15dl15, 20dl15 (36 pages)

[LCD TV Toshiba 19LV610U Owner's Manual](#)

19/22/26-inch class lcd tv/dvd combination (76 pages)

[LCD TV Toshiba 19C100U Owner's Manual](#)

Integrated high definition lcd television (62 pages)

[LCD TV Toshiba 19HLV87 Service Manual](#)

Lcd tv/dvd combination (37 pages)

[LCD TV Toshiba 15DL72 Service Manual](#)

(57 pages)

[LCD TV Toshiba 19DV501B Owner's Manual](#)

Digital series (57 pages)

[LCD TV Toshiba 15DV703R Service Manual](#)

15, 19, 22, 26, 32-inch class lcd tv/dvd combination (93 pages)

[LCD TV Toshiba 24HV10UM Owner's Manual](#)

Owners manual (16 pages)

[LCD TV Toshiba 15SLDT1 Manual](#)

Combination 15 lcd tv and dvd video player (40 pages)

Summary of Contents for Toshiba 14VL44 Series

[Page 1](#) VF2.801-01 KAPAK 6/7/05 3:16 PM Page 1...

[Page 2](#) VF2.801-01 KAPAK 6/7/05 3:16 PM Page 2 VF2.801-01...

[Page 3: Table Of Contents](#)

L5Atoshing.fh11 6/7/05 2:53 PM Page 2 List of contents Important Information4 Special features5 Safety instructions6 Where to install7 Getting started8 Aerial connection8 Switching on.....8 Battery fitting8 Control unit.....9 Front and rear panel.....9 External connections table9

[Page 4: Important Information](#)

This is not a sign of a malfunction. Please take note EXCLUSION CLAUSE Toshiba shall under no circumstances be liable for loss and/or damage to the product caused by ; fire; earthquake;...

[Page 5: Special Features](#)

L5Atoshing.fh11 6/7/05 2:53 PM Page 4 Television Thank you for buying this television which is designed to give you many years of satisfactory service. You may already be familiar with using a television but do please take time to read these instructions. They are designed to familiarise you with the unit's many new features and to ensure you get the very best out of your purchase.

[Page 6: Safety Instructions](#)

L5Atoshing.fh11 6/7/05 2:53 PM Page 5 For your safety This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.

[Page 7: Where To Install](#)

L5Atoshing.fh11 6/7/05 2:53 PM Page 6 Where to install Locate the television away from direct sunlight and strong lights, soft, indirect lighting is recommended for comfortable viewing. Use curtains or blinds to prevent direct sunlight falling on the screen. Place on a sturdy platform, the mounting surface should be flat and steady It should then be secured to the wall with a sturdy tie using the hook that is under the removable cover, or secured to the platform.

[Page 8: Getting Started](#)

L5Atoshing.fh11 6/7/05 2:53 PM Page 7 Getting started Please Note: When not in use disconnect the Remove your Television carefully from the box. from the mains power supply. plug You may wish to store the packaging for future use. 4. Press the Power button on the In the box side of the TV.

[Page 9: Control Unit](#)

L5Atoshing.fh11 6/7/05 2:53 PM Page 8 Control Unit 14VL44 20VL44 Top control units AUDIO OUT MENU VIDEO S-VHS Speaker Headphone Timer indicator Audio out (R,L) Volume down Stand-by Audio RCA (L) Volume up Remote control Audio RCA (R) Menu button Power on / off Video input PHONO connector Program down...

[Page 10: Remote Control](#)

Note: The switch on the lefthand side of your remote control is used to switch the bottom 8 keys between TV, VCR & DVD mode. In VCR & DVD mode these keys can be used to operate the basic functions of your Toshiba VCR & DVD. ENGLISH -10-...

[Page 11: Using The Tv](#)

L5Atoshing.fh11 6/7/05 2:53 PM Page 10 Using the TV Turning on for the first time and Tuning TV controls Mute Temporary On-Off (STAND-BY) To temporarily mute the sound of your When you press the red () stand-by television, press the () button, Where button (temporary on-off function) located the 'SOUND MUTE'...

[Page 12: Tuning The Tv](#)

L5Atoshing.fh11 6/7/05 2:53 PM Page 11 External Device Tuning The TV Your television has one (14 VL 44) or Automatic tuning and storing of the two (20 VL 44) SCART socket(s). Every television program channels time you press the () AV button, your In the SETUP menu select the country default settings will change according of which you want to watch the program...

[Page 13: Manual Tuning](#)

L5Atoshing.fh11 6/7/05 2:53 PM Page 12 Manual Tuning If you already know the Channel number By pressing the () and () buttons of TV channel search by user and saving to your remote control, you will bring up memory the SET UP menu on your television screen.

[Page 14: Program Organising](#)

L5Atoshing.fh11 6/7/05 2:53 PM Page 13 Fine Tuning Programme Sorting If the current channel requires fine tuning, Select the program sorting bar using the select the Manual Fine Tuning bar using () or down button () in the Setup the right () button on the Manual Tuning menu, then press the () or right button menu.

[Page 15: Tv Setup](#)

L5Atoshing.fh11 6/7/05 2:53 PM Page 14 The setup of your television Volume Correction: Automatic Volume Limiting. Television transmitters have different Setting up the Sound Menu sound levels. This can be noticed from You can control the sound settings of the different volume levels that can be your television by using the () and () heard while switching from one program buttons on your remote control or the...

[Page 16: Picture Menu](#)

L5Atoshing.fh11 6/7/05 2:53 PM Page 15 Headphone: By connecting the Picture Set up headphone unit to your television you By pressing the () and () or () button can listen to the program sounds on your remote control please enter the independently from your television.

[Page 17: Features Menu](#)

L5Atoshing.fh11 6/7/05 2:53 PM Page 16 Features Special Features Timer Features Select the Timer feature in the menu and Select the Features in the MENU and press () or () button. The Timer menu press () or () button. The Features will be displayed.

[Page 18: Using Teletext](#)

L5Atoshing.fh11 6/7/05 2:53 PM Page 17 Using Teletext Teletext is an information system that displays TV/text mix text on your TV screen. Using the teletext control To view a TV programme whilst in text buttons you can view pages of information that mode, press the button.

[Page 19](#) L5Atoshing.fh11 6/7/05 2:53 PM Page 18 Page Stop To reveal information If the page of text you have selected Press the button to reveal concealed contains sub pages, these sub pages information (quiz answers etc.). will automatically be displayed in order with a delay to allow you to read the Press the button again to conceal...

[Page 20: Connecting External Equipment](#)

L5Atoshing.fh11 6/7/05 2:53 PM Page 19 Connecting external equipment You can connect a wide range of audio and Via RCA lead (optional) video equipment to your TV. Make sure the TV and video recorder are both switched off. Connecting a video recorder Plug one end of the RCA lead into the video and Via SCART audio out sockets on the back of the video...

[Page 21](#) L5Atoshing.fh11 6/7/05 2:53 PM Page 20 Via aerial socket Via RCA lead and S-Video socket Make sure the TV and video recorder are both You can also connect it through the switched off. S-Video socket of the TV. Unplug the aerial lead form the TV and plug it Plug the S-Video plug into the S-Video socket into the aerial socket on the video and the audio leads into the audio sockets.

[Page 22: Connecting A Dvd Player](#)

L5Atoshing.fh11 6/7/05 2:53 PM Page 21 Connecting a DVD player Via SCART Via RCA lead Make sure the TV and DVD player are both Make sure the TV and DVD player are both switched off. switched off. Plug one end of the SCART lead (not supplied) Plug one end of the RCA lead into the video and into the back of the DVD player and the other audio out sockets on the back of the DVD player...

[Page 23: Connecting A Decoder](#)

L5Atoshing.fh11 6/7/05 2:53 PM Page 22 Connecting a decoder Via SCART Plug one end of the RCA lead into the video and audio out sockets on the back of the decoder Make sure the TV and decoder are both switched and plug the other end into the video and audio off.

[Page 24: Start Up](#)

L5Atoshing.fh11 6/7/05 2:53 PM Page 23 Start Up Warning Messages: 1. NO SIGNAL: There is no VGA connection. As your LCD-TV unit also enables VGA Under these circumstances the on

screen display applications, it can also be used as a PC monitor. will be "NO SIGNAL".

[Page 25](#) L5Atoshing.fh11 6/7/05 2:53 PM Page 24 Connecting TV with video and satellite/digital receiver 20VL44 14VL44 Connecting TV with camcorder Connecting TV games and computer ENGLISH -25-...

[Page 26: Help And Service Tips](#)

L5Atoshing.fh11 6/7/05 2:53 PM Page 25 Help and service tips The TV does not work No sound Make sure it is plugged into the mains supply • Is the sound muted? Press the Mute button. and switched on. • Is the volume turned down? •...

[Page 27: Technical Specifications Table](#)

Toshiba Information Systems (U.K.) Ltd. Consumer Products Division European Service Centre Admiralty Way Camberley Surrey GU15 3DT England...

This manual is also suitable for:

[20vl44 series](#)