

 
Speed Dial Pause And Flash Storage - Toshiba Strata DK8 User Manual

Digital telephone

1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90



•

[Table of Contents](#)

•

Bookmarks



To Store a System Speed Dial
Number at Station 10:

1. Do Not Lift the handset.
2. Press the Redial button,
then the Speed Dial button.
3. Enter the Speed Dial code
(6 0 ~ 9 9) where you want to
store the telephone number.
4. Enter the telephone number.
5. Press the Redial button.

To Store a Hookflash:

1. Press the Flash button.

2-8

The

button can be used if your telephone does not have the Speed

*

Dial button.

System Speed Dial number access codes are 6 0 ~ 9 9. (Space is provided in Appendix B to record Speed Dial codes and their numbers.) System Speed Dial buttons associated with the codes are assigned to stations in system programming.

You can store up to 20 digits. See "Speed Dial Number Linking" later in this section for instructions on storing additional digits.

It may be necessary to insert a pause or flash signal in the number. See "Speed Dial Pause and Flash Storage" later in this section for more details.

The number will be stored and will be dialed when the Speed Dial access code is dialed at a station, or when an SD button associated with the code is pressed.

Repeat this procedure to replace the stored telephone numbers with new ones. To clear a Speed Dial entry, repeat the preceding procedure, skipping Step 4.

SPEED DIAL PAUSE AND FLASH STORAGE

Some Speed Dial numbers may require that a pause (long or regular) or hookflash be included in the number. For example, you may have to enter a pause at the beginning of a Speed Dial number to allow for dial tone delay.

If your telephone does not have a Flash button, enter the hookflash dial code, "Cnf/Trn 4 5," where upon the flash should be stored in the Speed Dial number string.

ManualsLib.com

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
27
28
29
30
31
32
33
34

Quick Links:

[Intercom Calls](#)

Related Manuals for Toshiba Strata DK8

[Telephone System Toshiba Strata DK8 Installation And Maintenance Manual](#)

Digital key telephone systems (609 pages)

[Telephone Toshiba strata DK8 Installation Instructions Manual](#)

(584 pages)

[Telephone System Toshiba Strata DK 16 Installation And Maintenance Manual](#)

Toshiba digital key telephone systems installation and maintenance manual (321 pages)

[Telephone Toshiba Strata DK8 User Manual](#)

Dk digital lcd telephone (48 pages)

[Telephone System Toshiba Strata DK8 General Description Manual](#)

Digital key telephone system (46 pages)

[Telephone TOSHIBA Strata DK8 User Manual](#)

Standard telephone (26 pages)

[Telephone Toshiba Strata DK16 User Manual](#)

Add-on module and direct station selection console (18 pages)

[Telephone Toshiba Strata DK8 Quick Reference Manual](#)

Business telephone (9 pages)

[IP Phone Toshiba Strata DK 2000-series User Manual](#)

Toshiba digital telephone user guide (164 pages)

[IP Phone Toshiba DK User Manual](#)

Includes lcd, add-on module, and direct station selection console (163 pages)

[IP Phone Toshiba CT User Manual](#)

Includes lcd, add-on module, and direct station selection console (136 pages)

[Handsets Toshiba Strata AirLink Integrated Wireless Handset User Manual](#)

Toshiba integrated wireless handset user guide (131 pages)

[Cordless Telephone Toshiba Strata DK User Manual](#)

Cordless digital telephone (107 pages)

[Telephone Toshiba Strata DK System Administration Manual](#)

(60 pages)

[IP Phone Toshiba Strata DK User Manual](#)

Digital single line telephone (60 pages)

[Telephone System Toshiba Strata DK14 System Administrator Manual](#)

Strata dk digital business telephone systems (56 pages)

Related Content for Toshiba Strata DK8

[CTX100-S System Speed Dial](#)

Toshiba CTX100-S

[DP5000 Series Speed Dial](#)

Toshiba DP5000 Series

[DP5000 Series Speed Dial](#)

Toshiba DP5000 Series

[Strata DK24 Speed Dial Faults](#)

Toshiba Strata DK24

[Strata DK 24 Speed Dial](#)

Toshiba Strata DK 24

[Strata DK8 Speed Dial](#)

Toshiba Strata DK8

[DP5000 Series Speed Dial](#)

Toshiba DP5000 Series

[DP5000 Series Speed Dial](#)

Toshiba DP5000 Series

This manual is also suitable for:

[Strata dk16](#)