 


Sanyo ASW-A100HT Instruction Manual

Microcomputer control fully automatic washing machine

1
2
3
4
5
6
7
8
9
10
11

Table Of Contents



•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

Quick Links

[1 Specifications](#)

[2 Name of Parts](#)

[3 Names and Functions of Control Panel](#)

 
[4 Normal Usage](#)

[5 How to Drain Remaining Water](#)

[6 Trouble Shooting Guide](#)

7 Care and Maintenance

[Download this manual](#)

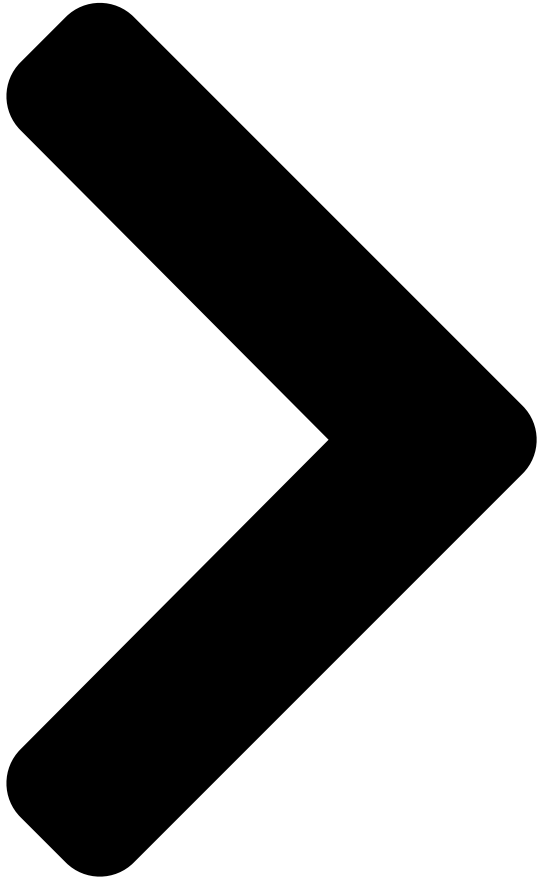

SPECIFICATIONS

Dimensions	610(W) x 585(D) x 1000(H) mm
Water level (HIGH)	60 litres
Power Source	AC Local voltage
Power Consumption	400 W
Required Water Pressure	0.03 MPa ~ 1.0MPa (0.3 kgf/cm ² ~ 10 kgf/cm ²)

WARNING - This appliance must be earthed.


FOR WASHER PLUG TOP 3 PIN (For BS Standard Plug With A 13 Amp Fuse)

IMPORTANT

The wires in this mains lead are coloured in accordance with the following code:


Green/yellow: Earth Light Blue: Neutral Brown: Live

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your power socket, please:

- The wire which is coloured green and yellow must be connected to the terminal in the plug which is marked with the letter E or by the earth symbol  or coloured green or green and yellow.
- The wire which is coloured light blue must be connected to the terminal which is marked with the letter N or coloured white.
- The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured black.

FOLLOWING CAUTIONS ARE FOR WASHER USING DOUBLECORE CORD ONLY.

- If the 2-pin type of socket-outlet has a grounding terminal, securely attach the end of the Grounding Wire to the terminal.
- When grounding the washer, connect the grounding wire before plugging in the Power Cord.
- If the 2-pin type of the socket-outlet has no grounding terminal, consult your nearest dealer or securely attach the end of Grounding Wire to a suitable grounding point, such as a metal cold water pipe.
Never connect the Grounding Wire to a gas pipe.
- Unplug the Power Cord before disconnecting the Grounding Wire.

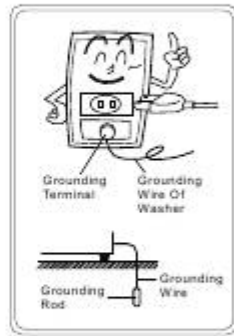

CODE NO.301-6-411S-972-40B

SANYO

SANYO Electric Co., Ltd.

INSTRUCTION MANUAL

MICROCOMPUTER CONTROL
FULLY AUTOMATIC WASHING MACHINE

Before operating this washing machine, these instructions carefully and completely.

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Sanyo ASW-A100HT

[Washer Sanyo AWD-D700T Instruction Manual](#)

Front-loading washing machine (22 pages)

[Washer Sanyo ASW-A85HT Instruction Manual](#)

Microcomputer control fully automatic washing machine (9 pages)

[Washer Sanyo ASW-50V2T Service Manual](#)

(13 pages)

[Washer Sanyo ASW-40AP Service Manual](#)

Automatic washer (17 pages)

[Washer Sanyo ASW U1100T Service Manual](#)

Automatic washer (29 pages)

[Washer Sanyo ASW36AP Service Manual](#)

(16 pages)

[Washer Sanyo ASW-90WRT Instruction Manual](#)

Fully automatic washing machine (9 pages)

[Washer Sanyo SW-740XT Instruction Manual](#)

Twin tub washing machine (4 pages)

[Washer Sanyo SW-7010T Service Manual](#)

Twin tub (8 pages)

Related Products for Sanyo ASW-A100HT

[Sanyo ASW-A85HT](#)

[Sanyo AWD-D700T](#)

[Sanyo AWD-D700VT](#)

[Sanyo ASW-50V2T](#)

[Sanyo ASW-40AP](#)

[Sanyo ASW U1100T](#)

[Sanyo ASW36AP](#)

[Sanyo ASW-90WRT](#)

[Sanyo ASW-90WRP](#)

[Sanyo AS10D3E](#)

[Sanyo ASX-HT120W](#)

[Sanyo AHX1252](#)

[Sanyo AVM-3259S](#)

[Sanyo AVM-27D11](#)

[Sanyo AWD-D800HT](#)

[Sanyo audio system](#)