TOSHIBA

Toshiba BDX2400KC User Manual

Blu-ray disc and online media player

```
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
```

Table of Contents






Quick Links

- 1 Blu-Ray Disc™ and Online Media Player Controls
- 2 Using the Remote Control
- 3 Connecting to a Local Area Network (Lan)
- 4 Connecting Via the Built-In Wi-Fi ® Device and a Wireless Access Point or Router for Bdx3400Kc Model
- 5 Troubleshooting

6 Specifications

Download this manual

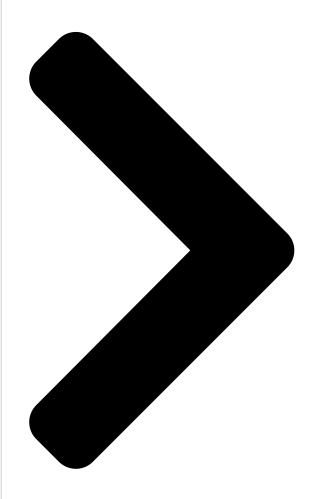

Blu-ray Disc™ and Online Media Player User's Guide:

BDX24D B SB ACC

If you needeas distance in the state of the

www.toshiba.ca/support

Toshiba Customer Support Center

Please contact our Customer Service Department at:

1-800-268-3404

For more information see

this guide Owner's Record HIBA

The model eardings in accipation on the back and underside of your player. Print out this page and write these numbers in the spaces below. Refer to these numbers whenever you communicate with your Toshiba dealer about this equipment.

Model name	_
Serial number	_
"Troubleshooting" on page 36	
in	

Table of Contents





Related Manuals for Toshiba BDX2400KC

Media Player Toshiba BDX5400KC User Manual

Blu-ray disc and online media player (45 pages)

Media Player Toshiba MET401 User Manual

Portable media player (124 pages)

Media Player Toshiba Gigabeat F Series User Manual

Digital audio players (225 pages)

Media Player Toshiba F Series Service Manual

Hdd (53 pages)

Media Player Toshiba DVD VIDEO / CD / VCD 5 DISC CAROUSEL

CHANGER Owner's Manual

Dvd video / cd / vcd 5 disc carousel changer; (52 pages)

Media Player Toshiba gigabeat F60 Owner's Manual

Toshiba hdd audio player (78 pages)

Media Player Toshiba STOR.E TV+ User Manual

(56 pages)

Media Player Toshiba Gigabeat F Manual

Rockbox firmware manual (254 pages)

Media Player Toshiba HDD Portable Media Player Gigabeat S 30

Specifications

Portable media player (2 pages)

Media Player Toshiba V Series Brochure

Toshiba digital camera data specification (2 pages)

Summary of Contents for Toshiba BDX2400KC

Page 1	Print out this	page and write	e these nu	mbers in	the space	ces below.	Refer to the	ese
		u communicate						
name								

Page 2: Table Of Contents
Connecting via wired router16 Connecting via a USB Wi-Fi adapter and wireless
access point or router ® - for BDX2400KC model16 Connecting via the built-in Wi-
Fi device and a wireless access point or router ® - for BDX3400KC model17
Connecting USB device17

Page 3: Safety Precautions

SAFETY PRECAUTIONS The rating plate and the safety caution are on the rear of the unit. WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT OF AC POWER OUTLET, THEN FULLY INSERT.

Page 4: Important Safety Instructions

IMPORTANT SAFETY INSTRUCTIONS 1. Read these instructions. 11. Only use attachments/accessories specified by the 2. Keep these instructions. manufacturer. 3. Heed all warnings. 12. Unplug this apparatus during lightning storms or when 4. Follow all instructions. unused for long periods of time. 5.

Page 5 Canada Federal Communications Commission Statement Industry Canada Statement FCC Compliance Statement This device complies with RSS-210. Operation is subject to the following two conditions: This device complies with Part 15 of the FCC Rules. (1) This device may not cause harmful interference, and Operation is subject to the following two conditions: (1) (2) This device must accept any interference received, This device may not cause harmful interference, and (2)

Page 6 PRECAUTIONS Notes on handling Notes on moisture condensation Moisture condensation damages the Blu-ray Disc™ • When shipping the unit, the original shipping carton and Online Media Player. Please read the following and packing materials come in handy. For maximum carefully: protection, repack the unit as it was originally packed at the factory.

Page 7: Notes On Discs

NOTES ON DISCS On handling discs On cleaning discs Do not touch the playback side of the disc. Fingerprints and dust on the disc cause picture and sound deterioration. Wipe the disc from the center outwards with a soft cloth. Always keep the disc clean. Playback side Do not attach paper or tape to discs.

<u>Page 8</u> YouTube is a registered trademark of Google Inc. The Wi-Fi CERTIFIED Logo is a certification mark of the Wi- Fi Alliance. The Wi-Fi Protected Setup Identifier Mark is a mark of the Wi-Fi Alliance. Oracle and Java are registered trademarks of Oracle and/ Wi-Fi , Wi-Fi Direct , and Miracast...

Page 9: Introduction

Introduction Introduction Safety icons This guide contains safety instructions that must be observed to avoid potential hazards that could result in personal injuries, damage to your equipment, or loss of data. These safety cautions have been classified according to the seriousness of the risk, and icons highlight these instructions as follows: Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

Page 10 Introduction PIP (Picture-In-Picture) Some Blu-ray™ videos have the PIP function which enables you to display the secondary video in the primary video. You can call up the secondary video by pressing PIP on the remote whenever the scene contains the secondary video. Pop up menu Some Blu-ray™...

Page 11: Blu-Ray Disc™ And Online Media Player Controls

Blu-ray Disc™ and Online Media Player controls Blu-ray Disc™ and Online Media Player controls Front panel (Sample Illustration) Front panel controls Item: Description: Function: Disc tray Loads a disc into the disc drive. IR Sensor Receives the IR signal from the remote control. Opens or closes the disc tray.

Page 12: Using The Remote Control

Using the Remote Control Remote control buttons Only the buttons used to operate the player are described in this section. For the HDMI CEC Control functions, see "HDMI CEC Control" on page REMOTE SIGNAL EMITTER • Point remote control to the sensor on the front panel OPEN/CLOSE •...

Page 13: Installing The Batteries

Using the Remote Control Installing the batteries Install the batteries (AAAx2), matching the polarity indicated inside battery compartment of the remote control. Slide the battery cover down. (Sample Illustration) Remote control - Opening the battery cover Insert two AAA batteries. Make sure to match the polarity marks (+/-) on the batteries to the marks indicated in the battery compartment.

Page 14 Using the Remote Control Do not expose the remote sensor to a strong light source such as direct sunlight or other illumination. This can damage the sensor resulting in the inability to operate the player via the remote control. Do not drop or expose the remote control to electric shock. Do not expose the remote control excessively hot or humid places to avoid moisture condensation.

Page 15: Blu-Ray Disc™ And Online Media Player Connections

To use a wireless connection, you can connect through a wireless LAN adapter and a wireless

access point or router (for BDX2400KC model). To use a wireless connection, you can connect through the built-in wireless device and a wireless access...

Page 16: Connecting Via Wired Router

- for \circledR BDX2400KC model Connect the TOSHIBA's USB Wi-Fi adapter to the USB jack on the right side of the player, and set the \circledR wireless network options. No physical connection to the wireless router is necessary.

<u>Page 17: Connecting Via The Built-In Wi-Fi ® Device And A Wireless</u> Access Point Or Router - For Bdx3400Kc Model

CERTIFIED network (access point or wireless router). ® Connecting USB device Connect the USB device to the right side of the player. The USB jack supports USB device, TOSHIBA's USB Wi-Fi adapter (Model name: WLM-12NB1) and 4 port USB Hub.

Page 18: Connecting Power

Blu-ray Disc™ and Online Media Player connections Connecting Power Connect the AC power cable to the electrical wall outlet. The player can now be set up for use. Before connecting the AC power cord, ensure you have completed all other connections. Ensure that the power supply voltage corresponds to the voltage printed on the back of the unit or your player may be damaged.

Page 19: Blu-Ray Disc™ Playback

Blu-ray Disc™ playback Blu-ray Disc™ playback Before you play a disc in the player, read the following information. Cinavia Notice This product uses Cinavia technology to limit the use of unauthorized copies of some commercially-produced film and videos and their soundtracks. When a prohibited use of an unauthorized copy is detected, a message will be displayed and playback or copying will be interrupted.

Page 20: Region Codes

Blu-ray Disc™ playback Playable files: Media: AVCHD™ DVD-RW/-R, USB BD-RE/-R, DVD-RW/-R, CD-RW/-R, USB Windows Media™ Audio JPEG MPEG2-PS/TS This player cannot play disc content that is protected by Windows Media™ Digital Rights Management (DRM). Region codes This player has been designed to play back Blu-ray™ video with region "A" and DVD-video with region "1" or "ALL."...

Page 21: Setting Up The Player

Blu-ray Disc™ playback Setting up the player Find the correct viewing input Press the button to turn on this product. Turn on the TV and switch to the correct video-in input (refer to the TV user's manual for instructions on how to select the correct input).

Page 22: Advanced Playback

Blu-ray Disc™ playback Stop playback Press the STOP button once to go to resume mode, the TV screen will show the resume logo. Press the button to resume playback from the point where playback is stopped. Press the STOP button twice to stop the playback completely and the setup screen appears. Use the button to select BD/DVD, and press the OK button to begin playback from the beginning of the disc.

Page 23 Blu-ray Disc™ playback TOP MENU You may press the TOP MENU button at any time, and the Blu-ray Disc or DVD video disc playback will display the disc menu. POP UP/MENU During Blu-ray Disc playback, press the POP UP/MENU button to display the disc title, and the playback will not be stopped even if the menu is displayed on the screen.

Page 24 Blu-ray Disc™ playback REPEAT Press the REPEAT button repeatedly to select different repeat modes. Blu-ray Disc: Repeat Chapter and Title. DVD: Repeat Chapter, Title and All. CD-DA/JPEG/MP3: Repeat Track and All. To play certain sections within the video or song, press the A-B button to set the start point. Then, press the A-B button again to set the end point and complete the setting.

Page 25: Playing Mp3/[peg/Mpeg4 Files

Blu-ray Disc[™] playback Some Blu-ray[™] discs have the PIP function enabling you to display the secondary video in the primary video. You can call up the secondary video by pressing the PIP

button when the scene contains the secondary video. See the documentation that came with the disc for playback instructions. Turn on secondary video by pressing the PIP button.

Page 26: Customizing

Customizing Customizing This section describes the various setting options of this Blu-ray Disc™ and Online Media Player. If the setup option is greyed out, it means the setting cannot be changed at the current state. Press the SETTING button in stop mode to display the setup screen. Press OK to enter the Setting menu.

Page 27: System Setting

On: The disc playback automatically after loading. Off: Turn off disc auto play mode. This feature uses CEC (Consumer Electronics Control) technology and allows you to control Toshiba HDMI™ CEC compatible devices from the player's remote control via the HDMI™ connection.

Page 28: Network

Customizing Deactivate Setting To apply the deactivation, unplug the player after operating deactivation. Upgrade This option allows you to update your players software via a Disc, USB Storage or Network. External Memory The External Memory can be used in the BD-Live function.

Page 29: Language Setting

Customizing Media Server Search The Media Server Search function enables you to create an interoperability network with other devices for resource sharing based on a network. See Media Server Search on page 32 for details. Language Setting This setting allows you to choose the language for your on-screen menus and screens. In the Setting menu, use the / button to select Language and press OK.

Page 30: Information

Customizing Rated discs above the level you set in Parental Control require a password to be entered. The ratings are country dependent. To allow all discs to play, select 'Off'. Information In the Setting menu, use the / button to select Information and press OK. The current Software Version, MAC Address and Netflix ESN will be displayed.

Page 31 Customizing TV Screen Select the screen format according to how you want the picture to appear on the TV. 16:9 Full: For a disc with the aspect ratio of 4:3, the output video is stretched into 16:9 full screen. 16:9 Normal: For a disc with the aspect ratio of 4:3, the output video is resized vertically to match what will be seen on the display.

Page 32: Network Functional Description

OK. For more information, please see the "Network" section on page On your Miracast compatible device, search for the "TOSHIBA BDPL" from the list of discovered devices and select it. It may take the player and the Miracast compatible device a few seconds to connect.

<u>Page 33</u> Some features require an always-on broadband Internet connection, firmware update and/or additional bandwidth dedicated to this product. Third party Internet services may change or be discontinued or restricted at any time. Toshiba makes no warranties, representations, or assurances about the content, availability or functionality of third-party content or services.

Page 34: Watching Movies With Cinemanow

If you are not a Netflix member: Select no. ® Read the instructions displayed on the TV screen, and visit http://www.netflix.com/toshiba from your Sign up to create your account, then select "I'm now a member". If you are a Netflix member, select yes.

Page 35: Watching Movies With Youtube

Network functional description Watching movies with YouTube ® This service enables you to use the following services provided by YouTube ® Press the HOME button on the remote control or select Portal in the setup screen to display the ePortal Home.

Page 36: Troubleshooting

Troubleshooting Troubleshooting If you experience any of the following difficulties while using this unit, check the list below before consulting your nearest TOSHIBA dealer. Problem: Solution:

Connect the product to the power outlet. No reaction to the remote control. Point the remote control at the product.

Page 37: Glossary

Glossary Glossary Aspect ratio Aspect ratio refers to the length to height ratio of TV screens. The ratio of a standard TV is 4:3, while the ratio of a high definition or wide TV is 16:9. The letterbox allows you to enjoy a picture with a wider perspective on a standard 4:3 screen.

Page 38 Glossary HDMI High-Definition Multimedia Interface (HDMI) is a high-speed digital interface that can transmit uncompressed high definition video and digital multichannel audio. It delivers high quality picture and sound quality. HDMI is fully backward compatible with DVI. As required by the HDMI standard, connecting to HDMI or DVI products without HDCP (High bandwidth Digital Content Protection) will result in no Video or Audio output.

Page 39: Specifications

Some features may require additional bandwidth. Third party Internet services are not provided by Toshiba, may change or be discontinued at any time and may be subject to third party restrictions. Toshiba makes no representations or warranties about these services, which may require the creation of a user account through a computer with Internet access.

Page 40: License Information

Nevertheless, You agree to use the Third Party Services at Your sole risk and that Toshiba shall not have any liability to You for content that may be found to be offensive, indecent, or objectionable. Certain Services may display, include or make available content, data, information, applications or materials from third parties ("Third Party Materials") or provide...

<u>Page 41</u> Toshiba, and its licensors, reserve the right to change, suspend, remove, or disable access to any Services at any time without notice. In no event will Toshiba be liable for the removal of or disabling of access to any such Services. Toshiba may also impose limits on the use of or access to certain Services, in any case and without notice or liability.

<u>Page 42</u> However, some of the software components distributed under an EULA are made available for use by the user on the assumption that they are not copyrighted or warranted by TOSHIBA or any third party. These software components are licensed to the user free of charge and therefore not covered by any warranty within the scope of the applicable laws.

Page 43 License Information OSS name OSS project URL OSS license version SquashFS http://squashfs.sourceforge.net/ GPLv2 iputils s20101006 http://www.skbuff.net/iputils/ GPLv2 udhcpc 0.9.8cvs2005 http://udhcp.sourcearchive.com/ GPLv2 0303-3 downloads/0.9.8cvs20050303-3/ net-tools 1.60 http://www.linuxfromscratch.org/blfs/ GPLv2 view/6.3/basicnet/net-tools.html sysvinit 2.88dsf http://savannah.nongnu.org/projects/ GPLv2 sysvinit module-init-tools 3.12 https://modules.wiki.kernel.org/ GPLv2 index.php/Main_Page util-linux-ng 2.18 http://userweb.kernel.org/~kzak/ GPLv2 util-linux-ng/...

Page 44 License Information OSS project URL OSS license OSS name version mtd-utils 1.2.0 http://www.linux-mtd.infradead.org/ GPLv2 index.html libmtp 0.3.6 http://libmtp.sourceforge.net LGPLv2.1 libusb 1.0.2 http://libusb.wiki.sourceforge.net LGPLv2.1 libusb-compat 0.1.2 http://libusb.wiki.sourceforge.net/ LGPLv2.1 LibusbCompat0.1 wpa_supplicant 0.8.x http://hostap.epitest.fi/wpa_supplicant/ WPASupplicant.txt libnl 1.0-pre7 http://www.linuxfromscratch.org/blfs/ GPLv2 view/svn/basicnet/libnl.html Wireless Tools http://www.hpl.hp.com/personal/Jean_ GPLv2 Tourrilhes/Linux/Tools.html DirectFB...

<u>Page 45</u> License Information OSS project URL OSS license OSS name version live555 2011.06.12 http://www.live555.com/ LGPL V2 (for BDX3400KC ONLY)

This manual is also suitable for:

Bdx3400kc