



 
# Toshiba SD-43HT Owner's Manual

Dvd home theater system



1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18  
19  
20  
21  
22  
23  
24  
25



•

•

Troubleshooting

•

## Bookmarks

## Quick Links

[1 Remote Control](#)

[2 Connecting the Speakers](#)

[3 Connecting to a Tv](#)

[4 Setup Functions](#)


[5 Speaker Setup](#)

[6 Specifications](#)



[Download this manual](#)

[See also: Service Manual](#)

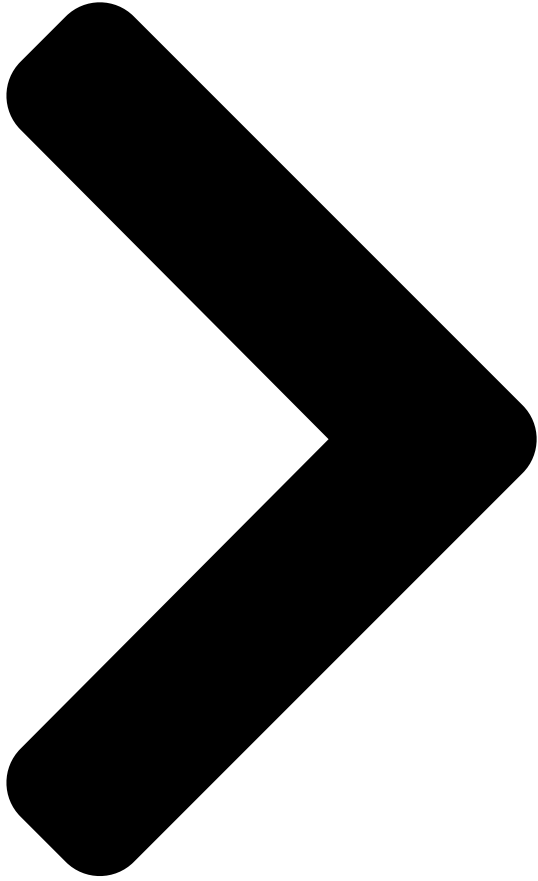



**DVD HOME  
THEATER SYSTEM  
SD-43HT**

**TOSHIBA**

COMPACT  
DIGITAL AUDIO  
VIDEO

Before connecting, operating or adjusting this product, please  
read this instruction booklet carefully and completely.

**OWNER'S MANUAL**

COMPACT  
DIGITAL VIDEO

ManualsLib.com

**TOSHIBA**



[Table of Contents](#)

[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Toshiba SD-43HT

### [Home Theater System Toshiba SD-43HT Service Manual](#)

Dvd home theater system (71 pages)

### [Receiver Toshiba SD-43HT Brochure & Specs](#)

Brochure (2 pages)

### [Home Theater System Toshiba SD-43HK Owner's Manual](#)

Toshiba home cinema system sd-43hk owner's manual (25 pages)

### [Home Theater System Toshiba SD-43HK Owner's Manual](#)

(46 pages)

### [Home Theater System Toshiba SD-44HKSE Owner's Manual](#)

Toshiba dvd home cinema system owner's manual sd-44hkse (34 pages)

### [Home Theater System Toshiba SD-44HKSB Service Manual](#)

Dvd home cinema system (131 pages)

### [Home Theater System Toshiba SD-47HKSR Service Manual](#)

Dvd home cinema theater (18 pages)

### [Home Theater System Toshiba SD-47HKSR Service Manual](#)

Dvd home cinema theater (18 pages)

### [Home Theater System Toshiba SD-47HKSR Service Manual](#)

(18 pages)

### [Home Theater System Toshiba SD-43HKSE Service Manual](#)

(74 pages)

### [Home Theater System Toshiba SD-44HKSB Owner's Manual](#)

(35 pages)

### [Home Theater System Toshiba SD-43SHT Service Manual](#)

(88 pages)

### [Home Theater System Toshiba SD-63HK Owner's Manual](#)

Toshiba dvd home cinema kit owner's manual (40 pages)

### [Home Theater System Toshiba SD-V55HT Owner's Manual](#)

Dvd/vcr home theater system (50 pages)

### [Home Theater System Toshiba SD-V55HTSU Service Manual](#)

Dvd/vcr home theater system (162 pages)

### [Home Theater System Toshiba SD-V55HTSU Circuit Diagrams](#)

Dvd/vcr (76 pages)

## Summary of Contents for Toshiba SD-43HT

[Page 1](#) DVD HOME THEATER SYSTEM SD-43HT COMPACT COMPACT DIGITAL VIDEO DIGITAL AUDIO VIDEO Before connecting, operating or adjusting this product, please read this instruction booklet carefully and completely. OWNER'S MANUAL...

### [Page 2: Safety Precautions](#)

Safety Precautions Important Safety Instructions CAUTION: PLEASE READ AND OBSERVE ALL WARNINGS AND INSTRUCTIONS IN THIS OWNER'S MANUAL AND CAUTION THOSE MARKED ON THE UNIT. RETAIN THIS BOOKLET FOR FUTURE REFERENCE. FCC WARNING: This equipment may generate or use RISK OF ELECTRIC SHOCK This set has been designed and manufactured to

assure personal safety.

### [Page 3: Table Of Contents](#)

Dolby Pro Logic II decoder .....37 such incompatibilities are very rare. If you happen to experience and difficulty playing a DVD on a Toshiba DVD player, please feel free to call our Contact listed in "How to Obtain Warranty Services" page 47.

### [Page 4: Description](#)

Description Front Panel Rear Panel Video Output Connector On/Standby indicator Connect the TV's video input jacks (VIDEO IN) to External Video Component the VIDEO OUT connector. On/Standby button Input Connectors S-Video Output Connector Function button Volume control If the TV is equipped with an S-Video input External Digital Component Input Disc Tray Display...

### [Page 5: Remote Control](#)

Remote Control Insert Remote Batteries TUNER button Open the battery cover on the back of the remote control. SETUP button DISPLAY button OPEN/CLOSE button ON/STANDBY ( ) button AUDIO button REMAIN button Insert two 1.5V AA batteries, paying attention to the correct AUX button DVD button polarities (+ and -).

### [Page 6: Connecting The Speakers](#)

Connecting the Speakers Connecting to a TV Turn off the Power first and set the volume knob to low initially before connecting. Please turn off the Power of your TV, DVD receiver and other equipment before doing any connections. Set the volume to low initially. Right front speaker Left front speaker •...

### [Page 7: Connecting The Fm And Am\(Mw/Lw\) Antennas](#)

Connecting the FM and AM Antennas Connecting the Optical Equipment ( MW/LW ) If AM reception is poor, connect an outdoor AM External Digital Components antenna(not supplied). To view pictures from For connection to external external input (AUX 1 , equipment with digital output.

### [Page 8: Before Using The Dvd Player](#)

Before Using the DVD Player P.SCAN Function (Progressive Scan) Your DVD player is capable of playing DVD, VCD, and CD discs. Unlike a regular Interlace Scan in which two fields of picture information are alternated to User instructions may vary depending on the type of disc. Read the instructions create the entire picture (odd scan lines, then even scan lines), Progressive Scan uses carefully before use.

### [Page 9: Dvd Playback](#)

DVD Playback Using the On-Screen Display The general playback status can be displayed on the TV screen. Some items can be changed on the menu. Press the OPEN/CLOSE( ) button to open the disc tray. Press the UP/DOWN (L / M) Press the DISPLAY button Press theLEFT/RIGHT( during playback.

### [Page 10: Mp3/Wma Cd Playback](#)

Depending on the recording mode, some MP3/WMA CDs cannot be played. • Customers should also not that permission is required in order to download MP3/WMA files and music from the internet. Toshiba has no right to grant such permission. Permission should always be sought from the copyright owner.

### [Page 11: Forward/Reverse Searching](#)

Forward/Reverse Searching Slow Playback/Checking the Remaining Time During playback, you can search quickly through a chapter or track for a specific scene or tune. Multi-Speed Playback Playing Slowly Press the button. Press the SLOW button. Each time the button is pressed Each time the button is pressed Each time the SLOW button is pressed...

### [Page 12: Repeat Playback](#)

Repeat Playback Disc Menu/Top Menu Function Repeat playback allows you to repeat a chapter, title, or track. Playing Repeatedly Using the Disc Menu Press the REPEAT button. You can use the menus for the audio language, subtitle language, profile, etc. DVD menu contents differ

from disc to disc.

### [Page 13: Selecting The Audio Language/Subtitle Language](#)

Selecting the Audio Language/Subtitle Language Zoom/Angle Functions To enlarge an image  
Selecting the Audio Language • This feature allows you to enlarge a particular area of the Press  
the AUDIO button. displayed image. • During DVD playback, if you press the ZOOM(SILD SHOW)  
•...

### [Page 14: Jpeg File Playback](#)

JPEG File Playback Images captured with a digital camera or camcorder, or JPEG files on a PC  
can be stored on a CD and then played back with this DVD player. Slide Show Function Digest  
Function • You can view 9 JPEG images on the TV screen. Press DIGEST(MENU) button during , L  
,M buttons to select the Press Cursor...

### [Page 15: Program Playback](#)

Program Playback Program allows you to store your favourite tracks for a particular disc in the  
player memory. To Program Tracks in a particular order To delete the entire Program • Press  
the PROGRAM button to twice when in the stop mode. Press the PROGRAM button while in the  
Insert the disc and close the tray.

### [Page 16: Setup Functions](#)

Setup Functions You can install your own Personal Preferences. Adjusting the TV Aspect Ratio  
(Screen Size) The horizontal to vertical screen size ratio of conventional TVs is 4:3, while that of  
wide screen and high definition TVs is 16:9. This ratio is called the aspect ratio. When playing  
DVDs recorded in different screen size, you should adjust the aspect ratio to fit your TV or  
monitor.

### [Page 17: General Setup](#)

Setup Functions (Continue) Disc Language -- PREFERENCES PAGE -- • Select a language for the  
disc's Menu, Audio and Subtitle. • Original : The original language set for the disc is selected.  
AUDIO SUBTITLE ENGLISH • Other : To select another language, press number buttons to enter  
the DISC MENU KOREAN PARENTAL...

### [Page 18: Speaker Setup](#)

Speaker Setup Setting up Speaker Mode and Delay Time Setting up the Speaker Delay Time  
When 5.1CH Surround Sound is played, you can enjoy the best sound if the distance between  
you and each speaker is the same. Since the sounds arrive at the listening position at different  
times depending on the placement of speakers, you can adjust this difference by adding a delay  
effect to the sound of the Center Speaker and Surround Speakers.

### [Page 19: To Set Up Speaker Balance](#)

To set up Speaker Balance Creating Realistic Sound Fields You can set the sound level of the  
desired channel. You can use the following surround modes to reproduce a realistic sound field.  
To set up Speaker Balance • Digital Multichannel Surround —Dolby Digital and DTS Digital  
Surround •...

### [Page 20: Dolby Pro Logic II Decoder](#)

Dolby Pro Logic II decoder Dolby Pro Logic II Dolby Pro Logic II is a new format for playing  
multichannel audio signals that offers improvements over Pro Logic II Mode conventional Dolby  
Pro Logic. It can be used to decode not only sources recorded in Dolby Surround, but Select one  
of the modes ("CINEMA", "PRO LOGIC", "MATRIX"...

### [Page 21: Listening To The Radio](#)

Listening to the Radio Presetting the radio stations Preset radio stations in the DVD receiver's  
memory first (see "Presetting radio stations" You can preset 30 stations for FM and AM. Before  
tuning, make sure that you have turned on the Right side). down the volume.

### [Page 22: Sleep Function](#)

Sleep Function Cautions on Handling and Storing Discs Small scratches on the disc may reduce  
sound and picture quality or cause breaks in playback. Be especially careful not to scratch discs



when handling them. Handling discs To set up Sleep Press the SLEEP button.

### [Page 23: Troubleshooting](#)

Troubleshooting Language Code List Check the following guide for the possible cause of a problem before contacting service. Enter the appropriate code number for the initial settings "Disc Audio", "Disc Subtitle" and/or "Disc Menu" (See page 32). Symptom Cause Correction •...

### [Page 24: Specifications](#)

Specifications Memo AC 120V, 60Hz Power Requirement 120W Power Consumption Weight 7.0Kg 360 x 76 x 367 mm Dimensions (W x H x D) +5°C ~ +35°C Operating Temperature Range 10% ~ 75% Operating Humidity Range 10dB Usable Sensitivity 55dB S/N Ratio 0.3% Distortion...

### [Page 25: Limited Warranty Dvd Video Player](#)

TOSHIBA OF CANADA to "Register and Validate" their warranty. Product must be purchased from an Authorized Canadian Dealer. Products purchased in the U.S.A. and used in Canada are not covered by these warranties.