Install Indoor Unit - Sanyo SAP-K18AM Instruction Manual

Split system air conditioner

```
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
```

19 20 21 22 23 24	
21222324	
222324	
23 24	
24	
25	
26	
27	
28	
29	
30	
31	
32	
33	
34	
35	
36	
37	

Table of Contents










9. INSTALL INDOOR UNIT

9.1 Install the Real Panel

1. Always mount the rear panel horizontally. Due to the water tray of indoor unit has been adopted the both-way drainage design, the outlet of water tray should be adjusted slightly down when installing, that is taking the outlet of the water tray as the center of a circle, the included angle between

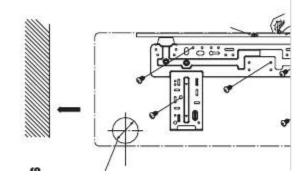

0 or more, that is good for condensing water drainage.

- 2. Fix the rear panel on the wall with screws. (Where is pre-covered with plastic granula)
- 3. Be sure that the rear panel has been fixed firmly enough to support the weight of an adult of 60kg, further more, the weight should be evenly shared by each screw.

9.2 Install the Piping Hole

- 1. Determine which side of the unit you should make the hole for tubing and wiring. (Fig.12)
- 2. Make the piping hole (55) in the wall at a slight downward slant to the outdoor side. (Fig.13)
- Before making the hole, check


carefully that no studs or pipes are directly run behind the spot to be cut.

 
- Also avoid areas where electrical wiring or conduits are located.
- 3. Insert the piping-hole sleeve into the hole to prevent the connection piping and wiring from being damaged when passing through the hole.

9.3 Install the Water Drainage Pipe

- 1. Drainage hose must be placed at downward slant downward slant for smooth drainage.
- 2. Do not verse, bend or heave the drainage hose or flood its end by water. (Fig.14)
- 3. The prolonged drainage hose should be covered by heat insulation material when through indoor.

Mark on the Wall middle of it

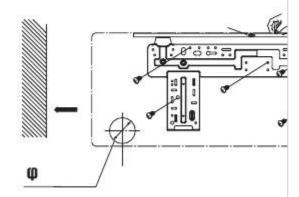





to the

wall

150mm

above

Left

55mm

(Rear piping hole)

Left

tubing

Left-rear

tubing

Wall pipe

Gradienter

(Rear piping hole)

Fig.11

Right-rear

tubing

(recommended)

Right tubing

Fig.12

Indoor

Outdoor

Seal pad

Protection

sleeve pipe

Fig.13

Wrenched

Fig.14

Wall

Space

to the

wall 150mm

above

Right

55mm

Ø55

Bent

Flooded

24

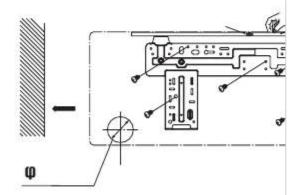






Table of Contents

Previous Page Next Page

...

Quick	Links:		
Table	e of Contents		
Notio	ces for Operation		
Oper	ration and Maintenance		
Nam	es and Functions of each Part		
Oper	ration of Wireless Remote Control Unit		
Trou	bleshooting		
Insta	all Outdoor Unit		
Chec	ck after Installation and Test Operation		

Related Manuals for Sanyo SAP-K18AM

<u>Air Conditioner Sanyo SAP-K9AP Instruction Manual</u>

Split system air conditioner (37 pages)

<u>Air Conditioner Sanyo SAP-K77RAX Technical & Service Manual</u>

Split system air conditioner (68 pages)

Air Conditioner Sanyo SAP-K91AHA Technical & Service Manual

(78 pages)

<u>Air Conditioner Sanyo SAP-K181AHA-S Technical & Service Manual</u>

(78 pages)

Air Conditioner Sanyo SAP-K92A Technical & Service Manual

Split system air conditioner (58 pages)

Air Conditioner Sanyo SAP - K92AH Technical & Service Manual

(52 pages)

Air Conditioner Sanyo SAP-K91AA Technical & Service Manual

(66 pages)

Air Conditioner Sanyo SAP-K161GJA Technical & Service Manual

Split system air conditioner (86 pages)

Air Conditioner Sanyo SAP-K71GJA Technical & Service Manual

Split system air conditioner (81 pages)

Air Conditioner Sanyo SAP-K77GHAX Technical & Service Manual

(164 pages)

Air Conditioner Sanyo SAP-K71GJHA Technical & Service Manual

(86 pages)

Air Conditioner Sanyo SAP-K71GJA-S Technical & Service Manual

(81 pages)

Air Conditioner Sanyo SAP-K181GJH Technical & Service Manual

Indoor/outdoor units (75 pages)

Air Conditioner Sanyo SAP-K181AA Technical & Service Manual

Split system air conditioner (66 pages)

Air Conditioner Sanyo SAP-CMRV1426EH Technical & Service Manual

(148 pages)

Air Conditioner Sanyo SAP-KMRV74EH Installation Instructions Manual

Inverter split system air conditioner (24 pages)

Related Content for Sanyo SAP-K18AM

SPW-X483GH56 How To Install The Indoor Unit

Sanyo SPW-X483GH56

26 series How To Install The Indoor Unit

Sanyo 26 series

COOL How To Install The Indoor Unit

Sanyo COOL

SAP-CRV93EHN Remove The Grille To Install The Indoor Unit

Sanyo SAP-CRV93EHN

SAP-KRV94EHDX Remove The Grille To Install The Indoor Unit

Sanyo SAP-KRV94EHDX

KS3082 How To Install The Indoor Unit

Sanyo KS3082

COOL How To Install The Indoor Unit

Sanyo COOL

KS1872 Remove The Grille To Install The Indoor Unit

Sanyo KS1872

This manual is also suitable for:

Sap-k18amsSap-c18amSap-c18amsSap-k18aghSap-c18aghSap-kc18agh