





 
## Sanyo LCD-27XA2 Instruction Manual

Lcd colour television



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18

19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
Table Of Contents  
29



•

•

## Bookmarks

## Quick Links

[1 Instruction Manual](#)

[2 Control Panel](#)


[3 Menu Operation](#)

[4 Connecting Other Equipment](#)

[5 Specifications](#)

[Download this manual](#)

See also: [Service Manual](#)

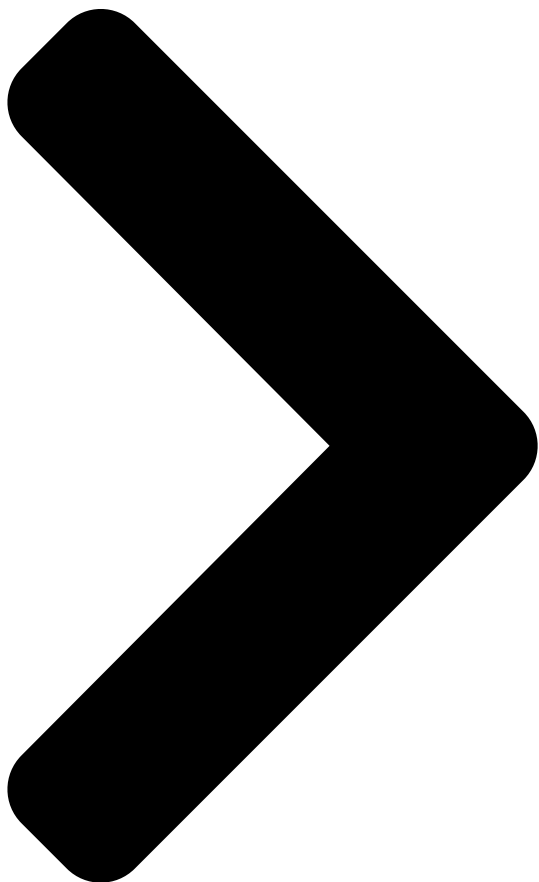



INSTRUCTION MANUAL

LCD Colour Television

*Please read this Instruction Manual before using your television.*

*We wish you many hours of pleasure from your new television.*

LCD-27XA2

LCD-32XA2

S

## Table of Contents

[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Sanyo LCD-27XA2

### [TV Sanyo LCD-27XA2 Service Manual](#)

Lcd television (40 pages)

### [Lcd television Sanyo LCD-32XA2 Service Manual](#)

Sanyo lcd-32xa2 lcd television (40 pages)

### [LCD TV Sanyo LCD-32XL2 Service Manual](#)

(48 pages)

### [LCD TV Sanyo LCD-27XR1/AU Service Manual](#)

(20 pages)

### [LCD TV Sanyo LCD-22XR9DA Instruction Manual](#)

Sanyo lcd tv instruction manual (40 pages)

### [LCD TV Sanyo LCD-26XR9DA Instruction Manual](#)

Sanyo lcd tv instruction manual (38 pages)

### [LCD TV Sanyo LCD-26XR9DA Instruction Manual](#)

(33 pages)

### [LCD TV Sanyo LCD-19E3 Instruction Manual](#)

Sanyo lcd tv instruction manual (27 pages)

### [LCD TV Sanyo LCD-24K50 Instruction Manual](#)

(28 pages)

### [LCD TV SANYO LCD-24XR10F Instruction Manual](#)

(38 pages)

### [LCD TV Sanyo LCD-24XR11F Instruction Manual](#)

Sanyo lcd-24xr11f lcd tv instruction manual (40 pages)

### [LCD TV Sanyo LCD-24XAZ10F Service Manual](#)

(41 pages)

### [LCD TV Sanyo LCD-15CA1Z Instruction Manual](#)

(36 pages)

### [LCD TV Sanyo LCD-22XR7S Service Manual](#)

(37 pages)

### [LCD TV Sanyo LCD-22XR11F Service Manual](#)

(38 pages)

### [LCD TV Sanyo LCD-22XR9DKH Service Manual](#)

(46 pages)

## Summary of Contents for Sanyo LCD-27XA2

### [Page 1: Instruction Manual](#)

INSTRUCTION MANUAL LCD-27XA2 LCD-32XA2 LCD Colour Television Please read this Instruction Manual before using your television. We wish you many hours of pleasure from your new television.

### [Page 2: Warnings And Cautions](#)

Warnings and Cautions service life of your television, and can also be Warning dangerous. High voltages are used in the operation of this Minimum Distances television receiver. Do not remove the cabinet 5 cm 10 cm back from your set. Refer servicing to quali- fied service personnel.

## [Page 3: Installation](#)

Installation Step 1 : Connecting the Aerial and Power Supply • Connect your aerial cable plug to the rear of the TV set. For further information please consult your local dealer. • Connect the AC power plug to the wall socket (AC100-264 Volts, 50Hz/60Hz). Note: The form of the AC code and AC plug are different with each country.

[Page 4](#) Installation Step 2 : Battery Installation of the Remote Control Transmitter Use 2 "AAA" 1.5 volt batteries. Be sure batteries are installed correctly. Note: Do not mix old batteries with new ones or mix different type of batteries together. Step 3 : Switching on/Plug & Play Let's start ! Let's start ! This TV set provides a self-automatic tuning system function called "Plug &...

## [Page 5: Control Panel](#)

Control Panel Each button listed this section has the same function as it's corresponding button on the Remote Control Stand-by and Power Indicator Volume Remote Control Detector Programme Up/Down Power ON/OFF button Viewing Angle Adjustment Swivel stand is rotated 360° right and left. Caution Do not position hand under the screen frame while rotating the TV.

## [Page 6: Remote Control Transmitter](#)

Remote Control Transmitter Recall/Colour System Wide Power ON/OFF Digital Shot Sound Mute TV/AV Selector To select half mute, full mute or restore the sound. Press repeatedly to switch to TV, AV1, AV2, AV3, AV4 or DVD button AV5 mode. TIMER To call up the Timer menu Numeric buttons directly.

## [Page 7: General Operation](#)

General Operation Alter nate Power ON/OFF(Stand by) Alter nate Power ON/OFF(Stand by) Press the Alternate button, and the Press the Power ON/OFF button to programme position will alternately turn on or off (Stand-by) the TV set. select the previous position and the present position.

[Page 8](#) General Operation A2 Stereo, NICAM Stereo Programme Information Call A2 Stereo, NICAM Stereo Programme Information Call and Bilingual Broadcast and Bilingual Broadcast Receiving Receiving To display the on screen indication, press the Recall/Colour System button. A2 Stereo and NICAM Stereo sound reception When receiving NICAM stereo broadcast,...

[Page 9](#) General Operation Screen Mode Selection Screen Mode Selection Today there are various transmission formats with different size ratios, e.g. 4:3, 14:9, 16:9 and video format such as letterbox. 4:3 picture sometimes have a black band at the top and bottom of the screen. You can select a screen mode to optimise the picture display. Press the Wide button to select the following screen modes;...

[Page 10](#) General Operation Zoom 14:9 14:9 16:9 Letterbox Video The correct picture Zooms in slightly Zooms in slightly The black bars top width is maintained cropping the top and cropping the top and bottom are small- but the top and bottom.

[Page 11](#) General Operation Title-in 16:9 14:9 16:9 Letterbox Video TITLES ON SCREEN TITLES ON SCREEN TITLES ON SCREEN TITLES ON SCREEN As Zoom (16:9), but As Zoom (16:9), but As Zoom (16:9), but As Zoom (16:9), but bottom is compressed bottom is compressed bottom is compressed bottom is compressed even more to allow...

## [Page 12: Delete All](#)

General Operation to display Digital Shot Select a picture that you want Digital Shot with the cursor Use Digital Shot function to capture and button. save the up to 12 pictures and replay them in Press the OK button to display. a list mode, full screen mode and automatic album mode.

[Page 13](#) General Operation Auto Album Deletion of pictures Use this function to display each picture Press the CS button to display the screen continuously. of List mode. Press the CS button to display the screen of List mode. : Delete All : Delete : Auto Album : Select...

## [Page 14: Menu Operation](#)

Menu Operation The on-screen menu provides the viewer Picture Adjustments with easy access to adjustments and settings. Follow the on-screen instruction at Press the MENU button, and

select the bottom of the screen. "Picture" menu with Press to select a content. Setting Preset Picture...

[Page 15](#) Menu Operation Press to set OFF timer. Sound Sound The time changes in 30 minutes steps. Volume The maximum time is 2 hours. Bass Treble Press to make row of OFF Balance timer complete yellow. Auto Volume Press the OK button to store the setting. Press the MENU button to exit, or press Press to adjust.

[Page 16](#) Menu Operation Setting Menu Preset Menu Use Preset Menu to tune new channels, to This setting menu gives you several options re-order channels and their programme to adjust. positions, and to make fine tuning. Press the MENU then button to Up to 255 broadcast stations can be stored.

[Page 17](#) Menu Operation Semi-auto T uning You can either... Semi-auto T uning a) Press the Digit (-/--) button, and enter This is used to preset a channel in any pro- the frequency (5 digits) using 0-9 gramme position. buttons referring channel table. Select "Prog.

[Page 18](#) Menu Operation Setting of the Skip Channels Channel Swapping Setting of the Skip Channels Channel Swapping Use this feature to swap the channels If there are positions you do not use, by set- ting skip channel function, it is possible to between two stored programme positions.

[Page 19](#) Setting of the Hotel Mode The Hotel Mode is a feature that might be needed by a hotel management to confine the TV that put in the hotel room, so it will not disturb other rooms. Setting Procedure Set the desired maximum sound volume by pressing the Volume + or - button.

## [Page 20: Teletext Operation](#)

Teletext Operation Cancel Reveal switch To view the TV picture in the To reveal hidden items on the teletext mode while waiting for text page e.g. a hidden sub page to change or page answer to a quiz question. to update. Press again to return to teletext mode.

[Page 21](#) This remote control transmitter has been designed to be used in conjunction with selected SANYO VCR's and DVD players. Some SANYO VCR's and DVD players may have their own functions, so please refer to the individual instruction booklet when using this remote control to ensure compatibility.

[Page 22](#) AV Terminals Side Terminal VID EO Audio Video Input Jacks (AV4) AU DIO Headphone Jack (Mini Stereo Jack) For personal listening, a head- phone can be connected to the Rear Terminal headphone jack. Audio Monitor Output Jacks AUDIO Audio Video Input Jacks (AV1) DVD INPUT Scart Terminal (AV2) Input: Composite video, RGB, S-video and audio-L/R...

## [Page 23: Connecting Other Equipment](#)

Connecting Other Equipment You can connect a VCR, S-VHS VCR, Satellite Tuner, PAY TV Decoder, DVD or Camcorder to this TV via the AV terminals and the SCART terminal. Depending on the type of video tape or connected AV equipment being used, it may be necessary to select colour system.

[Page 24](#) Connecting Other Equipment Connecting to the Rear AV5 Input Jacks DVD Player Connection If your DVD player has the component video output jacks, connect the TV to these jacks instead of the video input or S-VIDEO input jacks. You can enjoy high quality picture play-back.

[Page 25](#) Connecting Other Equipment Connecting to the Side AV4 Input Jacks It is convenient to use the AV4 input jack on the side panel for equipment that is often connected and disconnected. Camcorder VID EO PLAYBACK AU DIO Video Game Headphone Select "AV4"...

## [Page 26: Helpful Hints](#)

Helpful Hints Helpful hints NO PICTURE, NO SOUND Check if TV is plugged in. Try a different channel, if OK, probably station trouble. POOR PICTURE, SOUND OK Adjust BRIGHTNESS control. Adjust FINE TUNING control. Check aerial connections NO COLOUR, PICTURE OK Adjust COLOUR control.

## [Page 27: Specifications](#)

Audio: L/R Stereo Input (RCA Jack) x 1 set Audio Monitor Output: L/R Stereo Output (RCA Jack) x 1 set Headphone Jack: Mini Stereo Jack x 1 Net weight Model LCD-27XA2: Approx. 14.1 Kg (Included Swivel Stand) Model LCD-32XA2: Approx. 17.5 Kg (Included Swivel Stand)

[Page 28](#) Specifications Dimensions Model LCD-27XA2 (Unit : mm) Model LCD-32XA2 (Unit : mm) Specification subject to change without notice Part No. 1AA6P1P4901- - N2WW (UE2-A) SANYO ELECTRIC Co., Ltd.

This manual is also suitable for:

[Lcd-32xa2](#)