

TOSHIBA

Toshiba DKT3014-SDL Quick Reference Manual

Dkt / ipt telephone

1
2

--

•

Bookmarks

[Download this manual](#)

Quick Links



Enlarged version

Call Pickup

1. Press an extension button.
2. Enter a code from the following list:
#5#34

Group Pickup:

or
#5#5

Direct or Other

1. Press an extension button.
2. Dial the extension number from the following list:
Group Pickup: #5#34 or
Directed Terminal Pickup: #5#5 or _____

Echo Cancel

If you experience echo while conversing on your IP telephone, press **Vel ▲** or **Vel ▼** once to cancel the echo sound once it is echoed.

Volume Control

If you experience echo while conversing on your IP telephone, press **Vel ▲** or **Vel ▼** once to cancel the echo sound once it is echoed.

Paging

To make a page announcement to a phone or external speakers:

1. Press extension **#30** (all groups) or **#31** (all groups).

2. Make your announcement, then hang up.

To make an All Call Page

1. With the handset off-hook, press **All Call Page** or extension + **#30**. This pages all phones in the All Call Page Group, and may page external speakers (depends on programming).

2. Make your announcement, then hang up.

Redial

To redial the last number dialed from your phone, press **Redial** or **#0**.

Speed Dial

To store a Station Speed Dial Number:

1. With the handset off-hook, press **Speed Dial** (SD) or extension + **#30**.

2. Enter the number to be stored in the Speed Dial bin (32 digits max.).

3. Press **Special** to store the entry. See "DATA PROGRAMMED."

4. Lift and replace the handset.

To store a Station Speed Dial Number

We suggest storing Speed Dial numbers on a One Touch button; use Speed Dial Codes to store more numbers.

To use a One Touch Button, just press it.

1. Press **#976** to enter User Programming Mode.

2. Press the One Touch button to set.

3. Enter the digits or special buttons to be stored.

4. Press the One Touch button to save the entry.

If these steps do not work, you may have to create a One Touch button (see "Flexible Buttons").

To use a One Touch Button, just press it.

1. While on a call, press **CallTrn**.

2. Press **#407** _____.

3. Enter the voice mailbox number (may be the same as the extension number), then press **#**.

4. Hang up (the caller is connected to the voice mailbox) or press **CallTrn** to return to the calling party.

Volume Control

To adjust handset volume:

During a call, press down **Vel ▲** or **Vel ▼**. When you hang up, volume returns to default.

To adjust the speaker volume for internal/external calls and background music:

Press **Spr**. Select a line and press **Vel ▲** or **Vel ▼**.

To adjust Ring Tone, Handfree Answerback and Speaker Off-hook Call Announce:

With an idle phone and handset on-hook, press **Vel ▲** or **Vel ▼**. When you hang up, volume returns to default.

To clear a number from a Station Speed Dial code

Repeat the previous procedure skipping Step 4.

To make a call using Speed Dial

1. Lift the handset.
2. Access a outside line (if necessary).
3. Press **Speed**. Then dial the Station or System Speed Dial Number.

One Touch Buttons

This feature is useful for storing frequently dialed numbers.

To change a One Touch Button

1. Press **#976** to enter User Programming Mode.
2. Press the One Touch button to set.
3. Enter the digits or special buttons to be stored.
4. Press the One Touch button to save the entry.

If these steps do not work, you may have to create a One Touch button (see "Flexible Buttons").

To use a One Touch Button, just press it.

1. While on a call, press **CallTrn**.

2. Press **#407** _____.

3. Enter the voice mailbox number (may be the same as the extension number), then press **#**.

4. Hang up (the caller is connected to the voice mailbox) or press **CallTrn** to return to the calling party.

Volume Control

To adjust handset volume:

During a call, press down **Vel ▲** or **Vel ▼**. When you hang up, volume returns to default.

To adjust the speaker volume for internal/external calls and background music:

Press **Spr**. Select a line and press **Vel ▲** or **Vel ▼**.

To adjust Ring Tone, Handfree Answerback and Speaker Off-hook Call Announce:

With an idle phone and handset on-hook, press **Vel ▲** or **Vel ▼**. When you hang up, volume returns to default.

DN2014-BOX, LCD Features

To use Speed Dial or Directory Menus

1. Press the Soft Key next to the Speed Dial (SD) or Directory (DIR) to view the first screen.

FRED J	NO. 3371
FEB 18	MONDAY 12:00
DIRECT SS	
SYSTEM SD	
PERSONAL SD	
EXTERNAL DIR	
INTERNAL DIR	

2. To view the other pages, press the soft keys **MORE** or **PREVIOUS** or **LEFT** or **RIGHT**.

To use Direct Station Selection

1. Press the **DIRECT SS** Soft Key to view the first screen.

FRED J	NO. 3371
MAR 18	WEDNESDAY 01:03
BOB T	
DOE R	
CAROL F	FRED M
OST SERV	GRAY W
PREVIOUS	MORE
EXT	

2. To view other pages, press the **MORE** or **PREVIOUS** Soft Keys.

	CALLING
BOB T	NO. 3200

To select someone from the list, press the Soft Key next to the name.

Flexible Buttons

There are 10, 14 or 20 Flexible Buttons on your telephone. You can program features onto Flexible Buttons for easy access.

1. Press **#976** to enter User Programming Mode.
2. Press **Hold**.
3. Press the Flexible Button to set or change.
4. Enter the Flexible Button Code (see following list).
5. Press the same Flexible Button (flashing). "DATA PROGRAMMED" appears on your LCD.

Flexible Button Codes

Account Code

Auto Busy Redial

Auto Callback

Call Forward - Any Calls (Internal)

All Call

Busy

No Answer

Busy No Answer

Call Park Orbit

Call Pickup

Incoming - Group Pickup

Incoming - Directed Terminal Pick

Incoming - Directed Group Pick

On hold - Local Retrieve

On hold - Remote Retrieve

On hold - Outside Line Retrieve

On hold - Directed DN Retrieve

Incoming - Any External Call

On hold and Incoming

Caller ID

Cancel

Do Not Disturb

Do Not Disturb

Direct Station Selection (DSS) But

One Touch Buttons

Paging

Page All Groups

Page Individual Groups

Emergency Page - Individual Gr

Emergency Page - All Groups

Answer - Group Page

Record to VM

Pause/Resume

Release Button

Release/Answer

Speed Dial

User Programming Mode

Note: Not all features have a Flex additional codes, see your

CAUTION! Do not use (inserted the device, is placed on other rubber feet. The color of the desk or mounting

Call Pickup

1. Press an extension button.
3. Press _____, then enter a Speed Dial code from the following list:
Group Pickup: #5#34 or
Directed Terminal Pickup: #5#5 or _____

4. Enter the number to be stored in the Speed Dial bin (32 digits max.).

5. Press **Special** to store the entry. See "DATA PROGRAMMED."

6. Lift and replace the handset.

To store a Station Speed Dial Number

We suggest storing Speed Dial numbers on a One Touch button; use Speed Dial Codes to store more numbers.

To use a One Touch Button, just press it.

1. Press **#976** to enter User Programming Mode.

2. Press the One Touch button to set.

3. Enter the digits or special buttons to be stored.

4. Press the One Touch button to save the entry.

If these steps do not work, you may have to create a One Touch button (see "Flexible Buttons").

To use a One Touch Button, just press it.

1. While on a call, press **CallTrn**.

2. Press **#407** _____.

3. Enter the voice mailbox number (may be the same as the extension number), then press **#**.

4. Hang up (the caller is connected to the voice mailbox) or press **CallTrn** to return to the calling party.

Volume Control

To adjust handset volume:

During a call, press down **Vel ▲** or **Vel ▼**. When you hang up, volume returns to default.

To adjust the speaker volume for internal/external calls and background music:

Press **Spr**. Select a line and press **Vel ▲** or **Vel ▼**.

To adjust Ring Tone, Handfree Answerback and Speaker Off-hook Call Announce:

With an idle phone and handset on-hook, press **Vel ▲** or **Vel ▼**. When you hang up, volume returns to default.

To clear a number from a Station Speed Dial code

Repeat the previous procedure skipping Step 4.

To make a call using Speed Dial

1. Lift the handset.
2. Access a outside line (if necessary).
3. Press **Speed**. Then dial the Station or System Speed Dial Number.

One Touch Buttons

This feature is useful for storing frequently dialed numbers.

To change a One Touch Button

1. Press **#976** to enter User Programming Mode.
2. Press the One Touch button to set.
3. Enter the digits or special buttons to be stored.
4. Press the One Touch button to save the entry.

If these steps do not work, you may have to create a One Touch button (see "Flexible Buttons").

To use a One Touch Button, just press it.

1. While on a call, press **CallTrn**.

2. Press **#407** _____.

3. Enter the voice mailbox number (may be the same as the extension number), then press **#**.

4. Hang up (the caller is connected to the voice mailbox) or press **CallTrn** to return to the calling party.

Volume Control

To adjust handset volume:

During a call, press down **Vel ▲** or **Vel ▼**. When you hang up, volume returns to default.

To adjust the speaker volume for internal/external calls and background music:

Press **Spr**. Select a line and press **Vel ▲** or **Vel ▼**.

To adjust Ring Tone, Handfree Answerback and Speaker Off-hook Call Announce:

With an idle phone and handset on-hook, press **Vel ▲** or **Vel ▼**. When you hang up, volume returns to default.

DN2014-BOX, LCD Features

To use Speed Dial or Directory Menus

1. Press the Soft Key next to the Speed Dial (SD) or Directory (DIR) to view the first screen.

FRED J	NO. 3371
FEB 18	MONDAY 12:00
DIRECT SS	
SYSTEM SD	
PERSONAL SD	
EXTERNAL DIR	
INTERNAL DIR	

2. To view the other pages, press the soft keys **MORE** or **PREVIOUS** or **LEFT** or **RIGHT**.

To use Direct Station Selection

1. Press the **DIRECT SS** Soft Key to view the first screen.

FRED J	NO. 3371
MAR 18	WEDNESDAY 01:03
BOB T	
DOE R	
CAROL F	FRED M
OST SERV	GRAY W
PREVIOUS	MORE
EXT	

2. To view other pages, press the **MORE** or **PREVIOUS** Soft Keys.

	CALLING
BOB T	NO. 3200

To select someone from the list, press the Soft Key next to the name.

Flexible Buttons

There are 10, 14 or 20 Flexible Buttons on your telephone. You can program features onto Flexible Buttons for easy access.

1. Press **#976** to enter User Programming Mode.
2. Press **Hold**.
3. Press the Flexible Button to set or change.
4. Enter the Flexible Button Code (see following list).
5. Press the same Flexible Button (flashing). "DATA PROGRAMMED" appears on your LCD.

Flexible Button Codes

Account Code

Auto Busy Redial

Auto Callback

Call Forward - Any Calls (Internal)

All Call

Busy

No Answer

Busy No Answer

Call Park Orbit

Call Pickup

Incoming - Group Pickup

Incoming - Directed Terminal Pick

Incoming - Directed Group Pick

On hold - Local Retrieve

On hold - Remote Retrieve

On hold - Outside Line Retrieve

On hold - Directed DN Retrieve

Incoming - Any External Call

On hold and Incoming

Caller ID

Cancel

Do Not Disturb

Do Not Disturb

Direct Station Selection (DSS) But

One Touch Buttons

Paging

Page All Groups

Page Individual Groups

Emergency Page - Individual Gr

Emergency Page - All Groups

Answer - Group Page

Record to VM

Pause/Resume

Release Button

Release/Answer

Speed Dial

User Programming Mode

Note: Not all features have a Flex additional codes, see your

CAUTION! Do not use (inserted the device, is placed on other rubber feet. The color of the desk or mounting

During a call, press down or
When you hang up, volume returns to default.

To adjust the speaker volume for internal/external calls and background music:

- Press an extension button.
- Enter a code from the following list:
Group Pickup: **#634** or
Directed Terminal Pickup: **#888** or
Other (see System Administrator)
- Dial the extension that is holding the ringing or held call to be picked up.

Volume Control
To adjust Ring Tone, Handfree Answerback and Speaker Off-hook Call Announce while conversing on your IP telephone, press **Vol ▲** or **▼** once to cancel the echo sound.

Page
When on the phone and handset on-hook, press **Page** to make a page announcement to a phone or external speakers.

- Press extension, lift the handset, and enter:
#634 (to use the Group page access code) or **#888** (to use the Speed Dial bin) + the Group page access code (see System Administrator) for more paging codes.
- Make your announcement, then hang up.

Speed Dial
To use Speed Dial:
1. Press the Soft Key next to the Speed Dial bin (SD) or Directory (DIR) to view the first screen.

Speed Dial
To store a Station Speed Dial Number:
We suggest storing Speed Dial numbers on a One Touch page, press **One Touch**, use Speed Dial Codes to store more numbers, soft keys **MORE** or **PREVIOUS** or **LEFT** or **RIGHT**, then enter a Speed Dial Code (**00-99**).

Speed Dial
To use Direct Station Selection:
1. Press the Soft Key next to the Direct Station Selection (DSS) Bin to view the first screen.

Speed Dial
To use Direct Station Selection:
1. Press the Soft Key next to the Direct Station Selection (DSS) Bin to view the first screen.

Speed Dial
To use Direct Station Selection:
1. Press the Soft Key next to the Direct Station Selection (DSS) Bin to view the first screen.

Speed Dial
To use Direct Station Selection:
1. Press the Soft Key next to the Direct Station Selection (DSS) Bin to view the first screen.

Speed Dial
To use Direct Station Selection:
1. Press the Soft Key next to the Direct Station Selection (DSS) Bin to view the first screen.

Speed Dial
To use Direct Station Selection:
1. Press the Soft Key next to the Direct Station Selection (DSS) Bin to view the first screen.

Speed Dial
To use Direct Station Selection:
1. Press the Soft Key next to the Direct Station Selection (DSS) Bin to view the first screen.

Speed Dial
To use Direct Station Selection:
1. Press the Soft Key next to the Direct Station Selection (DSS) Bin to view the first screen.

Speed Dial
To use Direct Station Selection:
1. Press the Soft Key next to the Direct Station Selection (DSS) Bin to view the first screen.

Speed Dial
To use Direct Station Selection:
1. Press the Soft Key next to the Direct Station Selection (DSS) Bin to view the first screen.

Speed Dial
To use Direct Station Selection:
1. Press the Soft Key next to the Direct Station Selection (DSS) Bin to view the first screen.

Speed Dial
To use Direct Station Selection:
1. Press the Soft Key next to the Direct Station Selection (DSS) Bin to view the first screen.

Speed Dial
To use Direct Station Selection:
1. Press the Soft Key next to the Direct Station Selection (DSS) Bin to view the first screen.

Speed Dial
To use Direct Station Selection:
1. Press the Soft Key next to the Direct Station Selection (DSS) Bin to view the first screen.

Speed Dial
To use Direct Station Selection:
1. Press the Soft Key next to the Direct Station Selection (DSS) Bin to view the first screen.

Speed Dial
To use Direct Station Selection:
1. Press the Soft Key next to the Direct Station Selection (DSS) Bin to view the first screen.

Speed Dial
To use Direct Station Selection:
1. Press the Soft Key next to the Direct Station Selection (DSS) Bin to view the first screen.

To clear a number from a Station Speed Dial code
Repeat the previous procedure skipping Step 4.

To make a call using Speed Dial
1. Lift the handset.
2. Access an outside line (if necessary).
3. Press **Speed**. Then dial the Station or System Speed Dial Number.

One Touch Buttons
This feature is useful for storing frequently dialed numbers.

To change a One Touch Button
1. Press **#976** to enter User Programming Mode.
2. Press the One Touch button to set.
3. Enter the digits or special buttons to be stored.
4. Press the One Touch button to save the entry.

To use a One Touch Button, just press it.

Voice Mail - Direct Transfer

- While on a call, press **CallTrn**.
- Press **#407**.
- Enter the voice mailbox number (may be the same as the extension number), then press **#**.
- Hang up (the caller is connected to the voice mailbox) or press **CallTrn** to return to the calling party.

Volume Control

To adjust handset volume
During a call, press down **Vol ▲** or **▼**. When you hang up, volume returns to default.

To adjust the speaker volume for internal/external calls and background music
Press **Spr**. Select a line and press **Vol ▲** or **▼**.

To adjust Ring Tone, Handfree Answerback and Speaker Off-hook Call Announce
With an idle phone and handset on-hook, press **Vol ▲** or **▼**. When you hang up, volume returns to default.

DN1014-BOX, LCD Features

To use Speed Dial or Directory Menus

- Press the Soft Key next to the Speed Dial (SD) or Directory (DIR) to view the first screen.
- To view the other pages, press the soft keys **MORE** or **PREVIOUS** or **LEFT** or **RIGHT**.
- Select someone from the list by pressing the Soft Key next to the name.

FRED J	NO. 3371
FEB 18	MONDAY 12:00
DIRECT SS	
SYSTEM SD	
PERSONAL SD	
EXTERNAL DIR	
INTERNAL DIR	

To Use Direct Station Selection

- Press the **DIRECT SS** Soft Key to view the first screen.
- To view other pages, press the **MORE** or **PREVIOUS** Soft Keys.
- To select someone from the list, press the Soft Key next to the name.

FRED J	NO. 3371
MAR 18	WEDNESDAY 01:03
BOB T	
DIR #	
CAROL F	FRED M
EXT SERV	GRAY W
PREVIOUS	MORE
EXT	

CALLING	
BOB T	NO. 3200

Flexible Buttons
There are 10, 14 or 20 Flexible Buttons on your telephone. You can program features onto Flexible Buttons for easy access.

- Press **#976** to enter User Programming Mode.
- Press **Field**.
- Press the Flexible Button to set or change.
- Enter the Flexible Button Code (see following list).
- Press the same Flexible Button (flashing). "DATA PROGRAMMED" appears on your LCD.

Flexible Button Codes

- Account Code
- Auto Busy Redial
- Auto Callback
- Call Forward - Any Calls (Internal)
- All Call
- Busy
- No Answer
- Busy No Answer
- Call Park On Hold
- Call Pickup
- Incoming - Group Pickup
- Incoming - Directed Terminal Pick
- Incoming - Directed Group Pick
- On hold - Local Retrieve
- On hold - Remote Retrieve
- On hold - Outside Line Retrieve
- On hold - Directed DN Retrieve
- Incoming - Any External Call
- On hold and Incoming
- Caller ID
- Cancel
- Do Not Disturb
- Do Not Disturb
- Direct Station Selection (DSS) Bin
- One Touch Buttons
- Paging
- Page All Groups
- Page Individual Groups
- Emergency Page - Individual Gr
- Emergency Page - All Groups
- Answer - Group Page
- Record to VM
- Pause/Resume
- Release Button
- Release/Answer
- Speed Dial
- User Programming Mode

CAUTION! Do not use a business card, rubber foot, or other object to touch the screen or keypad.

To clear a number from a Station Speed Dial code
Repeat the previous procedure skipping Step 4.

To make a call using Speed Dial
1. Lift the handset.
2. Access an outside line (if necessary).
3. Press **Speed**. Then dial the Station or System Speed Dial Number.

One Touch Buttons
This feature is useful for storing frequently dialed numbers.

To change a One Touch Button
1. Press **#976** to enter User Programming Mode.
2. Press the One Touch button to set.
3. Enter the digits or special buttons to be stored.
4. Press the One Touch button to save the entry.

To use a One Touch Button, just press it.

Voice Mail - Direct Transfer

- While on a call, press **CallTrn**.
- Press **#407**.
- Enter the voice mailbox number (may be the same as the extension number), then press **#**.
- Hang up (the caller is connected to the voice mailbox) or press **CallTrn** to return to the calling party.

Volume Control

To adjust handset volume
During a call, press down **Vol ▲** or **▼**. When you hang up, volume returns to default.

To adjust the speaker volume for internal/external calls and background music
Press **Spr**. Select a line and press **Vol ▲** or **▼**.

To adjust Ring Tone, Handfree Answerback and Speaker Off-hook Call Announce
With an idle phone and handset on-hook, press **Vol ▲** or **▼**. When you hang up, volume returns to default.

DN1014-BOX, LCD Features

To use Speed Dial or Directory Menus

- Press the Soft Key next to the Speed Dial (SD) or Directory (DIR) to view the first screen.
- To view the other pages, press the soft keys **MORE** or **PREVIOUS** or **LEFT** or **RIGHT**.
- Select someone from the list by pressing the Soft Key next to the name.

FRED J	NO. 3371
FEB 18	MONDAY 12:00
DIRECT SS	
SYSTEM SD	
PERSONAL SD	
EXTERNAL DIR	
INTERNAL DIR	

To Use Direct Station Selection

- Press the **DIRECT SS** Soft Key to view the first screen.
- To view other pages, press the **MORE** or **PREVIOUS** Soft Keys.
- To select someone from the list, press the Soft Key next to the name.

FRED J	NO. 3371
MAR 18	WEDNESDAY 01:03
BOB T	
DIR #	
CAROL F	FRED M
EXT SERV	GRAY W
PREVIOUS	MORE
EXT	

CALLING	
BOB T	NO. 3200

Flexible Buttons
There are 10, 14 or 20 Flexible Buttons on your telephone. You can program features onto Flexible Buttons for easy access.

- Press **#976** to enter User Programming Mode.
- Press **Field**.
- Press the Flexible Button to set or change.
- Enter the Flexible Button Code (see following list).
- Press the same Flexible Button (flashing). "DATA PROGRAMMED" appears on your LCD.

Flexible Button Codes

- Account Code
- Auto Busy Redial
- Auto Callback
- Call Forward - Any Calls (Internal)
- All Call
- Busy
- No Answer
- Busy No Answer
- Call Park On Hold
- Call Pickup
- Incoming - Group Pickup
- Incoming - Directed Terminal Pick
- Incoming - Directed Group Pick
- On hold - Local Retrieve
- On hold - Remote Retrieve
- On hold - Outside Line Retrieve
- On hold - Directed DN Retrieve
- Incoming - Any External Call
- On hold and Incoming
- Caller ID
- Cancel
- Do Not Disturb
- Do Not Disturb
- Direct Station Selection (DSS) Bin
- One Touch Buttons
- Paging
- Page All Groups
- Page Individual Groups
- Emergency Page - Individual Gr
- Emergency Page - All Groups
- Answer - Group Page
- Record to VM
- Pause/Resume
- Release Button
- Release/Answer
- Speed Dial
- User Programming Mode

CAUTION! Do not use a business card, rubber foot, or other object to touch the screen or keypad.

540
 Door Lock Cancel
 Direct Station Selection (DSS) Button
 610
 570
 One Touch Button
 Paging
 220
 Page All Groups
 230
 Page Individual Groups
 250
 Emergency Page - **911**
 240
 Emergency Page - **All Groups**
 590
 Answer - Group Page
 630
 Record to VM
 640
 Pause/Resume
 270
 Release/Answer
 280
 260
 Speed
 650
 User
 Program
 Note
 STRATA
 Quick Reference Guide
 Unify Your Business Communications
 CTX

Call Pickup

1. Press the extension button.

2. Enter a code from the following list:

Group Pickup: **9934** or _____

Directed Terminal Pickup: **9935** or _____

Other (see System Administrator): _____

3. Dial the extension that is holding the ringing or held call to be picked up.

One Touch Buttons

This feature is useful for storing frequently dialed numbers.

To change a One Touch Button

1. Press **9976** to enter User Programming Mode.
2. Press the One Touch button to set.
3. Enter the digits or special buttons to be stored.
4. Press the One Touch button to save the entry.

If these steps do not work, you may have to create a One Touch button (see "Flexible Buttons").

To Use a One Touch Button, just press it.

Voice Mail - Direct Transfer

1. While on a call, press **CallTrn**.
2. Press **9907** _____
3. Enter the voice mailbox number (may be the same as the extension number), then press **■**.
4. Hang up (the caller is connected to the voice mailbox) or press **CallTrn** to return to the calling party.

Direct Station Selection (DSS) Features

To use Speed Dial or Directory Menus

1. Press the Soft Key next to the Speed Dial (SD) or Directory (DIR) to view the first screen.
2. To view the other pages, press the soft keys **MORE** or **PREVIOUS** or **LEFT** or **RIGHT**.
3. Select someone from the list by pressing the Soft Key next to the name.

To Use Direct Station Selection

1. Press the **DIRECT SS** Soft Key to view the first screen.
2. To view other pages, press the **MORE** or **PREVIOUS** Soft Keys.
3. To select someone from the list, press the Soft Key next to the

FRED J	NO. 3271
FEB 18	MONDAY 12:00
DIRECT SS	
SYSTEM SD	
PERSONAL SD	
EXTERNAL DIR	

FRED J	NO. 3271
MAR 18	WEDNESDAY 01:00
DIR #	
CAROL F	FRED M
OST SERV	GRAY W
PREVIOUS	MORE
EXIT	

CALLING
BOB T NO. 3280

Flexible Button Codes

Account Code

Auto Busy Redial

Auto Callback

Call Forward - Any Calls (Internal)

All Call
 Busy
 No Answer
 Busy No Answer

Call Park Or Hold

Call Pickup

Incoming - Group Pickup
 Incoming - Directed Terminal Pick
 Incoming - Directed DN Pickup
 On hold - Local Retrieve
 On hold - Remote Retrieve
 On hold - Outside Line Retrieve
 On hold - Directed DN Retrieve
 Incoming - Any External Call
 On hold and Incoming

Caller ID

Cancel

Do Not Disturb

Door Lock Cancel

Direct Station Selection (DSS) But

One Touch Buttons

Paging

Page All Groups
 Page Individual Groups
 Emergency Page - Individual Gr
 Emergency Page - All Groups
 Answer - Group Page

Record to VM

[Next Page](#)

1

2

Related Manuals for Toshiba DKT3014-SDL

[Telephone Toshiba DKT User Manual](#)

Strata ctx dkt/ipt telephone (116 pages)

[IP Phone Toshiba Strata DKT3010F-S User Manual](#)

(115 pages)

[Telephone Toshiba DKT3010-SD - Digital Phone User Manual](#)

Strata ctx digital business telephone systems dkt/ipt telephone (114 pages)

[Telephone Toshiba DKT3000 Series User Manual](#)

Strata ctx digital business telephone systems (106 pages)

[IP Phone Toshiba STRATA CTX DKT3000 User Manual](#)

Dkt3000/2000-series digital business telephone systems (104 pages)

[IP Phone Toshiba DKT3000/2000 User Manual](#)

Dkt3000/2000-series digital business telephone systems (104 pages)

[Toshiba 3000 Series, 2000 Series - DKT / IPT Business Telephone Quick Reference Guide with Button Codes](#)

(article)

[Telephone Accessories Toshiba Strata DK 280 Installation Manual](#)

Digital business telephone system (878 pages)

[Telephone Accessories Toshiba STRATA CTX Installation Manual](#)

Attendant console (24 pages)

[Telephone Accessories Toshiba Perception 4000 Quick Reference Manual](#)

Attendant console (9 pages)

[Telephone Accessories Toshiba Strata AirLink User Manual](#)

External wireless handset (47 pages)

[Telephone Accessories Toshiba Strata CT Manual](#)

Acad agent guide (37 pages)

[Telephone Accessories Toshiba Strata DK User Manual](#)

Standard telephone digital business telephone systems (24 pages)

[Telephone Accessories Toshiba Perception 4000 Quick Reference Manual](#)

Attendant console (17 pages)

Summary of Contents for Toshiba DKT3014-SDL

[Page 1](#) DKT / IPT Telephone Call Pickup DKT3014-SDL LCD Features ► To clear a number from a Station Speed Dial code Flexible Button Codes Quick Reference Guide 1. Press an extension button. ► Repeat the previous procedure skipping Step 4. ►...

[Page 2](#) Hot Dialing You can bypass Forced Account Code requirements with This quick reference guide applies to Toshiba 3000- and 2000- ► If you are the “master” conference controller, press If you have multiple extensions on your phone, you can hold...