

 


# Toshiba 23PB200 Series Owner's Manual



1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29



•

- 

Troubleshooting

•

## Bookmarks

## Quick Links

[1 Pedestal Stand Assembling](#)

[2 Tv Panel Controls](#)

[3 Tv Back Panel Connections](#)


[4 Connecting Hdmi or DVI Devices](#)

[5 Troubleshooting](#)

[6 Specifi Cations](#)



[Download this manual](#)

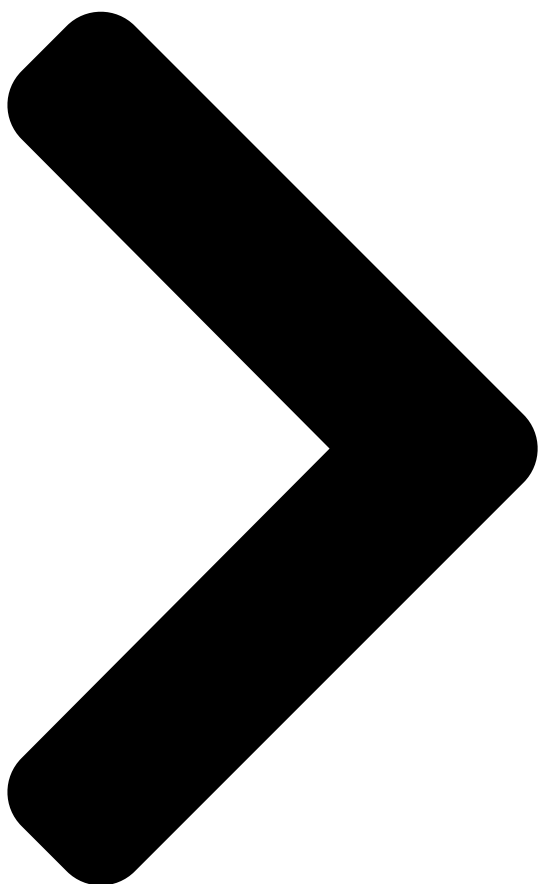

**OSHIBA**

Leading Innovation >>>

**WNER'S**

**LED TV**

**23PB200 Series**

# 29PB200 Series

TOSHIBA

Leading Innovation >>>

# 32PB200 Series

# 40PB200 Series

---

# 29PB202 Series

©2012 TOSHIBA CORPORATION

All Rights Reserved

HDMI™

HIGH DEFINITION MULTIMEDIA INTERFACE

# M

## ANUAL

### Welcome to Toshiba

- Thank you for purchasing this Toshiba LED TV. This
- Instructions in this manual are based on using the
- You also can use the controls on the TV if they have
- Please read all safety and operating instructions
- "LED TV" means LCD Panel with LED Backlight.

This manual will help you use the exciting features of your new TV.

The remote control.

The buttons on the remote control have the same name as those referred to on the remote control.

Please read this manual carefully, and keep this manual for future reference.

### Owner's Record

You will find the model number and serial number on the back of the TV. Record these numbers in the spaces provided below. Refer to them whenever you call upon your TOSHIBA dealer regarding this product.

Model number:

Serial number:

VX1A00260900

ManualsLib.com

## Table of Contents

[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Toshiba 23PB200 Series

[LED TV Toshiba 19L4200U User Manual](#)

Integrated high definition led television (141 pages)

[LED TV Toshiba 19L4200UOM User Manual](#)

Integrated high definition led television (139 pages)

[LED TV Toshiba 26SL400U Specifications](#)

720p hd led tv (2 pages)

[LED TV Toshiba 23L1350U Resource Manual](#)

Integrated high definition led television (2 pages)

[LED TV Toshiba 39L2300U User Manual](#)

Integrated high definition led television (123 pages)

[LED TV TOSHIBA 50L2300U User Manual](#)

(123 pages)

[LED TV Toshiba 23L2300U Resource Manual](#)

Integrated high definition led television (2 pages)

[LED TV Toshiba 23PU200 series Owner's Manual](#)

(32 pages)

[LED TV Toshiba 23L2300UC Resource Manual](#)

Integrated high definition led television (2 pages)

[LED TV Toshiba 23L1400UC User Manual](#)

Integrated high definition led television (110 pages)

[LED TV Toshiba 32L110U Quick Setup Manual](#)

28" 720p, 60hz, led tv; 32" 720p, 60hz, led tv (2 pages)

[LED TV Toshiba 24W144\\*DG Online Manual](#)

Led backlight lcd satellite tv (48 pages)

[LED TV Toshiba Digital 19EL93 Series Owner's Manual](#)

(41 pages)

[LED TV Toshiba 24L3965 Owner's Manual](#)

(25 pages)

[LED TV Toshiba 24L3965EA Owner's Manual](#)

(29 pages)

[LED TV Toshiba 24L2900 Owner's Manual](#)

(26 pages)

## Summary of Contents for Toshiba 23PB200 Series

**Page 1** WNER'S ANUAL LED TV Welcome to Toshiba • Thank you for purchasing this Toshiba LED TV. This manual will help you use the exciting features of your new TV. • Instructions in this manual are based on using the remote control.

### **Page 2: Pedestal Stand Assembling**

Warning: Ensure the power cable is not pinched when attaching the pedestal stand as this could cause an electric shock. 23PB200 Series models Warning: Ensure the power cable is not pinched when attaching the pedestal stand as this could cause an electric shock.

### [Page 3: Table Of Contents](#)

2) Never place the TV in an unstabilized location Contents such as on a shaky table, incline or location Connecting an aerial .....6 subject to vibration. Exploring your new TV .....6 • Only use cabinets or stands recommended by the TV manufacturer. TV panel controls .....6 •...

[Page 4](#) • Never drape a newspaper, tablecloth or 3) Never insert objects (metal or paper) or pour water inside the TV through ventilation holes • When installing the TV against a wall, always and other openings. Keep the TV at least 10 cm away from the wall. These items may cause a fire or an electric shock.

[Page 5](#) Exemptions serious injury and/or permanent damage to TV and TV pedestal. • Toshiba is not liable for any damage caused by fires, natural disaster (such as thunder, earthquake, 1) Remove the power plug before cleaning. etc.), acts by third parties, accidents, owner's Never use solvents such as benzene or thinner misuse, or uses in other improper conditions.

### [Page 6: Connecting An Aerial](#)

Your Toshiba dealer or service personnel can best compartment. Advise you on which aerial to use in your area.

### [Page 7: Learning About The Remote Control](#)

p / o (programme position or input source) 13 Stereo/Bilingual selection — This button switches to the programme 14 Number buttons (0-9) position or the input source selection. 15 To display the Channel List 16 To return to the previous programme Learning about the remote control 17 To display on-screen information Initial/Index function for Teletext...

### [Page 8: Connecting Hdmi Or Dvi Devices](#)

• o HDMI 1 (input terminal) — High-Definition to connect the TV and the HDMI device, and select Analogue in HDMI 2 Audio of the AV Multimedia Interface input receives digital audio Connection menu (- page 13). and uncompressed digital video from an HDMI •...

### [Page 9: Turning The Tv On](#)

Notes: appropriate Colour System (For the system of each • Some PC models cannot be connected to this TV. country or region, refer to pages 10, 22). • If connecting a certain PC model that signal is Switching off the TV particular, the PC signal may not be detected correctly.

[Page 10](#) D. Position skip selection Press Q to display the Auto Signal Booster Press  or  to turn the position skip option menu, and then  or  to select Yes or No. on "8" or off ("). The position will then be skipped when you select channels with PU Auto Signal Booster Signal Booster boosts weak analogue broadcast signals.

### [Page 11: Using The Quick Menu](#)

Displaying the menu chart Using the Quick Menu Press QUICK to display the Quick Menu and use  PICTURE or  to select the option. Quick Menu PICTURE Picture Mode Dynamic Picture Settings Media Player 3D Colour Management 00:00 Base Colour Adjustment Sleep Timer Active Backlight Control Power Bass Booster...

### [Page 12: Watching Tv Programmes](#)

Press  or  to select the channel ABCD, then Watching TV programmes press . Selecting the menu language Manual Tuning Pos. Label Choose from 10 different languages (English, A B C D Chinese (CS), Malay, Thai, Vietnamese, Russian, E F G H Arabic, Persian French or Indonesia) for the on- I J K L...

### [Page 13: Setting The Hdmi 2 Audio Mode](#)

PC Normal Setting the HDMI 2 Audio mode Use this setting for PC connected via HDMI or RGB/ You can select sound of an HDMI or DVI device PC terminal when receiving PC signal format. This connected to the HDMI 2 input terminals from three setting will display the image correctly without modes: Auto, Digital or Analogue.

[Page 14](#) Activating the Picture Mode Adjusting the Colour Temperature This TV offers the choice of personalising the picture Colour Temperature increases the warmth or style. coolness of the picture by setting the red, green or AutoView, Dynamic, Standard, Mild, Movie, Eco blue

tint.

## [Page 15: Sound Adjustment](#)

Sound adjustment Selecting the monaural programmes If sound distortion, interruptions or silence arises in Setting the MTS (Multi-channel TV Sound) the low sound volume level, setting the e Mono 2 mode will mitigate the problem. Auto mode When a monaural programme is received, e Mono The MTS Auto mode automatically recognize appears and press g.

## [Page 16: Teletext](#)

Setting up the Teletext mode Using the Auto Format When the TV receives a true HDMI signal picture To select a language for Teletext: and the Auto Format is On, it will automatically be The language 1-4 option enables the display of displayed in HDMI signal format, irrespective of the different language when using Teletext.

[Page 17](#) For further information on your particular text system(s), see the broadcast teletext index page or To hold a wanted page: consult your local Toshiba dealer. This function is included as it is part of the broadcast Using List mode teletext system but you will not need it as this TV allows you to control the display of sub-pages.

## [Page 18: Using The Pc Settings](#)

You must obtain any required permission Adjusting the picture position from copyright owners to download or use copyrighted content. Toshiba cannot and does • Use menus: SETUP and PC Settings not grant such permission. • Use items: Horizontal Position and Vertical...

[Page 19](#) Note: To display the device information If the previous or next file is not compatible, it will From FUNCTION menu, highlight Media be skipped automatically. Player, and press Q. Press Q to return to Single View mode. Press  or  to select Setup and press Q. To set the Slide Show mode settings Press ...

[Page 20](#) Note: To set the Repeat mode settings If the previous or next file is not compatible, it will be skipped automatically. From FUNCTION menu, highlight Media Player, and press Q. File Compatibility: Press  or  to select Setup and press Q. Media Format: JPEG File Extension: .jpg Press ...

## [Page 21: Troubleshooting](#)

Troubleshooting The picture brightness varies when you display switch the TV on. Before calling a service technician, please check the • If you switch the TV on at 0°C and under, wait following table for a possible cause of the symptom until the warms up.

## [Page 22: Broadcast System](#)

Broadcast system Specific ations Broadcast transmission systems of each country LED TV or region Model 23PB200 Series, 29PB200 Series, 32PB200 Series, Asia M.E. 40PB200 Series, 29PB202 Series Power source Country or region Colour Sound 110-240 V AC, 50/60 Hz Bahrain, Kuwait, Israel, Oman,...

[Page 23](#) Phono jacks recycling of this product, O AUDIO Output Audio L / Mono, R please visit our website([http://www. Phono jacks \(FIXED\) toshiba-india.com](http://www. Phono jacks (FIXED) toshiba-india.com)) or contact call o RGB/PC Input center (1800-200-8674). Mini D-sub 15 pin Analogue RGB o PC/HDMI 2 Input (AUDIO) 3.5 mm (Diameter) stereo...

[Page 24](#) The software components which are made or developed GNU GENERAL PUBLIC LICENSE originally by TOSHIBA and not subject to EULAs are Version 2, June 1991 not a target of source code off ering. Copyright (C) 1989, 1991 Free Software Foundation, The Toshiba warranty provided in respect of the Inc.,...

[Page 25](#) that forbid anyone to deny you these rights or to 1. You may copy and distribute verbatim copies of ask you to surrender the rights. These restrictions the Program's source code as you receive it, in translate to certain responsibilities for you if you any medium, provided that you conspicuously distribute copies of the software, or if you modify it.

[Page 26](#) written entirely by you; rather, the intent is to 4. You may not copy, modify, sublicense, or exercise the right to control the distribution distribute the Program except as



expressly of derivative or collective works based on the provided under this License. Any attempt Program.

[Page 27](#) system, which is implemented by public license BUT NOT LIMITED TO, THE IMPLIED WARRANTIES practices. Many people have made generous OF MERCHANTABILITY AND FITNESS FOR A contributions to the wide range of software PARTICULAR PURPOSE. THE ENTIRE RISK AS distributed through that system in reliance on TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU.

[Page 28](#) If the program is interactive, make it output a short notice like this when it starts in an interactive mode: Gnomovision version 69, Copyright (C) year name of author Gnomovision comes with ABSOLUTELY NO WARRANTY; for details type `show w' . This is free software, and you are welcome to redistribute it under certain conditions;...

This manual is also suitable for:

[29pb200 series40pb200 series29pb202 series32pb200 series](#)