



Toshiba AEW-9770S Owner's Manual

Fully automatic washing machine

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19

20

• PAGE

1

OF 20 GO

•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

Quick Links

[1 Description of Parts](#)

[2 Control Panel](#)

[3 How to Operate](#)


[4 Maintenance](#)

[5 Error Indication List](#)

[6 Troubleshooting](#)

7 Specifications

[Download this manual](#)

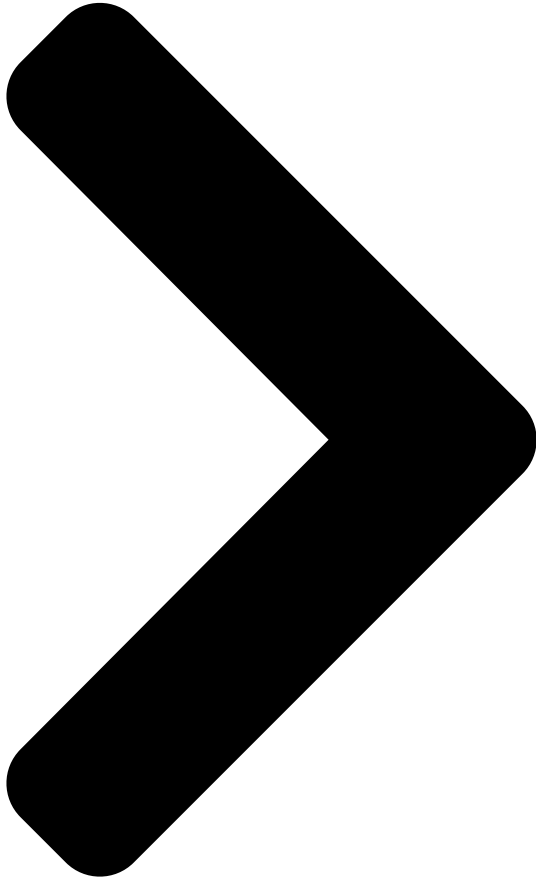

TOSHIBA FULLY AUTOMATIC WASHING
MACHINE

A E W - 9 7 7 0 S

TOSHIBA
Leading Innovation >>>

AEW-9770SUP

A E W - 1 1 7 0 S

AEW-1170SUP

Thank you for purchasing TOSHIBA Fully Automatic

Washing Machine.

-
-

Please read this manual carefully in order to operate the machine properly.


Sometimes you may find some water remaining in the drainage hose after your operation. This is caused by the production-line test and nothing to worry about.



OWNER'S MANUAL

CONTENTS

WARNING	2
CAUTION	3
DESCRIPTION OF PARTS	3
CONTROL PANEL	
DESCRIPTION	4~5
RECOMMENDED DETERGENT	
AMOUNT	5
HOW TO OPERATE	6~7
SUPER SPIN DRY (TUB DRY)	8
CUSTOM WASH CYCLES	9
CHILD PROOF MODE	10
OPTION MODE	11
PRESET MODE	12
RESUME FUNCTION	12
LAUNDRY GUIDE	13
MAINTENANCE	14~16
INSTALLATION	16~18
BEFORE CALLING	
THE SERVICEMAN	19~20
HANDLING METHOD FOR	
EMERGENCY	20
SPECIFICATIONS	20

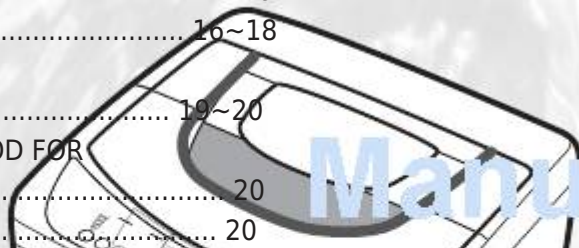

ManualsLib.com

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba AEW-9770S

[Washer Toshiba AW-7480EM Owner's Manual](#)

Fully automatic washing machine (16 pages)

[Washer Toshiba AW-8570SM Owner's Manual](#)

Fully automatic washing machine (20 pages)

[Washer Toshiba AW-J800AH Owner's Manual](#)

Fully automatic (24 pages)

[Washer Toshiba AW-J800A-PH Owner's Manual](#)

(22 pages)

[Washer Toshiba TW-BL80S2 Series Owner's Manual](#)

Front loading washer (40 pages)

[Washer Toshiba AW-8450SBE Owner's Manual](#)

Fully automatic washing machine (6 pages)

[Washer Toshiba aw-dc series Owner's Manual](#)

Fully automatic washing machine (37 pages)

[Washer Toshiba AW-B1100GM User Manual](#)

(20 pages)

[Washer Toshiba TW-T21BU105UWT Owner's Manual](#)

Front loading washing machine (36 pages)

[Washer Toshiba TW-T21BU115UWM Owner's Manual](#)

Front loading washing machine (36 pages)

[Washer Toshiba AW-1170SM Owner's Manual](#)

Fully automatic washing machine (20 pages)

[Washer Toshiba TW-BH85S2 Owner's Manual](#)

Front loading washing machine (30 pages)

[Washer Toshiba TW-BL80A2 Series Owner's Manual](#)

Front loading washing machine (34 pages)

[Toshiba TW-BK95GF4, TW-BK105GF4, TW-BK115GF4 - FRONT LOADING WASHING MACHINE Manual](#)

(article)

[Washer Toshiba TW-BK95G4 Series Owner's Manual](#)

Front loading washing machine (31 pages)

[Washer Toshiba TW-BH95M4H Owner's Manual](#)

(30 pages)

Summary of Contents for Toshiba AEW-9770S

[Page 1: Table Of Contents](#)

INSTALLATION16~18 BEFORE CALLING THE SERVICEMAN 19~20 HANDLING METHOD FOR EMERGENCY20 SPECIFICATIONS20 Thank you for purchasing TOSHIBA Fully Automatic Washing Machine. • Please read this manual carefully in order to operate the machine properly. •...

[Page 2: Warning](#)

WARNING WARNING: This indicates an important item which incorrect operation may lead to

injury. Never attempt to touch laundry in the spin basket until the motion of the basket stops completely. Laundry in the basket may become wrapped around the hand, even when the basket is only moving slowly.

[Page 3: Caution](#)

(Hybrid Screw Type) click is heard. Horizontal Level Indicator Cassette filter Plug Accessories For Model: Accessories For Model: AEW-9770SUP AEW-9770S AEW-1170SUP AEW-1170S Adjustable Leg (Front: 1 piece) Control Panel Water supply hose x 2 Pump drain hose Water supply hose x 2 (Orange nut for "Hot")

[Page 4: Description](#)

CONTROL PANEL DESCRIPTION Operation Panel of AEW-9770SU/P and AEW-1170SU/P. Digital Display U Following is the operation panel of AW-1170SU/P. • Apart from the displaying values of [WATER LEVEL], other items are common to • • After starting the operation AEW-9770SU/P . On explanation of [WATER LEVEL], the contents in () also apply to If the lid is open, the washer AEW-1170SU/P.

[Page 5: Amount](#)

RECOMMENDED DETERGENT AMOUNT ital Display Unit The estimated amount of washing the operation Manual Water Level Detergents (normal type) Softener Detergent en, the washer Setting e guided deter- Display 1.4 spoon of Concentrated the detergent Powder Liquid Nomal Type AEW-1170SU/P AEW-9770SU/P Type of supply using the measure spoon g the compact detergent is displayed.

[Page 6: How To Operate](#)

Make sure that there are no sign of water leakage at water tap or inlet valve. Connect the power plug. Preparation For Model AEW-9770S & AEW-1170S Set the drainage hose. Set the water supply hose correctly. (Refer to page 18) Turn the water faucet on.

[Page 7: How To Operate](#)

HOW TO OPERATE WASHING OF BLANKET TEMPERATURE TABLE The change for water temperature. For each program, temperature of water should be automatically setting and user can set by manual as table. Water temp. Water temp. for Cycle Initial setting manual setting REGULAR WARM HOT / WARM / COLD...

[Page 8: Super Spin Dry \(Tub Dry\)](#)

SUPER SPIN DRY (TUB DRY) Select "SUPER SPIN DRY" from the (WASH, RINSE, SPIN) cycle. The amount of laundry/once of spin Less than 5.0 kg Setting time for spinning • You can manually set the time of spinning according to the following guide: If you would like to shorten the time of drying clothes Turn the POWER on and put the laundry in the basket.

[Page 9: Custom Wash Cycles](#)

CUSTOM WASH CYCLES At first, the value for each cycle is the standard "REGULAR" "HEAVY WASH" cycles setting. The user can change the time of washing, of rinsing and of spinning on every cycle by pressing the buttons. The cycle can be set as you desire, e.g. spin only, reuse the washed water/detergent.

[Page 10: Child Proof Mode](#)

CHILD PROOF MODE (if you have small children) CHILD PROOF mode This model is equipped with CHILD PROOF mode. After this mode is set to ON, the washer will alarm if the lid is opened during the operation. If you find the accident such as children's falling into the wash tub, please take necessary safety action urgently.

[Page 11: Option Mode](#)

OPTION MODE The contents in () also apply to AEW-9770SU/P. If you feel the amount of water is less or much Water level is automatically set If you feel the amount of water is much. If you feel the amount of water is less. to suit the amount of laundry.

[Page 12: Preset Mode](#)

PRESET MODE How to use preset mode Turn the POWER on. Put the laundry in the basket and select your favorite cycle or water level. Set the custom wash cycle. Press the PRESET button to

preset the time. • The displayed time can be changed from 2 to 12 hours by increasing 1 hour per press.

[Page 13: Laundry Guide](#)

LAUNDRY GUIDE When using liquid detergent and bleach Carefully read the directions given in the manual for In case of reserving washing, pour the bleach into the the liquid detergent and bleaching agent and use them powder detergent part of the “powder detergent/finishing correctly.

[Page 14: Maintenance](#)

MAINTENANCE Cassette Filter Clean the lint trap at the end of operation. Cassette filter L How to remove L How to set in Hold the upper side of the cassette filter, and push down Hold the filter case with its top side up. Put the lower side and pull it at the same time.

[Page 15: Detergent/Softener Case](#)

MAINTENANCE Detergent/Softener case Remove the case to clean it. In addition, wipe away any dirt from the water supply port. Removing the case Remounting procedure Removal procedure; Mount the cap of the insertion case Pull the detergent /softener case toward you, then lift it for Lift the case obliquely in the same way as you remove it, removal.

[Page 16: Installation](#)

MAINTENANCE If the stainless steel wash basket rusts for external reasons • Do not put the metallic objects into the machine, e.g. Hair Please clean the rust by a soft cloth or a soft cloth with a cream cleaner. clip. * Do not use metallic brush because the body may scratch and easily rust.

[Page 17: Leveling The Washing Machine](#)

INSTALLATION Leveling the washing machine When adjusting the legs, supports the top of the machine. Do not support the machine bottom. Depending on locations of the bubble in the horizon- Adjust the legs so that the machine does not move. tal level indicator, place caps and lock legs (Make sure Note: After adjustment, lock the to fix adjustable legs.)

[Page 18: Installation](#)

• Be careful about water leak when take off pump drain hose. Installing the drainage hose for model AEW-1170S & AEW-9770S Moving the hook Drainage hose extension When inserting the drainage hose into Pay close attention to the height of the •...

[Page 19: The Serviceman](#)

BEFORE CALLING THE SERVICEMAN does not • Is there a power outage? Please confirm whether a power • Is the circuit breaker or fuses cut off? failure or fuse breaker is cut. Then draw operate • Is the machine’s plug properly inserted into an AC socket? out power supply plug, insert once again •...

[Page 20: Handling Method For Emergency](#)

HANDLING METHOD FOR EMERGENCY When the machine takes on abnormal operation, please disconnect the power plug and send it to our service agency for handling. Never disassemble the machine by yourself, for safety reasons. SPECIFICATIONS AEW-9770S AEW-9770SUP AEW-1170S AEW-1170SUP Mode...

This manual is also suitable for:

[Aew-9770supAew-1170sAew-1170sup](#)

Save PDF