

TOSHIBA

Toshiba 46WM48 Series Quick Set Up Manual And Remote Control

1
2

--

•

Bookmarks

--

Quick Links

[Download this manual](#) See also: [Owner's Manual](#)



2358 9663

Simple at-a-glance reference of your remote control

*To bring up on-screen information and
for the teletext initial/index function*

To return to the previous programme

Selectable picture preferences


On-screen Menus

Stereo/Bilingual reception

When using a TOSHIBA VCR or DVD:

m

*press
to PAUSE*

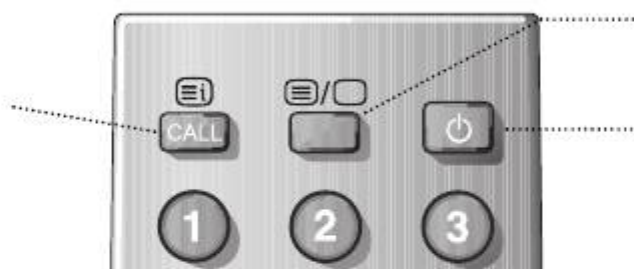

W

press
to EJECT
press I

q

to SKIP-REWIND

press

S

I to SKIP-FORWARD

press

r

to PLAY

press

p

to STOP

q

press

to REWIND

S

press

to FAST FORWARD

Number buttons

To select mode

Remove the back cover to insert the batteries, make sure they are inserted the right way round.

Suitable battery types for this remote are:

UM-4, AAA, IEC R03 1.5V.

To display teletext

For On/Standby mode

To select input from external sources

To access sub-pages when in teletext mode

Widescreen viewing

To exit Menus

To change programme positions and teletext pages

To alter the volume

When using menus the arrows move the cursor on the screen up, down, left or right. OK to confirm your selection

Teletext control buttons

Bass Boost/Super Woofer

To mute the sound

When in TV mode:

Time display

/

8

9

When in Teletext mode:



To reveal concealed text

r

To hold a wanted page

q

To enlarge teletext display size

S

To select a page whilst viewing a

/

8

9

normal picture

Printed on recycled paper.
100% Chlorine free.



[Next Page](#)

1
[2](#)

Related Manuals for Toshiba 46WM48 Series