

TOSHIBA

Toshiba DIGITAL Series User Manual

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57

--

•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

--

Quick Links

[Download this manual](#) See also: [Owner's Manual](#)



"Register your TV online at: www.toshiba.co.uk/registration"

22DV501B_DVD_A01_MB60_[GB]_(01-TV)_(IB_INTERNET)_DVB-T_(1900UK)_10072934.indd 1

22DV501B_DVD_A01_MB60_[GB]_(01-TV)_(IB_INTERNET)_DVB-T_(1900UK)_10072934.indd 1

User Manual

DIGITAL Series



English - 1 -

03.10.2011 18:39:32

03.10.2011 18:39:32

TOSHIBA
Leading Innovation >>>

[Table of Contents](#)

[Next Page](#)

- 1
- 2
- 3
- 4
- 5

Chapters

[Table of Contents](#) 6

[Features](#) 48

Related Manuals for Toshiba DIGITAL Series

[Speakers Toshiba e-STUDIO5540C Software Installation Manual](#)

Multifunctional digital systems (238 pages)

[All in One Printer Toshiba e-STUDIO6540C Management Manual](#)

Multifunctional digital color systems / multifunctional digital systems (192 pages)

[Flat Panel TV Toshiba 40BL702B Owner's Manual](#)

Digital series (50 pages)

[TV Toshiba 32BV501B User Manual](#)

Digital series (49 pages)

[LCD TV Toshiba 40BV701B User Manual](#)

(48 pages)

[TV Toshiba 22BL704B Owner's Manual](#)

Digital series (48 pages)

[TV Toshiba 32BV801B User Manual](#)

Digital series (45 pages)

[LED TV Toshiba Digital 19EL93 Series Owner's Manual](#)

(41 pages)

[Monitor Toshiba LED TV Series Owner's Manual](#)

(22 pages)

[Air Conditioner Toshiba RAS-10~16 SKV\(R\) Series Owner's Manual](#)

Split type (4 pages)

[Storage Toshiba MK1031 Installation Notes](#)

(4 pages)

[LCD TV Toshiba REGZA 52RV535U Specifications](#)

1080p full hd lcd tv with srt (2 pages)

[LCD TV Toshiba SL83* Digital Series Owner's Manual](#)

Toshiba lcd tv digital series regza owner's manual (80 pages)

[LCD TV Toshiba RL939 Digital Series Manual](#)

(90 pages)

[LCD TV TOSHIBA RL9*8 Series User Manual](#)

Digital series lcd tv (90 pages)

[LCD TV Toshiba REGZA SL73 Series Manual](#)

(77 pages)

Summary of Contents for Toshiba DIGITAL Series

[Page 1: User Manual](#)

User Manual DIGITAL Series "Register your TV online at: www.toshiba.co.uk/registration" English
- 1 - 22DV501B_DVD_A01_MB60_[GB]_(01-TV)_(IB_INTERNET)_DVB-T_(1900UK)_10072934.indd
1 22DV501B_DVD_A01_MB60_[GB]_(01-TV)_(IB_INTERNET)_DVB-T_(1900UK)_10072934.indd 1

[Page 2: Digital Switchover](#)

Digital Switchover switchover, and you won't need to re-tune. Keep this Television in the UK is going digital, bringing us all important information about how to re-tune your TV more choice and new services. Starting in late 2007 during the digitalTV switchover and ending in 2012, television services in the UK will go completely digital, TV region by TV region.

[Page 3: Re-Tuning: Toshiba Freeview Products](#)

* This process may affect any saved information stored on your product. Please consult your instruction manual or contact the manufacturer using the details above. TOSHIBA Customer Helpline: 0844 856 0730 TOSHIBA Online Support: www.toshiba.co.uk/tv-dvd-support English - 3
- 22DV501B_DVD_A01_MB60_[GB]_(01-TV)_(IB_INTERNET)_DVB-T_(1900UK)_10072934.indd 3
22DV501B_DVD_A01_MB60_[GB]_(01-TV)_(IB_INTERNET)_DVB-T_(1900UK)_10072934.indd 3...

[Page 4: Manual Re-Tuning](#)

Manual Re-tuning If your Freeview TV or box picks up a different regional service to your preferred service (e.g. BBC England instead of BBC Scotland, or ITV Central instead of ITV Anglia), you can use this manual re-tune If you are missing some services you may fi...

[Page 5](#) 4) Write down the "RF Channel" numbers for your transmitter using the Group boxes here: 5) Press MENU and use ◀ or ▶ to select Install and Retune. 6) Select Manual Channel Scan from the Installation menu and press OK. 7) Select Search Type as Digital by using ◀...

[Page 6: Table Of Contents](#)

Contents Digital Switchover 2 Electronic Programme Guide.....23 Language Selection24 Re-tuning: TOSHIBA Freeview Products3 Language Settings24 Manual Re-tuning 4 Preferred24 Safety Precautions8 Current24 Air Circulation 8 Digital Settings - Parental Control, Menu Lock, Set Heat Damage.....

[Page 7](#) Appendix D: PIN Information 42 Specifications and Accessories43 License Information44 Questions and Answers45 Toshiba One (1) Year Limited Warranty For TV's (the "Products")..... 47 English - 7 - 22DV501B_DVD_A01_MB60_[GB]_(01-TV)_(IB_INTERNET)_DVB-T_(1900UK)_10072934.indd 7 22DV501B_DVD_A01_MB60_[GB]_(01-TV)_(IB_INTERNET)_DVB-T_(1900UK)_10072934.indd 7 03.10.2011 18:39:40...

[Page 8: Safety Precautions](#)

Safety Precautions This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken to obtain the best results and for safety to be assured. Please read the points below for your own safety.

[Page 9: Installation And Important Information](#)

Furthermore, under no circumstances shall Toshiba be liable for any consequential loss and/or damage including but not limited to the following, loss of profit, interruption of business, the loss of recorded data whether caused during normal operation or misuse of the product.

[Page 10: Important Safety Information](#)

Important safety information WHEN THIS UNIT IS PLUGGED INTO THE WALL OUTLET, DO NOT PLACE YOUR EYES CLOSE TO THE OPENINGS TO LOOK INTO THE INSIDE OF THIS UNIT. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

[Page 11](#) Important safety information (continued) • Ensure that the unit is sufficiently ventilated! Never place it • The unit becomes warm when in operation. Do not place next to or underneath curtains! any covers or blankets on the unit in order to prevent overheating.

[Page 12: Removing The Pedestal Stand](#)

Removing the pedestal stand (1) Carefully lay the front of the TV face down on a flat, cushioned surface such as a quilt or blanket. Leave the stand protruding over the edge of the surface. Note: Extreme care should always be taken when removing the pedestal stand to avoid damage

to the LCD panel.

[Page 13: The Remote Control](#)

The Remote Control Simple at-a-glance reference of your remote control. Inserting Batteries and Effective Range of the Remote Control Remove the back cover to reveal the battery compartment and make sure the batteries are inserted the right way round. Suitable battery types for this remote are AAA, IEC R03 1.5V.

[Page 14: Connecting External Equipment](#)

Connecting External Equipment Before connecting any external equipment, remove the mains plug from the wall socket. A wide variety of external equipment can be connected to the Aerial cable:.....TV; therefore, the relevant owner's manuals for all additional Connect the aerial to the ANT. socket on the rear of the TV. equipment must be referred to for exact instructions.

[Page 15: Connecting An Hdmi](#)

Connecting an HDMI or DVI Device to the HDMI Input ® To Connect a DVI Device The HDMI input on your TV receives digital audio and uncompressed digital video from an HDMI source device Connect an HDMI-to-DVI adaptor cable (HDMI type A connec- or uncompressed digital video from a DVI (Digital Visual tor) to the HDMI input socket and audio cables to the SIDE AV Interface) source device.

[Page 16: Connecting A Computer](#)

Connecting a Computer Connecting a USB Memory To Connect a Computer Connect a USB Memory • You can connect a USB memory to your TV by With either an RGB/PC or an HDMI connection, you can watch your computer's display on the TV and hear the sound from using the USB input of the TV.

[Page 17: Controlling The Tv](#)

- To select an external input, Hold the "P/V/AV" button, source OSD will be displayed in a few second. Use "+/-" buttons to change source. NOTE: The USB socket has limited functionality, and Toshiba can take no responsibility for damage to other connected equipment.

[Page 18: Initial Installation](#)

Initial Installation Before switching on the TV, put your decoder and media recorder to Standby if they are connected and ensure the aerial is connected to your TV. To set up the TV, use the buttons on the remote control as detailed on page 13.

[Page 19: Auto Tuning](#)

Auto Tuning Auto Tuning As new services are broadcast, it will be necessary to retune the television in order to view them. • Auto Tuning will completely retune the television and can be used to update the channel list. It is recommended that Auto Tuning is run periodically to ensure that all new services are added.

[Page 20: Manual Tuning, Analogue Fine Tuning](#)

Manual Tuning, Analogue Fine Tuning The television can be tuned-in manually using Manual Search feature. Digital Manual Search Analogue Manual Search The feature is available for service engineers or The television can be tuned-in manually. For example: can be used for direct channel entry if the multiplex if the television cannot be connected to a media channel is known.

[Page 21: General Operation](#)

General Operation Stereo and Bilingual Transmissions Viewing Main Menu • Press MENU button on the remote control to view If stereo or dual language broadcasts are transmitted, the word Stereo or Dual will appear on the screen each time posi- main menu.

[Page 22: Channel List, Sorting Programmes, Programme Locking](#)

Channel List, Sorting Programmes, Programme Locking You can view stored channels and sort them by using the Channel List feature. Viewing Channel List Deleting a Channel You can press GREEN button to tag/untag all The channel order may be changed to suit your personal preference.

[Page 23: Viewing Info Banner, Electronic Programme Guide](#)

Viewing Info Banner, Electronic Programme Guide Viewing Info Banner • Press GREEN button to list the schedule. • Press BLUE button to display filtering options. • Press INFO button. The information screen will appear giving details of the channel and programme Note: There are alternative views of EPG screen.

[Page 24: Language Selection](#)

Language Selection Language Settings Using this menu you can adjust the preferred language settings. • Press MENU button and select Settings by using Left or Right button. • Select Language from setup menu and press OK to view this menu. Press the RETURN button on the remote control to exit.

[Page 25: Digital Settings - Parental Control, Menu Lock, Set Pin](#)

Digital Settings - Parental Control, Menu Lock, Set PIN You can view or set parental preferences of your TV. Viewing Parental Control Menu Maturity Lock (*) Press MENU button and select the Settings by using When set, this option gets the maturity information Left or Right button.

[Page 26: Configuring Picture Settings](#)

Configuring Picture Settings You can configure picture settings of your TV by using Picture Settings menu. Configuring Picture Settings Brightness You can use different picture settings in detail. You Sets the brightness value for the screen. Press can customize current picture mode settings as MENU button and select Picture by using Left or desired.

[Page 27: Noise Reduction](#)

Configuring Picture Settings - continued Noise Reduction Sometimes some words or picture elements may become distorted or pixelated. Using the Noise Reduction feature reduces this effect by smoothing out the edges. Press MENU button and select Picture by using Left or Right button. Press Up or Down button to select Noise Reduction.

[Page 28: Changing Picture Format](#)

Changing Picture Format Depending on the type of broadcast being transmitted, programmes can be viewed in a number of formats. Press SCREEN button repeatedly to select between Auto, 16:9, Subtitle, 14:9, 14:9 Zoom, 4:3, Panoramic or Cinema. When auto is selected the format being displayed is determined by the picture being broadcast. Note: Using the special functions to change the size of the displayed image (i.e.

[Page 29: Configuring PC Picture Settings](#)

Configuring PC Picture Settings You can set PC Mode picture settings when using the TV as a PC monitor. PC Picture Settings (*) H Position (*) While in VGA/PC mode, some items in Picture H (Horizontal) Position shifts the image horizontally to menu will be unavailable.

[Page 30: Configuring Sound Settings](#)

Configuring Sound Settings You can configure sound settings of your TV by using Sound Settings menu. Configuring Sound Settings In equalizer menu, the preset can be changed to Music, Movie, Speech, Flat, Classic and User. Sound settings can be configured according to your Press the MENU button to return to the previous personal preferences.

[Page 31: Settings Menu Operation, Conditional Access](#)

Settings Menu Operation, Conditional Access Configuring Your TV's Settings Other Settings Detailed settings can be configured to suit your Displays other setting options of the TV set. personal preferences. Using a Conditional Access Module Viewing Settings Menu The Common Interface Slot, situated on the side of the Press MENU button and select Settings by using Left television, enables the insertion of a CAM (Conditional or Right button.

[Page 32: Setting Timers, Setting Date/Time](#)

Setting Timers, Setting Date/Time Timers Editing a Timer • Select the timer you want to edit by pressing Up or To view Timers menu, press MENU button and select Down button. Settings by using Left or Right button. Press OK button to view Settings menu.

[Page 33: Source Settings, Other Controls](#)

Source Settings, Other Controls Configuring Source Settings Configuring Other Settings - General You can enable or disable selected source options. You can configure the settings of your TV. Select The TV will not switch to the disabled source options Settings from main menu and press OK to view the when SOURCE button is pressed.

[Page 34: Other Controls](#)

Other Controls Backlight Audio Description This setting controls the backlight level. Audio description refers to an additional narration track for blind and visually impaired viewers of Select Backlight by pressing Up or Down button. visual media, including television and movies. The Press Left or Right button to set Backlight to Auto, description narrator talks through the presentation, Medium, Maximum or Minimum.

[Page 35: Teletext Language](#)

Other Controls - continued Teletext language Use this setting to set a preferred Teletext language. Press MENU button and select Settings by using Left or Right button. Press OK button to continue. Use Up or Down button to select Language and then press OK button.

[Page 36: Usb Media Browser](#)

- You must obtain any required permission from copyright owners to use copyright content. Toshiba cannot and does not grant such permission.
- Depending on the file size and amount in your USB memory, it may take some time for loading to view.

[Page 37: Viewing Jpeg Files](#)

USB Media Browser - continued This TV allows you to enjoy photo or music files stored on a USB memory. Viewing JPEG Files Slideshow Feature To view photo files from a USB memory, you can use You can use this feature to display photos on your this menu screen.

[Page 38: Media Browser Settings](#)

USB Media Browser - continued This TV allows you to enjoy photo or music files stored on a USB memory. Media Browser Settings You can set your Media Browser preferences by using the Settings dialogue. Press Up or Down button to highlight an item and use Left Right button to set.

[Page 39: Analogue Text Services](#)

- For further information on your particular text system(s), see the broadcast text index page or, consult your local Toshiba dealer. Below is a guide to the functions of the remote control text buttons. Accessing Sub-Pages If a text page has sub-pages, press and enter the sub- page numbers 01,02,03 etc.

[Page 40: Appendix A: Pc Input Typical Display Modes](#)

Appendix A: PC Input Typical Display Modes The display has a maximum resolution of 1360 x 768. The following table is an illustration of some of the typical video display modes. Your TV may not support different resolutions. Supported resolution modes are listed below. If you switch your PC to an unsupported mode, a warning OSD will appear on the screen.

[Page 41: Appendix B: Av And Hdmi Signal Compatibility \(Input Signal Types\)](#)

Appendix B: AV and HDMI Signal Compatibility (Input Signal Types) Source Supported Signals Available PAL 50/60 NTSC 60 (SCART) RGB 50 RGB 60 PAL 50/60 SIDE AV NTSC 60 480i 60Hz 480p 60Hz 576i 50Hz 576p 50Hz 720p 50Hz YPbPr 720p 60Hz 1080i...

[Page 42: Appendix C: Supported File Formats For Usb Mode](#)

Appendix C: Supported File Formats for USB Mode Format Remarks File Media Extension Video Audio (Maximum resolution/Bitrate etc.) MPEG 1/2 Sample Rate: 8k ~ 48kHz, Music .mp3 Layer 1/ 2/ Bitrate: 128kbps~320kbps 3 (MP3) Baseline WxH = 15360x8640 JPEG Photo .jpg Progressive WxH = 1024x768...

[Page 43: Specifications And Accessories](#)

Specifications and Accessories Broadcast Systems/Channels DVB-T, MPEG2 Video Input PAL, SECAM, NTSC 4.43 Stereo Nicam External Connections 1-SCART 1 Input 21-pin SCART RGB, A/V 2-SCART-S (via SCART 1) Input 21-pin SCART S-Video 3-YPbPr (via VGA) Input Mini D-Sub 15-Pin Analogue 4-SIDE AV Input RCA Sockets...

[Page 44: License Information](#)

License Information • HDMI, the HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries. • DVB is a registered trademark of the DVB Project. • [1] EIA/CEA-861-D compliance covers the transmission of uncompressed digital video with high-bandwidth digital content protection, which is being standardized for reception of high-defi...

[Page 45: Questions And Answers](#)

Questions and Answers Questions Answers Why is there no sound or picture? Why don't the controls of the TV work? Check the TV is not in standby mode. Check that CHILD LOCK is not selected. Check the mains plug and all mains connections. Why is the sound only coming from one speaker Why is there a picture but no sound? when stereo sound is selected?

[Page 46](#) Questions Answers Why when digital subtitles have been selected Why doesn't the Media Browser feature operate? are they not showing on screen? Make sure that USB memory is connected correctly. Subtitles are not currently being transmitted by the Incorrect behaviour may occur with a USB Hub broadcaster.

[Page 47: Toshiba One \(1\) Year Limited Warranty For Tv's \(The "Products"\)](#)

(1) year from the date of original purchase when brand new ("Warranty Period"). 3. If a failure or defect covered by the warranty arises and a valid claim is received by Toshiba within the Warranty Period, Toshiba shall at its option and to the extent permitted by law, repair or replace the machine or any components free of charge or refund the purchase price of the Product.

[Page 48: Features](#)

Features Contents Features 48 General Properties General Properties.....48 • DVD / CD / CD-R / CD-RW / MP3 / JPEG / MPEG. Safety Information49 • NTSC/PAL playback (according to disc content) Notes on Discs 49 On handling discs

[Page 49: Safety Information](#)

On cleaning Safety Information • Before playing, clean the disc with a cleaning cloth. CAUTION Wipe the disc from the center out. DVD Player is a class 1 laser product. However this product uses a visible laser beam which could cause hazardous radiation exposure.

[Page 50: Licence Notification](#)

Licence Notification • This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Rovi Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Rovi Corporation.

[Page 51: Dvd Control Panel Buttons](#)

DVD Control Panel Buttons A. Disc loader Plays/pauses the disc. When DVD menu (root menu) is active, this button functions as "button select" (selects the highlighted item in menu) if this is not prohibited by the disc. Stops playing disc / Ejects the disc. Note: •...

[Page 52: General Operation](#)

General Operation You can operate DVD, movie CD, music or picture CD's content by using the proper buttons on your remote control. Below are main functions of commonly used remote control buttons. Buttons on the Movie Picture Music Remote Control Playback Playback Playback...

[Page 53: General Playback](#)

For your convenience: General Playback If you attempt to enter a number greater than the total

Basic Play time of the current title, the time search box disappears and “ Input Invalid” message appears on up-left Press the button. corner of screen. Insert a disc to the loader.

[Page 54: Preference Setup Page](#)

Preference Setup Page Spdif Output Default You can set Spdif Output as RAW or PCM. If you select PCM from Spdif Output in DVD menu and If you choose Reset and press OK button, the play DVD with Dolby audio, you can get audio output factory-presets are loaded.

[Page 55: Some Functions \(Angle, Zoom, Etc.\) Do Not Work](#)

Some functions (Angle, Zoom, etc.) do DVD has a structure consisting of two 0.6-mm thin discs, which are adhered to each other. Since the not work thinner the disc, the higher the density at which the • These functions are not available on the DVD. information can be recorded, a DVD disc has a greater •...

[Page 56: Disc Types Compatible With This Unit](#)

Disc Types Compatible with This Unit English - 56 - 22DV501B_DVD_A01_MB60_[GB]_(02-DVD)_(WODIVX)_(IB_INTERNET)_(1900UK)_10072934.indd 56
22DV501B_DVD_A01_MB60_[GB]_(02-DVD)_(WODIVX)_(IB_INTERNET)_(1900UK)_10072934.indd 56 03.10.2011 18:40:50 03.10.2011 18:40:50...

[Page 57: Supported File Formats](#)

Supported File Formats Format Remarks File Media Extension Video Audio (Maximum resolution/Bitrate etc.) MPEG Layer MPEG1 .mpg/ .dat/ 1/2/3 .vob Movie MPEG2 MPEG2 (optional) MPEG4 PCM/MP3 .avi MS ISO PCM/MP3 Support SP and ASP MPEG4 Sample Rate: 8k ~ 48kHz MPEG 1/2 Music Sample Rate: 8k ~ 48kHz,...