

TOSHIBA

Toshiba WAL14C Operation Manual

For lcd color tv toshiba wall mounting

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18




•

Bookmarks




[Download this manual](#)

Quick Links

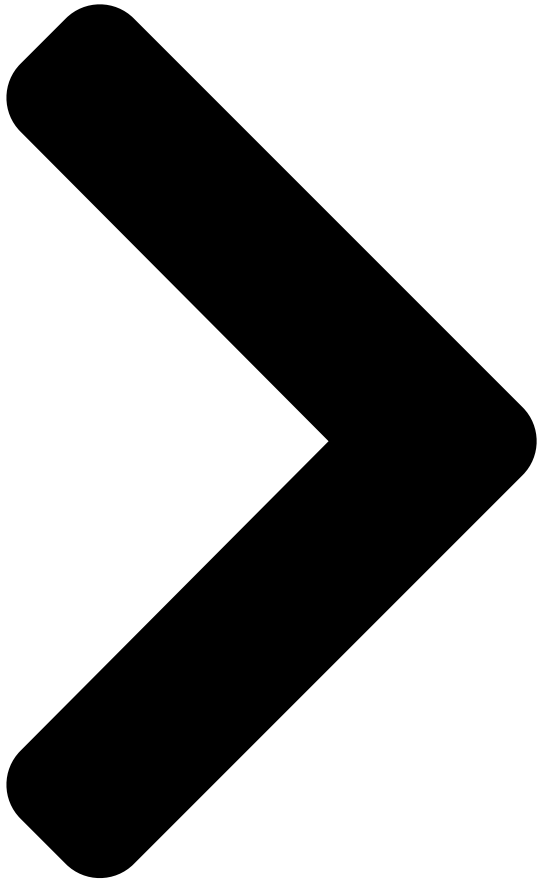

Operation Manual

 

For LCD Color TV

Toshiba **TOSHIBA** Wall Mounting

Model

WAL14C

1

VX1A00189800

 


Table of Contents

Next Page

1
2
3
4
5

Related Manuals for Toshiba WAL14C

[TV Mount Toshiba WAL7C User Manual](#)

Wall mounting for lcd color tv (2 pages)

[TV Mount Toshiba WAL13CS Operation Manual](#)

Wall mounting for lcd color tv (13 pages)

Summary of Contents for Toshiba WAL14C

[Page 1](#) Operation Manual For LCD Color TV Toshiba Wall Mounting Model WAL14C
VX1A00189800 C100047_WAL14C_EN.indd 2010/12/15 13:33:59...

[Page 2](#) For correct use, please read this manual carefully. This wall mounting is designed exclusively for a Toshiba LCD color TV. Before use of this wall mounting, please confirm the model of the LCD color TV applicable or not (see page 17).

[Page 3: Notice For Safety](#)

◦ Toshiba is not liable for incidental damages (such as profit loss or interruption in business, loss of TV subscribing fee etc.) caused by use or being unable to use of the product.

[Page 4](#) Notice for Safety continued ◆ Notice for LCD color TV users Warning ■ Please ask qualified installers to install or move the equipment to or from the wall. The application defect could result in injury. If the equipment has to be dismantled for scrapping, etc. please also ask qualified installers to do Direction Please contact the dealer for extension or modification of cable wiring.

[Page 5](#) ■ Do not install in vibrant places Vibration may lead to TV moving or toppling, resulting in injury. Prohibition ■ It is designed exclusively for a Toshiba LCD TV. Do not use it elsewhere. Otherwise may cause injury. Prohibition C100047_WAL14C_EN.indd...

[Page 6](#) Notice for Safety continued Warning ■ Tighten all screws properly at the TV bracket. If the installation is improper, the TV may fall, resulting in death, injury, TV or floor damage etc. Use of other screws may cause installation defect. Direction ■...

[Page 7: Preparation Before Installation](#)

Preparation before installation (The operation must be done by qualified technicians) ■ The operation of taking the TV out of the case or removing it from the stand shall be Cautions taken by at least 2 people. Injury or pain may cause for operation by one people. ●...

[Page 8](#) Install the "TV fix bracket" to the TV set body ● The combination of the attachments corresponding to the installation conditions of 46/55WL700E/T use the fixed screws from the table for fixing. M8 Screw Hole TV fix bracket M6 Screw Hole M4 Screw Hole M6 Screw Hole M8 Screw Hole...

[Page 9](#) Attach the speaker to the monitor by using the 6 mounting screws (M4×14) ● Use the provided mounting screws to fix corresponding to a specific models. Please tighten the screws. ● The fixing position differs for different models. 55X1000C fixed position of the screws Installing screws of the speaker (M4×14) Connect the speaker with the monitor ●...

[Page 10](#) (2) Install the "TV fix bracket" to the TV set body ● Use the fixed screws to install in accordance with the above table Fixed screws M8 Screw Hole M6 Screw Hole M4 Screw Hole M6 Screw Hole M8 Screw Hole TV fix bracket M4 Screw Hole * 55X1000C...

[Page 11](#) Assembling and Installation (Install wall-mounting metal fixture) Assembling the wall bracket ● Use the fixed screws (M5×8) inside the supplied bag □ for assembling. Attach the

"wall brackets" on both sides by using the supplied "metal connector" and make it fit with the TV brackets installed in step1-(2). ●...

[Page 12](#) Install the wall side metal mounting bracket to the wall ● When installing, please use the eligible expansion screws or screws to ensure the support to the TV set and "wall bracket" and keep both sides at the same level (not tilted) when installing to the wall. ●...

[Page 13](#) Set the installation angle of the TV set (1) When it is set vertical (0°) Fixed screws ● No angle adjustment is needed ● Loose the fixed screwing B by following the step of Fixed screws 2- ①. Fixed screws ●...

[Page 14](#) Hang TV fix brackets on the wall brackets. ● The operation must be done by more than 2 people. (1) Follow the steps below to install ① Insert the "lower long screw hanging part" of the "TV fix bracket" to the upper part of "long fixed screws for the TV set body"...

[Page 15](#) Change of the angle ● If the change of the angle is required after the installation, please consult the dealer or ask the qualified technicians to do it. Please take the TV set from the wall bracket when changing the angle. The operation must be done by more than 2 people.

[Page 16](#) Disassembly (The operation must be done by qualified technicians) The operation must be done by more than 2 people. Remove the LCD TV set from the wall bracket (1) Put a blanket on a flat place ● Please select the place to put the TV set in advance. (2) Pull out the power plug from socket ●...

[Page 17](#) Dimension when the TV set is installed on the wall (unit: mm) WAL14C Models can be installed with this product: 46/55WL700, 55WL800, 55X1000C, &, OTHER 42 in ~ 55 in model Dimension of the wall bracket When the about distance is 400mm between screws of the When the about distance is 200mm between screws of metal mounting bracket at the back of the TV set.

[Page 18: Parts Table](#)

M6 × 14, 25, 40, 55, 75 Screw 14, 25, 40, 55, 75 M5 × 8, 25, 40, 55, 75 Screw M4×8 Screw Specification Model: WAL14C Dimension: (W) 268mm (about distance at 200mm), 420mm (spacer) 468mm (about distance at 400mm) 27mm (Wall bracket)