

 
Exploded Views And Parts List - Toshiba RAS-B10SKVP-E Service Manual

Split type air conditioner

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118



-

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks



13-1. Indoor Unit

RAS-B10SKVP-E, RAS-B13SKVP-E, RAS-B16SKVP-E

241

216 213

237

205

247


202

* The parts in the following parts list are conformed to RoHS.
Therefore be sure to use the following parts for repairing and replacing.

Location

Part

No.

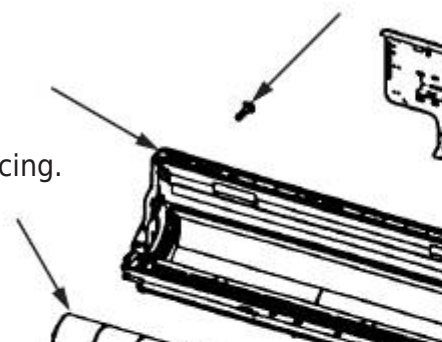

No.

201
43005709
Panel Ass'y, Front

202
43009694
Grille, Air Inlet

204
43080512
Filter, Air, Right

205
43080521
Filter, Air, Left

206
43009693
Louver, Horizontal

209
4302C067
Motor, Fan, FPC

210
4302D003
Motor, Louver

211
4306A024
Cord, Motor, Louver

212
43039363
Band, Motor, Left

213
43039321
Base, Bearing


214
43020346
Fan, Cross Flow

215
43039314
Band, Motor

216
43020253
Bearing

217
4301V028
Holder, Pipe

218
43049701
Pipe, Shield (B16SKVP-E)

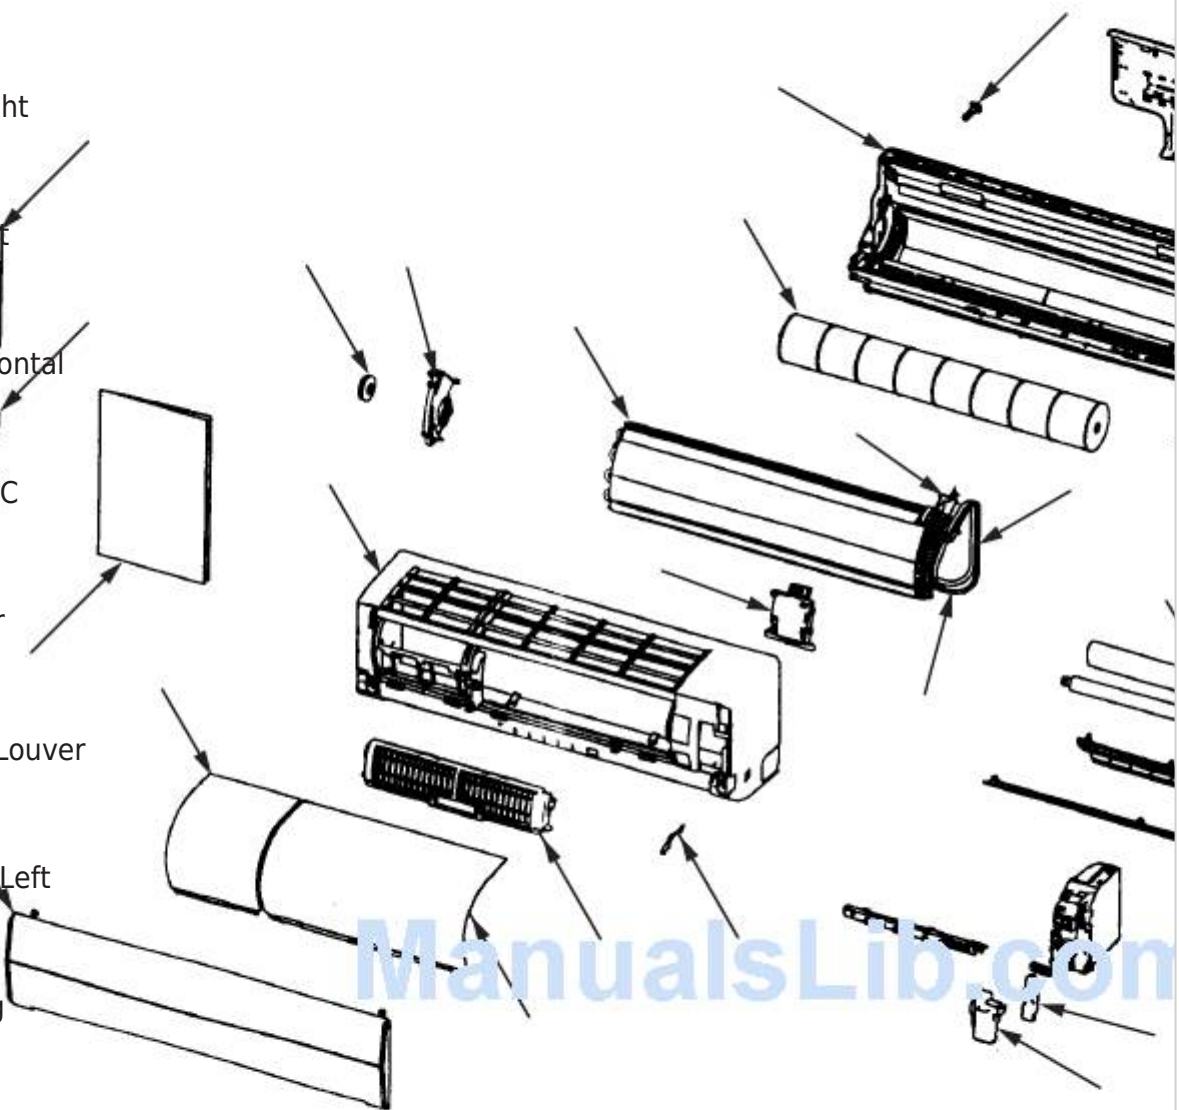

219

43049698

Pipe, Shield

(B10SKVP-E, B13SKVP-E)

221

43047671

Pipe Ass'y, Connecting, Gas

(B10SKVP-E, B13SKVP-E)

222

43047672

Pipe Ass'y, Connecting, Gas

(B16SKVP-E)

13. EXPLODED VIEWS AND PARTS LIST

225, 226

201

246

245

204

Description

240

238

214

230

221, 222, 224

229

Location

Part

No.

No.

223

43049674

224

43047673

225

43044821

226

43044822

227


43039324

229

43019904


230

43049770

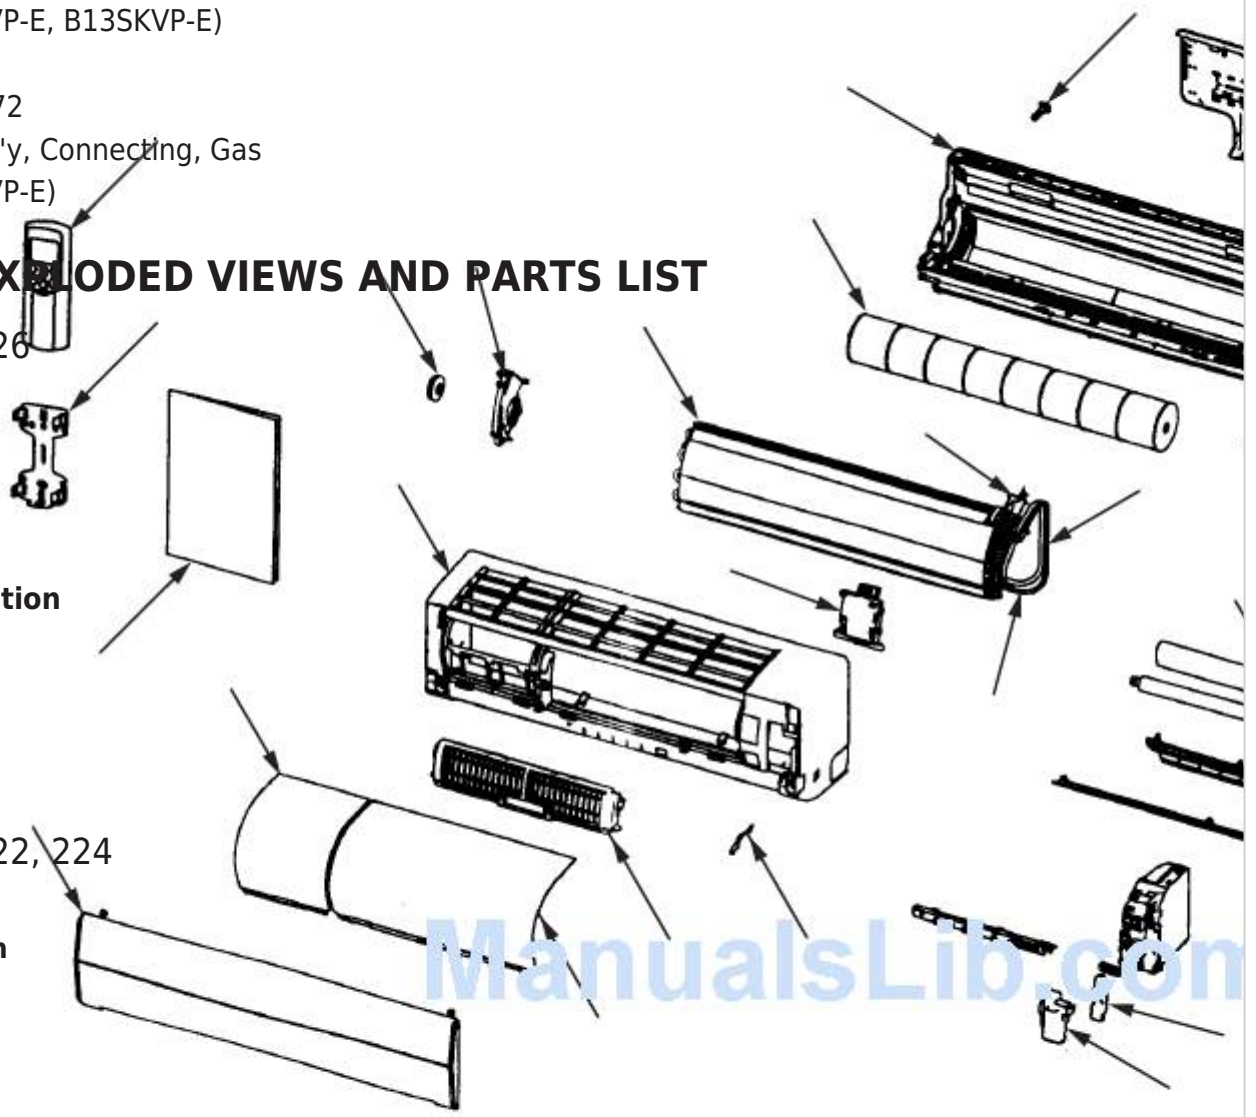

223			
43049674			
224			
43047673			
225			
43044821			
226			
43044822			
227			
43039324			
229			
43019904			
230			
43049770			

232
 43062256
 233
 43062247
 234
 43082293
 237
 43083071
 238
 43003311
 239
 43070188
 240
 43079268
 241
 43066014
 245
 43080528
 246
 43080563
 247
 4308N971
 - 108 -
 234
 212
 223
 218, 219
 210
 206
 233
 232

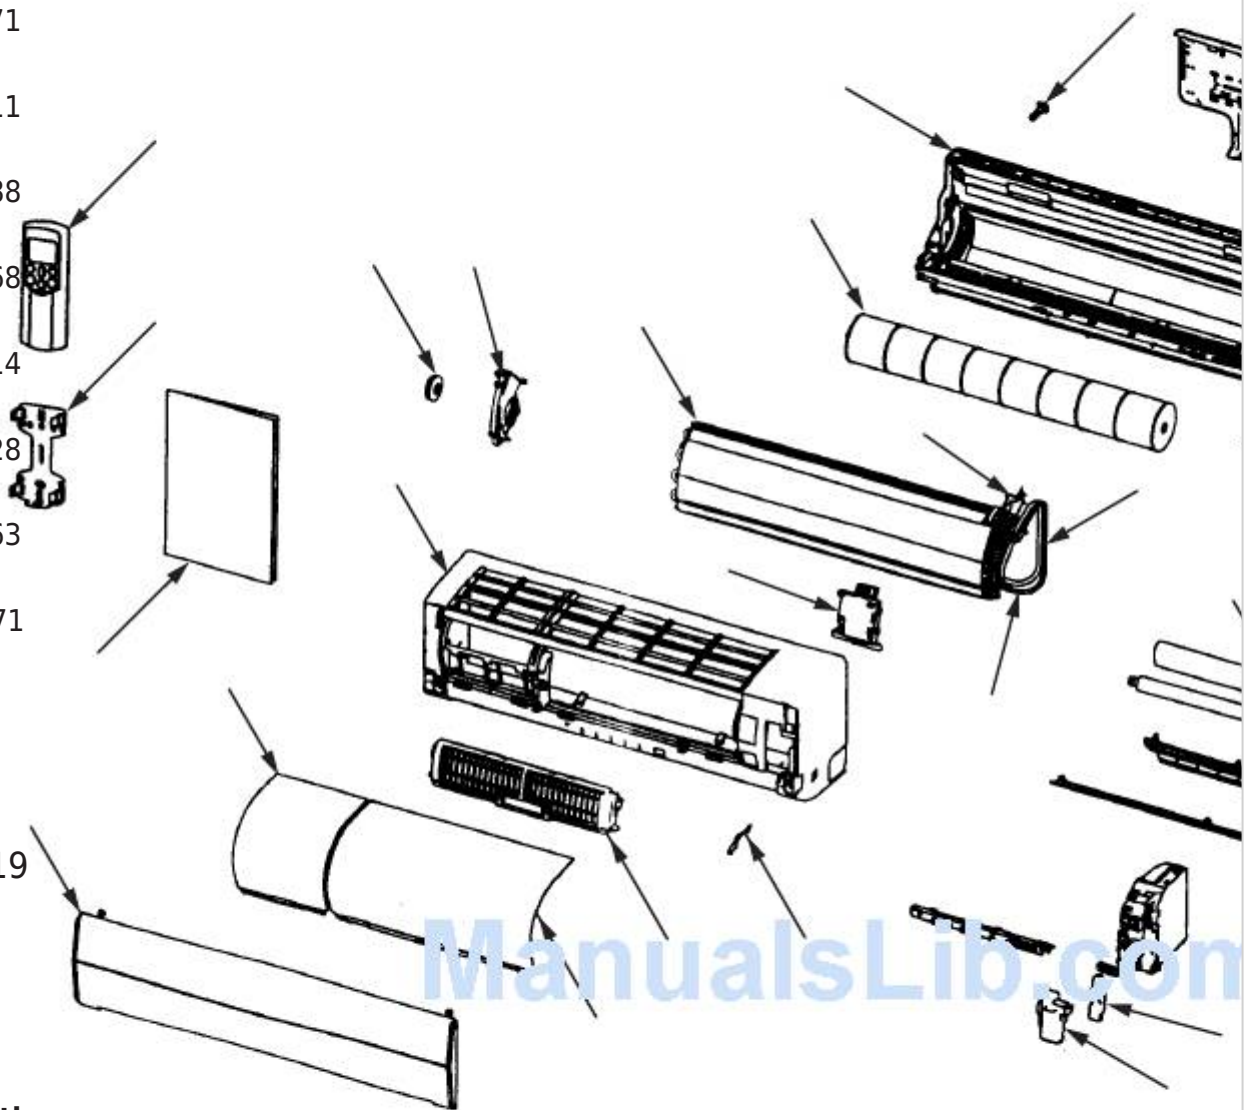

Description

Spring (B16SKVP-E)
 Pipe Ass'y, Connecting,
 Liquid

Evaporator Ass'y (B10SKVP-E, B13SKVP-E)			
Evaporator Ass'y (B16SKVP-E)			
Guide, Drain			
Holder, Sensor			
Holder, Evaporator, Right			
Cover, Terminal			
Cover, Lead			
Plate, Installation			

Holder, Remote Controller
Body Ass'y, Back
Hose, Drain
Cap, Drain
Remote Controller,
WH-H04JE
Plasma Pure Filter
Generator Ass'y, HV
Owner's Manual

217


209

215

211

239

227

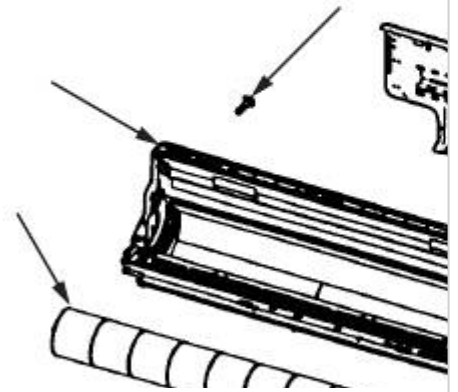

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1

...

107

108

109

110

Quick Links:

[Specifications](#)

[How to Diagnose the Trouble](#)

[How to Replace the Main Parts](#)

[Exploded Views and Parts List](#)

Chapters

[Table of Contents](#) 2

[Operation Description 9-2. 1. Basic Operation](#) 28

Related Manuals for Toshiba RAS-B10SKVP-E

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(148 pages)

[Air Conditioner Toshiba RAS-4M23SAV-E Service Manual](#)

Split type (121 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(120 pages)

[Air Conditioner Toshiba RAS-10SAVP-E Service Manual](#)

(119 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type (117 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(117 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type air conditioner (91 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type; for general public use (31 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type (31 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(19 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

Split type air conditioner (19 pages)

[Air Conditioner Toshiba RAS-16SKVP-ND Owner's Manual](#)

(230 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Installation Manual](#)

(132 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Owner's Manual](#)

(61 pages)

[Air Conditioner Toshiba RAS-B10S4KVDG-E Installation Manual](#)

(24 pages)

[Air Conditioner Toshiba RAS-B13S4KVDG-E Service Manual](#)

(149 pages)

Related Content for Toshiba RAS-B10SKVP-E

[RAS-2M10G3AVG-E Exploded Views And Parts List](#)

Toshiba RAS-2M10G3AVG-E

[RAS-5M34G3AVG-E Exploded Views And Parts List](#)

Toshiba RAS-5M34G3AVG-E

[MMU-UP0031YHP-ETR Exploded Views And Parts List](#)

Toshiba MMU-UP0031YHP-ETR

[RAV-GV1101AT8P-TR Exploded Views And Parts List](#)

Toshiba RAV-GV1101AT8P-TR

[Carrier MMU-UP0151YHP-UL Exploded Views And Parts List](#)

Toshiba Carrier MMU-UP0151YHP-UL

[Carrier TCB-IFDMR01UP-UL Exploded Views And Parts List](#)

Toshiba Carrier TCB-IFDMR01UP-UL

[RAV-GM562ATP-TR Exploded Views And Parts List](#)

Toshiba RAV-GM562ATP-TR

[MMD-UP0721HFP-UL Exploded Views And Price List Of Parts](#)

Toshiba MMD-UP0721HFP-UL

This manual is also suitable for:

[Ras-10savp-eRas-13savp-eRas-b16skvp-eRas-16savp-eRas-b13skvp-eRas-10skvp-nd](#) ... [Show all](#)