



# Set Up Of Service P.c. Board - Toshiba RAS-B10SKVP-E Service Manual

 
Split type air conditioner



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18

19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67  
68

69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117  
118



•

[Table of Contents](#)

- 

Troubleshooting



•

## Bookmarks





Before replacing the P.C. board, set up the P.C. board according to the following table.

**When repaired P.C. board should be electric discharge of capacitor. (C12, C13, C14)**

Caution

**APPLICATION MODELS :**

**RAS-10SAVP-E, RAS-13SAVP-E, RAS-16SAVP-E**

**RAS-10SAVP-ND, RAS-13SAVP-ND, RAS-16SAVP-ND**

**JUMPER SET UP :**

As shown in the following table, cut jumper lead wire (J800, J801, J802, J806) according to each model.



**Corresponding**

**ORIGINAL**

**model**

Jumper lead wire

J800

Jumper lead wire  
 J801  
 Jumper lead wire  
 J802  
 Jumper lead wire  
 J806

**LOCATION OF JUMPER LEAD WIRE :**

**14. SET UP OF SERVICE P.C. BOARD**

**RAS-10SAVP-E**



Close  
 Close  
 (Original)  
 (Original)  
 Close  
 Close  
 (Original)  
 (Original)  
 Close  
 Close  
 (Original)  
 (Original)

Close  
 Close  
 (Original)  
 (Original)


J800, J801, J802  
 MCC-5009  
 C12

**RAS-13SAVP-E**  
**RAS-16SAVP-E**

Close  
 Open  
 (Original)  
 (Cut)  
 Open  
 Close  
 (Cut)  
 (Original)  
 Close  
 Close  
 (Original)  
 (Original)  
 Close  
 Close  
 (Original)  
 (Original)

IC800  
 L01  
 C13  
 C14


ManualsLib.com

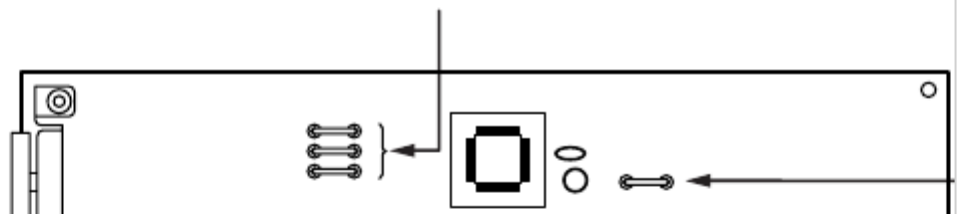

**RAS-**

**RAS-**

**10SAVP-ND 13SAVP-ND 16SAVP-ND**

Open

Close

(Cut)

(Original)

Open

Close

(Cut)

(Original)



Close

Open

(Original)

(Cut)

Close

Close

(Original)

(Original)

J806

Capacitor

**RAS-**

Close

(Original)

Open

(Cut)

Close

(Original)

Close

(Original)


[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1

...

117

118

119



Quick Links:

[Specifications](#)

[How to Diagnose the Trouble](#)

[How to Replace the Main Parts](#)

[Exploded Views and Parts List](#)

## Chapters

[Table of Contents](#) 2

[Operation Description 9-2. 1. Basic Operation](#) 28

### Related Manuals for Toshiba RAS-B10SKVP-E

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(148 pages)

[Air Conditioner Toshiba RAS-4M23SAV-E Service Manual](#)

Split type (121 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(120 pages)

[Air Conditioner Toshiba RAS-10SAVP-E Service Manual](#)

(119 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type (117 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(117 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type air conditioner (91 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type; for general public use (31 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type (31 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(19 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

Split type air conditioner (19 pages)

[Air Conditioner Toshiba RAS-16SKVP-ND Owner's Manual](#)

(230 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Installation Manual](#)

(132 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Owner's Manual](#)

(61 pages)

[Air Conditioner Toshiba RAS-B10S4KVDG-E Installation Manual](#)

(24 pages)

[Air Conditioner Toshiba RAS-B13S4KVDG-E Service Manual](#)

(149 pages)

## Related Content for Toshiba RAS-B10SKVP-E

[RAV-GM562ATP-TR Replacement Of The Service P.c. Board](#)

Toshiba RAV-GM562ATP-TR

[MMD-UP0721HFP-UL Replacement Of Service P.c. Board](#)

Toshiba MMD-UP0721HFP-UL

[RAV-HM301SDTY-E Replacement Of Service P.c. Board](#)

Toshiba RAV-HM301SDTY-E

[RAV-GV1101ATP-TR Replacement Of The Service P.c. Board](#)

Toshiba RAV-GV1101ATP-TR

[RAV-GM901CTP Series Replacement Of Service P.c. Board](#)

Toshiba RAV-GM901CTP Series

[RAV-GM561UT-E Replacement Of Service P.c. Board](#)

Toshiba RAV-GM561UT-E

[RAV-GM561ATP-NZ Replacement Of The Service P.c. Board](#)

Toshiba RAV-GM561ATP-NZ

[RAV-GM901UTP Series Replacement Of Service P.c. Board](#)

Toshiba RAV-GM901UTP Series

This manual is also suitable for:

[Ras-10savp-eRas-13savp-eRas-b16skvp-eRas-16savp-eRas-b13skvp-eRas-10skvp-nd](#) ... [Show all](#)