

 
Outdoor Unit - Toshiba RAS-B10SKVP-E Service Manual

Split type air conditioner

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118



•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks



20
28
108
125
Drain hole
Fin guard

Mounting dimensions of anchor bolt

600
Intake
D
50 or more
Intake
Outside line

C
of product
B
200 or more
2-dia.11 × 14 long hole
Outlet

(For dia.8-10 anchor bolt)
90
Dia.11-14U-shape hole
(For dia.8-10 anchor bolt)
8-dia.7 hole

(For fixing outdoor unit)
dia.11 × 14 long hole
(For dia.8-10 anchor bolt)

257
Packed valve cover
Fan guard
22
25
71
Charging port
4-dia.4.5 embossment
88

When installing the outdoor unit,
Leave open in at least two of
directions (A), (B), (C) and (D)
shown in the figure below.

250 or more
A
(Minimum distance from wall)

- 19 -





145
157
79
Connecting pipe port
(Pipe dia.6.35)
Connecting pipe port
(Pipe dia.9.52
: 10SAVP-E, ND)
(Pipe dia.9.52
: 13SAVP-E, ND)
(Pipe dia.12.7
: 16SAVP-E, ND)

31
143
342
600
54
38
Outside line

11
of product

Detailed A leg part

11
2-dia.7 hole
Outside line

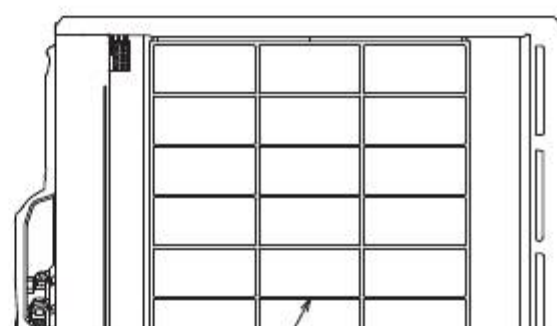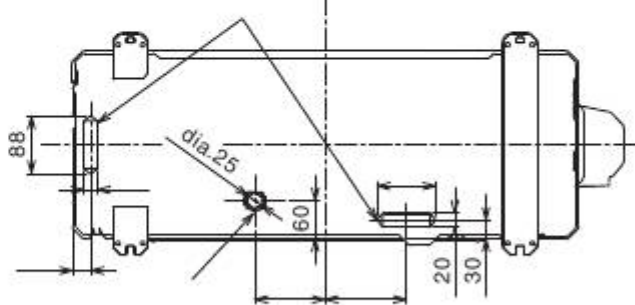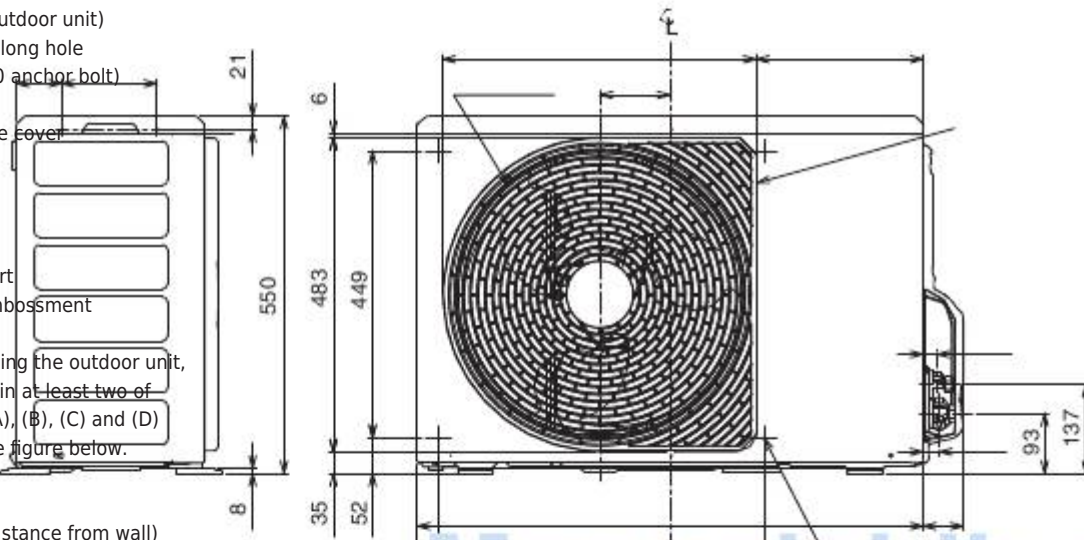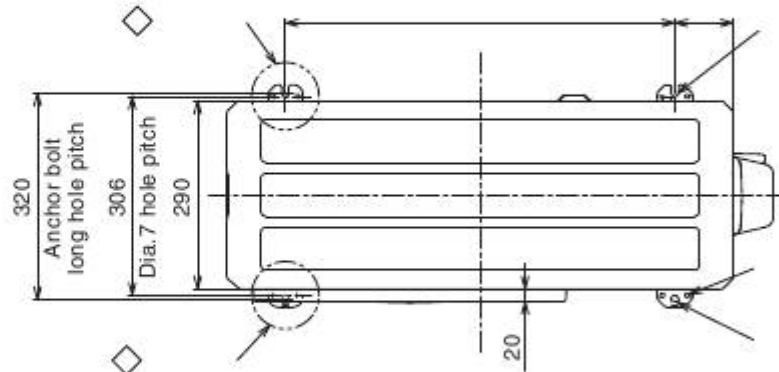

ManualsLib.com

320
320

of product

38

54

600

Detailed B leg part

[Table of Contents](#)

[Previous Page](#)

[Next Page](#)

1
...
16
17
18
19
20
21
22
23

Quick Links:

[Specifications](#)

[How to Diagnose the Trouble](#)

[How to Replace the Main Parts](#)

[Exploded Views and Parts List](#)

Chapters

[Table of Contents](#) 2

[Operation Description 9-2. 1. Basic Operation](#) 28

Related Manuals for Toshiba RAS-B10SKVP-E

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(148 pages)

[Air Conditioner Toshiba RAS-4M23SAV-E Service Manual](#)

Split type (121 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(120 pages)

[Air Conditioner Toshiba RAS-10SAVP-E Service Manual](#)

(119 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type (117 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(117 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type air conditioner (91 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type; for general public use (31 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type (31 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(19 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

Split type air conditioner (19 pages)

[Air Conditioner Toshiba RAS-16SKVP-ND Owner's Manual](#)

(230 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Installation Manual](#)

(132 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Owner's Manual](#)

(61 pages)

[Air Conditioner Toshiba RAS-B10S4KVDG-E Installation Manual](#)

(24 pages)

[Air Conditioner Toshiba RAS-B13S4KVDG-E Service Manual](#)

(149 pages)

Related Content for Toshiba RAS-B10SKVP-E

[RAS-M07N3KV2 Series Outdoor Unit](#)

Toshiba RAS-M07N3KV2 Series

[Carrier MMU-UP0151YHP-UL Check Codes Displayed On Remote Controller And Smms Series Outdoor Unit \(7-Segment Display On I/F Board\) And Locations To Be Checked](#)

Toshiba Carrier MMU-UP0151YHP-UL

[RAS-B24B2KVG-E Outdoor Unit](#)

Toshiba RAS-B24B2KVG-E

[MMY-MAP0806FT8P-E Carrying In The Outdoor Unit](#)

Toshiba MMY-MAP0806FT8P-E

[MCY-MHP0806HT8-C Series Function To Start / Stop \(On / Off\) Indoor Unit From Outdoor Unit](#)

Toshiba MCY-MHP0806HT8-C Series

[MMY-MUP0961HT6P-UL Function To Start/Stop \(On/Off\) Indoor Unit From Outdoor Unit](#)

Toshiba MMY-MUP0961HT6P-UL

[RAV-GM562ATP-TR Outdoor Unit](#)

Toshiba RAV-GM562ATP-TR

[MMY-MUP0721FT6P-UL Function To Start/Stop \(On/Off\) Indoor Unit From Outdoor Unit](#)

Toshiba MMY-MUP0721FT6P-UL

This manual is also suitable for:

[Ras-10savp-eRas-13savp-eRas-b16skvp-eRas-16savp-eRas-b13skvp-eRas-10skvp-nd](#) ... [Show all](#)