

Toshiba RAS-B10SKVP-E Service Manual page 28

Split type air conditioner

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118



-

•

Troubleshooting

•

Bookmarks



9-2. Operation Description

9-2.

1. Basic operation	29
1. Operation control	29
2. Cooling/Heating operation	30
3. AUTO operation	30
4. DRY operation	30
2. Indoor fan motor control	31
3. Outdoor fan motor control	33
4. Capacity control	34
5. Current release control	34
6. Release protective control by temperature of indoor heat exchanger	35
7. Quick heating control	36
8. Defrost control (Only in heating operation)	36

9. Louver control	37
1) Louver position	37
2) Air direction adjustment	37
3) Swing	37
10. SLEEP MODE operation	38
11. Temporary operation	39
12. Air purifying control [Detection of abnormality]	39
13. Discharge temperature control	40
14. Pulse motor valve (P .M.V.) control	41
15. Clean operation	42
16. Clean operation release	43
17. Select switch on remote controller	44
18. Set temp. correction	45
19. Outdoor Quiet control	46
20. 8°C HEAT operation (-ND model only)	47
21. Cord heater control (-ND model only)	49
9-3. Auto Restart Function	50
9-3-1. How to Set the Auto Restart Function	50
9-3-2. How to Cancel the Auto Restart Function	51
9-3-3. Power Failure During Timer Operation	51
9-4. FILTER Indicator	51
9-4-1. How to Turn Off FILTER Indicator	51
9-5. Remote Controller and Its Functions	52
9-5-1. Parts Name of Remote Controller	52
9-5-2. Name and Functions of Indications on Remote Controller	53
9-6. Hi POWER Mode ([Hi POWER] button on the remote controller is pushed)	54

[Previous Page](#)
[Next Page](#)

1
...
25
26
27
28
29
30
31
32

Quick Links:

[Specifications](#)

[How to Diagnose the Trouble](#)

[How to Replace the Main Parts](#)

[Exploded Views and Parts List](#)

Chapters

[Table of Contents](#) 2

[Operation Description 9-2. 1. Basic Operation](#) 28

Related Manuals for Toshiba RAS-B10SKVP-E

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(148 pages)

[Air Conditioner Toshiba RAS-4M23SAV-E Service Manual](#)

Split type (121 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(120 pages)

[Air Conditioner Toshiba RAS-10SAVP-E Service Manual](#)

(119 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type (117 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(117 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type air conditioner (91 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type; for general public use (31 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type (31 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(19 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

Split type air conditioner (19 pages)

[Air Conditioner Toshiba RAS-16SKVP-ND Owner's Manual](#)

(230 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Installation Manual](#)

(132 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Owner's Manual](#)

(61 pages)

[Air Conditioner Toshiba RAS-B10S4KVDG-E Installation Manual](#)

(24 pages)

[Air Conditioner Toshiba RAS-B13S4KVDG-E Service Manual](#)

(149 pages)

Related Products for Toshiba RAS-B10SKVP-E

[Toshiba RAS-B10S4KVPG-E](#)

[Toshiba RAS-B10S4KVDG-E](#)

[Toshiba RAS-B10GKVP-E](#)

[Toshiba RAS-B10EKVP-E](#)

[Toshiba RAS-B10N3KV2-E](#)

[Toshiba RAS-B10UFV](#)

[Toshiba RAS-B10N3KVP Series](#)

[Toshiba RAS-B10N3KVP-E](#)

[Toshiba RAS-B10N3KV2](#)

[Toshiba RAS-B10N3KV2-E1](#)

[Toshiba RAS-B102N3KV2](#)

[Toshiba RAS-B10U2FVG-E](#)

[Toshiba RAS-B10PKVSG-E](#)

[Toshiba RAS-B10N4KVSG-E](#)

[Toshiba RAS-B10J2FVG-E](#)

[Toshiba RAS-B10J2KVG-E](#)

This manual is also suitable for:

[Ras-10savp-eRas-13savp-eRas-b16skvp-eRas-16savp-eRas-b13skvp-eRas-10skvp-nd](#) ... [Show all](#)