



# Clean Operation Release - Toshiba RAS-B10SKVP-E Service Manual

 
Split type air conditioner



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18

19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67  
68

69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117  
118



•

- 

Troubleshooting



•

## Bookmarks





**Item**

16. Clean operation

**Setting the clean operation cancel**

cancel

**Setting the clean operation**

**Indoor P.C. board**

**Operation flow and applicable data, etc.**

Add J201 of the indoor P.C. board assembly.

\* This cancels the auto restart function.

Hold down the [RESET] button on the indoor unit for at least 3 seconds but not more than 10 seconds.

The indoor unit's buzzer emits three beeps.

This completes the clean operation cancel setting.

Hold down the [RESET] button on the indoor unit for at least 3 seconds but not more than 10 seconds.

The indoor unit's buzzer emits three beeps, and the OPERATION indicator flashes at 5 Hz intervals.



This completes the clean operation setting.

C24

- 43 -

**Description**


**NOTE:**

Once J201 is added, the [RESET] button on the unit is designated for CLEAN OPERATION (Set/Cancel), therefore the [RESET] button can not be used for the selection (Set/Cancel) of AUTO RESTART function (Page 50).

\* J201 will be near the MCU so take steps to ensure that it will not be exposed to excessive of heat.

Also take care to avoid solder bridging with the surrounding components.

J201

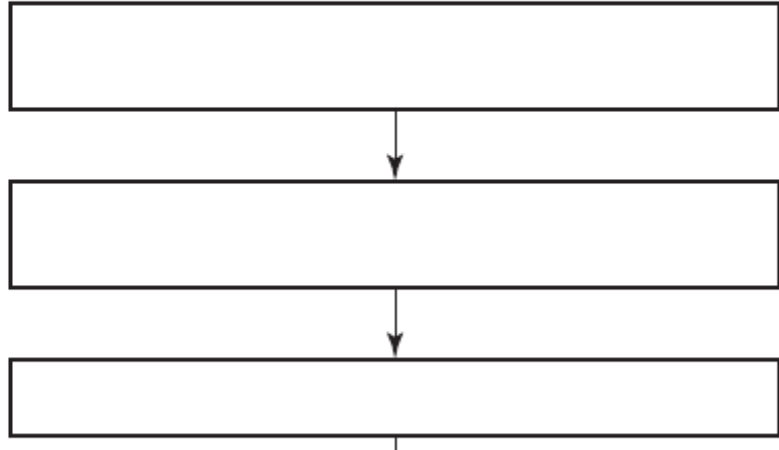

[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1  
...  
40  
41  
42  
43  
44  
45  
46  
47

Quick Links:

[Specifications](#)

[How to Diagnose the Trouble](#)

[How to Replace the Main Parts](#)

[Exploded Views and Parts List](#)

## Chapters

[Table of Contents](#) 2

[Operation Description 9-2. 1. Basic Operation](#) 28

### Related Manuals for Toshiba RAS-B10SKVP-E

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(148 pages)



[Air Conditioner Toshiba RAS-4M23SAV-E Service Manual](#)

Split type (121 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(120 pages)

[Air Conditioner Toshiba RAS-10SAVP-E Service Manual](#)

(119 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type (117 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(117 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type air conditioner (91 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type; for general public use (31 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type (31 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(19 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

Split type air conditioner (19 pages)

[Air Conditioner Toshiba RAS-16SKVP-ND Owner's Manual](#)

(230 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Installation Manual](#)

(132 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Owner's Manual](#)

(61 pages)

[Air Conditioner Toshiba RAS-B10S4KVDG-E Installation Manual](#)

(24 pages)

[Air Conditioner Toshiba RAS-B13S4KVDG-E Service Manual](#)

(149 pages)

## Related Content for Toshiba RAS-B10SKVP-E

[RAS-B10EKVP-E Clean Operation Release](#)

Toshiba RAS-B10EKVP-E

[RAS-10GAVP-E Clean Operation Release](#)

Toshiba RAS-10GAVP-E

[RAV-SM566BT Self Clean Operation Mode](#)

Toshiba RAV-SM566BT

[RAV-SM307KRTP-A Self Clean Operation Mode](#)

Toshiba RAV-SM307KRTP-A

[RAS-B10SKVP-E Clean Operation](#)

Toshiba RAS-B10SKVP-E

[RAS-M13PKVP-E Clean Operation](#)

Toshiba RAS-M13PKVP-E

[RAS-M10PKVP-E Clean Operation](#)

Toshiba RAS-M10PKVP-E

[RAS-B10SKVP-E Clean Operation](#)

Toshiba RAS-B10SKVP-E

This manual is also suitable for:

[Ras-10savp-eRas-13savp-eRas-b16skvp-eRas-16savp-eRas-b13skvp-eRas-10skvp-nd](#) ... [Show all](#)