

Remote Controller And Its Fuctions; Parts Name Of Remote Controller - Toshiba RAS-B10SKVP-E Service Manual

Split type air conditioner

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118



-


[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

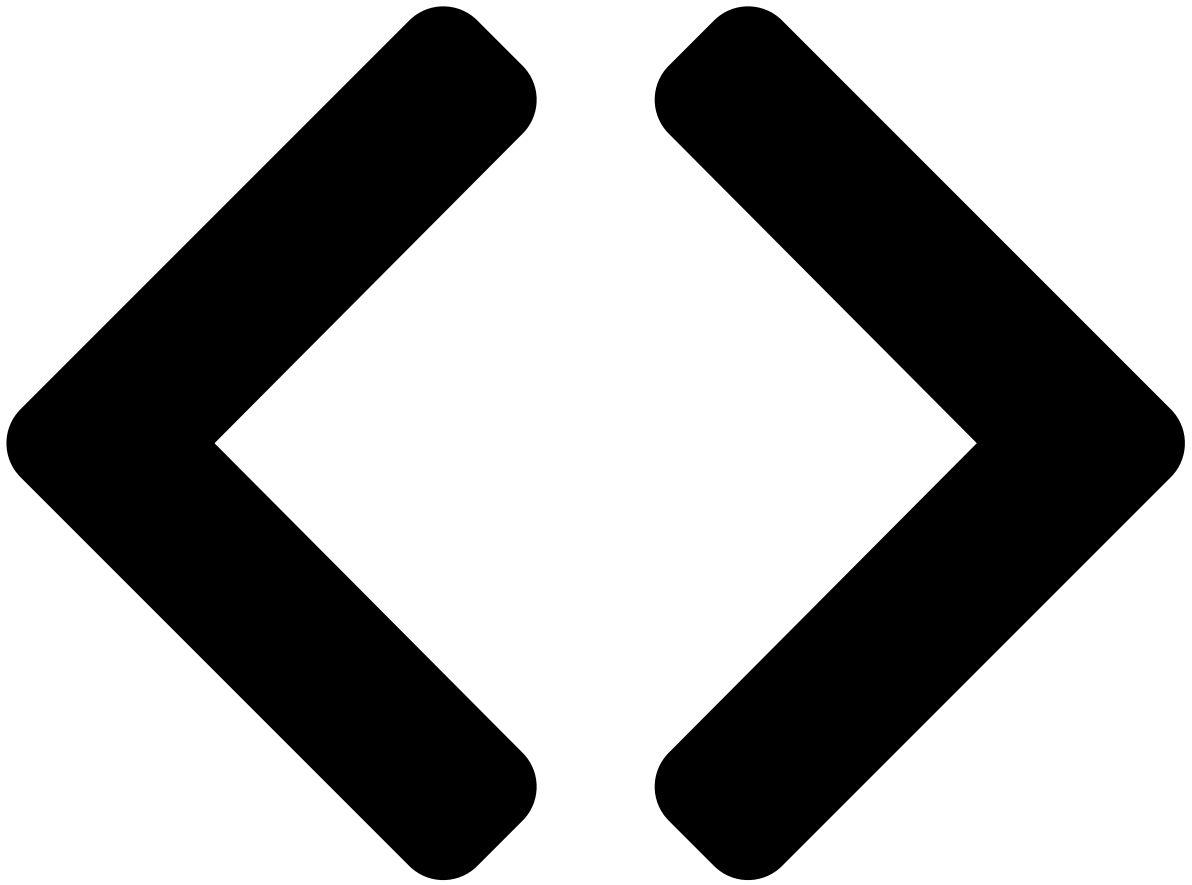

Enlarged version

9-5. Remote Controller and Its Functions

9-5-1. Parts Name of Remote Controller

1

Infrared signal transmitter

Transmits signals to the indoor unit.

2



button

Push the button to start operation.

(A receiving beep is heard.)

Push the button again to stop operation.

(A receiving beep is heard.)

If no receiving sound is heard from the indoor unit, push the button again.

3

Mode select button (MODE)

Push this button to select a mode. Each time you push the button, the modes cycle in order from A: Auto changeover control, HEAT and back to A. (A receiving beep is heard.)

4



Temperature button ()


... The temperature setting is raised to 30°C.
... The temperature setting is lowered to 17°C.
(A receiving beep is heard.)



5

Fan speed button (FAN)

Push this button to select the fan speed. When you select AUTO, the fan speed is automatically adjusted according to the room temperature. You can also manually select the desired fan speed from five available settings. (LOW, MED, MED+,)
(A receiving beep is heard.)

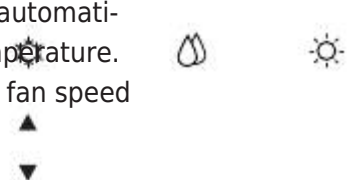

6

Auto louver button (SWING)

Push this button to swing the louver. (A receiving beep is heard.)
Push the button again to stop the louver from swinging. (A receiving beep is heard.)



7



Set louver button (FIX)

Push this button to adjust the air flow direction. (A receiving beep is heard.)

8

ON timer button (ON)


Use this button to change the clock and ON timer times.

To move up the time, push
To move down the time, push

9

OFF timer button (OFF)

Use this button to change the OFF timer times.

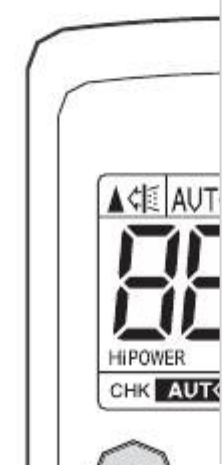

To move up the time, push
To move down the time, push
button.

10

Reserve button (SET)

Push this button to store the time settings.
(A receiving beep is heard.)

11



Cancel button (CLR)

Push this button to cancel the ON timer and OFF
timer. (A receiving beep is heard.)

: COOL,

: DRY,

:

)

TEMP

, LOW+

,

, HIGH

)

of the ON
button.

ON

of the ON
button.

ON

of the OFF
button.

OFF

of the OFF

OFF

12

High power button (Hi POWER)

Push this button to start high power operation.

13

Memory button (MEMO)

Push this button to ready for storing the settings.
Hold down the button for 3 seconds or more to
store the setting indicated on the remote controller
and until the

14

Automatic operation button (AUTO)

Push this button to operate the air conditioner
automatically. (A receiving beep is heard.)

15

SLEEP MODE button

Push this button to start sleep mode.

P

ManualsLib.com



16

MY COMFORT button

Push this button to operate the air conditioner according to the settings stored using the MEMO button.

17

PURE button (PURE)

Push this button to start the electrical air purifying operation.

Push the button again to stop operation.



18

Off timer button (OFF)

Push this button to start the OFF timer operation.

You can select the OFF timer time from among four settings (1, 3, 5 or 9 hours).

19

8°C operation button (8°C)

(-ND model only)

Push this button to start the 8°C set temperature heating operation.



17



4

3

2

12



7

6


11

8

- 52 -
mark is displayed.

1

14

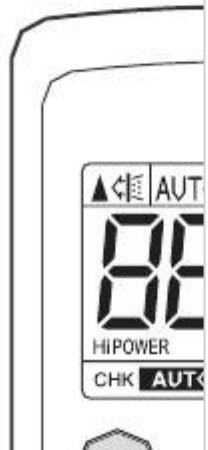

16
15
13
5
18
10
19
9



[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
49
50
51
52
53
54
55
56

Quick Links:

[Specifications](#)

[How to Diagnose the Trouble](#)

[How to Replace the Main Parts](#)

[Exploded Views and Parts List](#)

Chapters

[Table of Contents](#) 2

[Operation Description 9-2. 1. Basic Operation](#) 28

Related Manuals for Toshiba RAS-B10SKVP-E

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(148 pages)

[Air Conditioner Toshiba RAS-4M23SAV-E Service Manual](#)

Split type (121 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(120 pages)

[Air Conditioner Toshiba RAS-10SAVP-E Service Manual](#)

(119 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type (117 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(117 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type air conditioner (91 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type; for general public use (31 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type (31 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(19 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

Split type air conditioner (19 pages)

[Air Conditioner Toshiba RAS-16SKVP-ND Owner's Manual](#)

(230 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Installation Manual](#)

(132 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Owner's Manual](#)

(61 pages)

[Air Conditioner Toshiba RAS-B10S4KVDG-E Installation Manual](#)

(24 pages)

[Air Conditioner Toshiba RAS-B13S4KVDG-E Service Manual](#)

(149 pages)

Related Content for Toshiba RAS-B10SKVP-E

[RAS-M07SKV-E Remote Controller And Its Fuctions](#)

Toshiba RAS-M07SKV-E

[RAS-10BKV-E1 Remote Controller And Its Fuctions](#)

Toshiba RAS-10BKV-E1

[RAS-B05J2KVG-E Remote Controller And Its Fuctions](#)

Toshiba RAS-B05J2KVG-E

[RA S-25N4KVRG-ND Remote Controller And Its Fuctions 9- 4-1. Parts](#)

[Name Of Remote Contr Oller](#)

Toshiba RA S-25N4KVRG-ND

[RAS-05J2KVG-EE Remote Controller And Its Fuctions](#)

Toshiba RAS-05J2KVG-EE

[RAS-07EKV-EE Remote Controller And Its Fuctions](#)

Toshiba RAS-07EKV-EE

[RAS-B07J2KVSG-E Remote Controller And Its Fuctions 9- 4-1. Parts
Name Of Remote Contr Oller](#)

Toshiba RAS-B07J2KVSG-E

[RAS-07TKVG-EE Remote Controller And Its Fuctions](#)

Toshiba RAS-07TKVG-EE

This manual is also suitable for:

[Ras-10savp-eRas-13savp-eRas-b16skvp-eRas-16savp-eRas-b13skvp-eRas-10skvp-nd ...](#) [Show all](#)