

Hi Power Mode; ([Hi Power] Button On The Remote Controller Is Pushed) - Toshiba RAS-B10SKVP-E Service Manual

Split type air conditioner

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118



-

-

Troubleshooting

•

Bookmarks



9-6. Hi POWER Mode

([Hi POWER] button on the remote controller is pushed)

When [Hi POWER] button is pushed while the indoor unit is in Auto, Cooling or Heating operation, Hi POWER

mark is indicated on the display of the remote controller and the unit operates as follows.

1. Automatic operation

- The preset temperature changes according to the operation mode selected.

In the Cooling operation, the preset temperature drops 1°C.

In the Heating operation, the preset temperature increases 2°C.

2. Cooling operation (Manual)

- The preset temperature drops 1°C.

(The value of the preset temperature on the remote controller does not change.)

3. Heating operation (Manual)

- The preset temperature increases 2°C.

(The value of the preset temperature on the remote controller does not change.)

4. The Hi POWER mode can not be set in Dry operation

5. Release of Hi POWER mode

- Push [Hi POWER] button on the remote controller again.

- 54 -

[Table of Contents](#)

[Previous Page](#)

[Next Page](#)

1
...
51
52
53
54
55
56
57
58

Quick Links:

[Specifications](#)

[How to Diagnose the Trouble](#)

[How to Replace the Main Parts](#)

[Exploded Views and Parts List](#)

Chapters

[Table of Contents](#) 2

[Operation Description 9-2. 1. Basic Operation](#) 28

Related Manuals for Toshiba RAS-B10SKVP-E

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(148 pages)

[Air Conditioner Toshiba RAS-4M23SAV-E Service Manual](#)

Split type (121 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(120 pages)

[Air Conditioner Toshiba RAS-10SAVP-E Service Manual](#)

(119 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type (117 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(117 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type air conditioner (91 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type; for general public use (31 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type (31 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(19 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

Split type air conditioner (19 pages)

[Air Conditioner Toshiba RAS-16SKVP-ND Owner's Manual](#)

(230 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Installation Manual](#)

(132 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Owner's Manual](#)

(61 pages)

[Air Conditioner Toshiba RAS-B10S4KVDG-E Installation Manual](#)

(24 pages)

[Air Conditioner Toshiba RAS-B13S4KVDG-E Service Manual](#)

(149 pages)

Related Content for Toshiba RAS-B10SKVP-E

[RAS-25S4KVPD-ND Hi-Power Mode](#)

Toshiba RAS-25S4KVPD-ND

[RAS-10S3AV-E Hi-Power Mode](#)

Toshiba RAS-10S3AV-E

[RAS-M05G3KVSG-E Hi-Power Mode](#)

Toshiba RAS-M05G3KVSG-E

[RAS-18S3KV-E Hi Power Mode](#)

Toshiba RAS-18S3KV-E

[RAS-M07G3DV-E Hi-Power Mode](#)

Toshiba RAS-M07G3DV-E

[RAS-M07N4KVRG-E Hi-Power Mode](#)

Toshiba RAS-M07N4KVRG-E

[RAS-25G3KVSG-ND Hi-Power Mode](#)

Toshiba RAS-25G3KVSG-ND

[RAS-25E2KVG-ND Hi-Power Mode](#)

Toshiba RAS-25E2KVG-ND

This manual is also suitable for:

[Ras-10savp-eRas-13savp-eRas-b16skvp-eRas-16savp-eRas-b13skvp-eRas-10skvp-nd](#) ... [Show all](#)