

Capacity Variation Ratio According To Temperature - Toshiba RAS- B10SKVP-E Service Manual

Split type air conditioner

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118



-

-

Troubleshooting

•

Bookmarks



2-3. Capacity Variation Ratio According to Temperature

RAS-B10SKVP-E, RAS-B13SKVP-E, RAS-B16SKVP-E

<Cooling>

110

100

90

80

70

• Conditions

60



Indoor : DB27°C/WB19°C

Indoor air flow : High

Pipe length : 5m

50

32

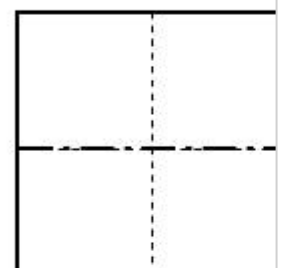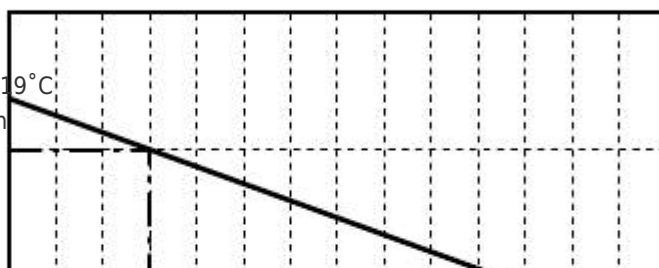

33
34
35
36
37

Outdoor temp. (°C)

RAS-10SKVP-ND, RAS-13SKVP-ND, RAS-16SKVP-ND

<Cooling>

110
100
90
80
70

• Conditions

Indoor : DB27°C/WB19°C

Indoor air flow : High

Pipe length : 5m

50
32



Capacity ratio (%)

33
34
35
36
37

Outdoor temp. (°C)

38
39
40
41
42

43 44 45 46

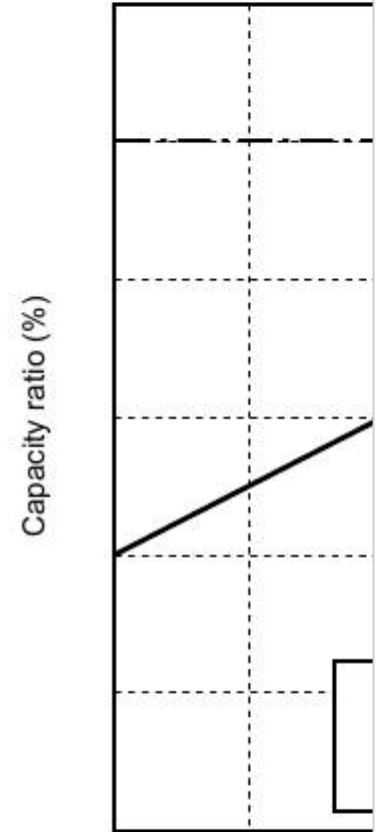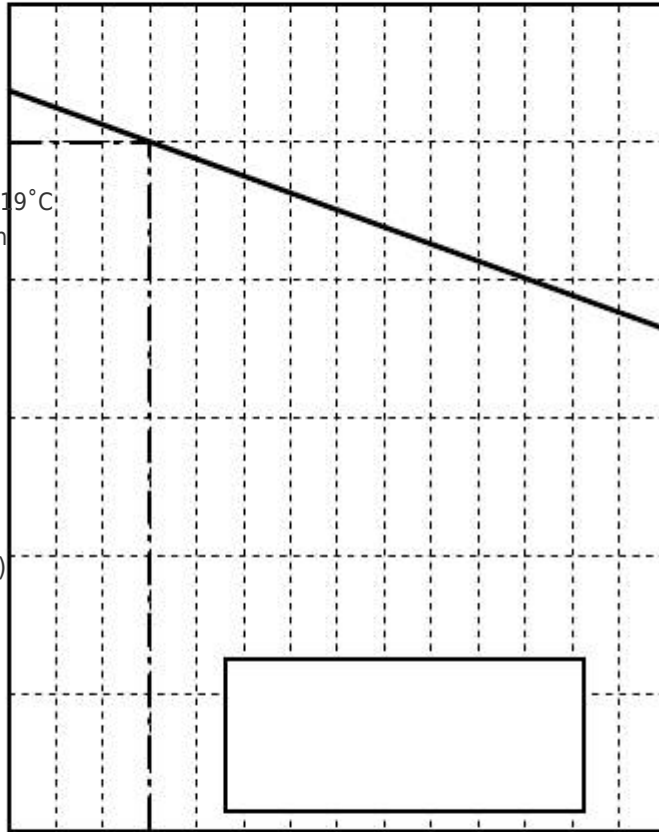

ManualsLib.com

38
39
40
41
42

43 44 45 46

38
39
40
41
42

<Heating>



120
100
80
60
40
20
0

-15
-10

<Heating>

120
100
80
60

(%)

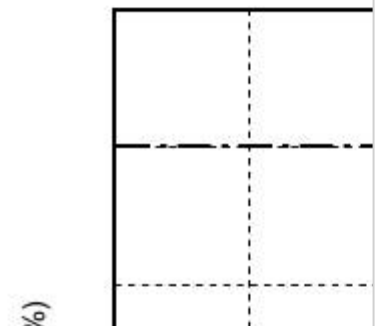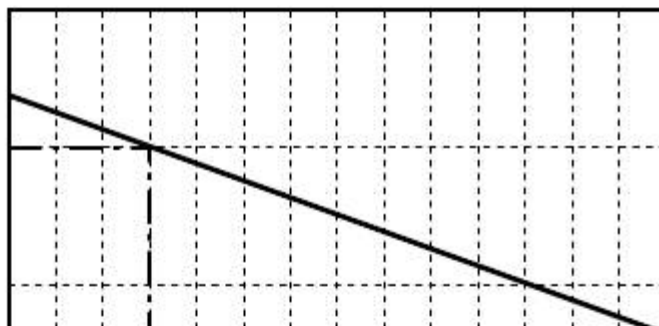


40
20
0
-15
-10
- 8 -


• Conditions
Indoor : DB 20°C
Indoor air flow : High
Pipe length : 5m

-5
0
5
Outdoor temp. (°C)
• Conditions
Indoor : DB 20°C
Indoor air flow : High
Pipe length : 5m
-5
0
5
Outdoor temp. (°C)
7
10
7
10

Capacity ratio (%)

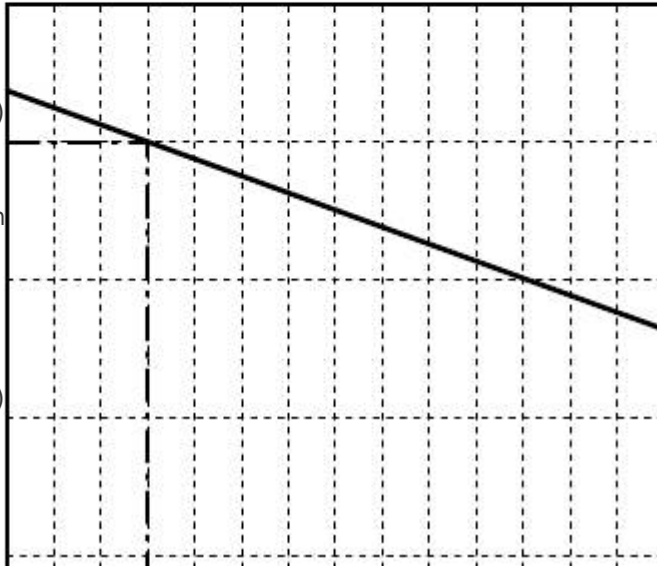

Capacity ratio (%)

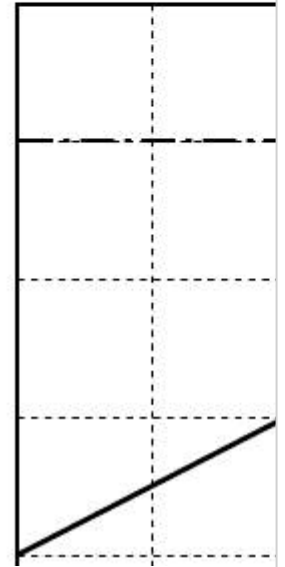

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
5
6
7
8
9
10
11
12

Quick Links:

[Specifications](#)

[How to Diagnose the Trouble](#)

[How to Replace the Main Parts](#)

[Exploded Views and Parts List](#)

Chapters

[Table of Contents](#) 2

[Operation Description 9-2. 1. Basic Operation](#) 28

Related Manuals for Toshiba RAS-B10SKVP-E

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(148 pages)

[Air Conditioner Toshiba RAS-4M23SAV-E Service Manual](#)

Split type (121 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(120 pages)

[Air Conditioner Toshiba RAS-10SAVP-E Service Manual](#)

(119 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type (117 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(117 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type air conditioner (91 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type; for general public use (31 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type (31 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(19 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

Split type air conditioner (19 pages)

[Air Conditioner Toshiba RAS-16SKVP-ND Owner's Manual](#)

(230 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Installation Manual](#)

(132 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Owner's Manual](#)

(61 pages)

[Air Conditioner Toshiba RAS-B10S4KVDG-E Installation Manual](#)

(24 pages)

[Air Conditioner Toshiba RAS-B13S4KVDG-E Service Manual](#)

(149 pages)

Related Content for Toshiba RAS-B10SKVP-E

[RAS-B10EKVP-E Capacity Variation Ratio According To Temperature](#)

Toshiba RAS-B10EKVP-E

[RAV-SM404ATP-E Capacity Variation Ratio According To Temperature](#)

Toshiba RAV-SM404ATP-E

[RAS-24N3KV2-A Capacity Variation Ratio According To Temperature](#)

Toshiba RAS-24N3KV2-A

[RAS-18, 22SKV-E Capacity Variation Ratio According To Temperature](#)

Toshiba RAS-18, 22SKV-E

[RAV-SM1100UT-E Capacity Variation Ratio According To Temperature](#)

Toshiba RAV-SM1100UT-E

[RAS-18SAV2-E1 Capacity Variation Ratio According To Temperature](#)

Toshiba RAS-18SAV2-E1

[RAS-15EKCV-UL Capacity Variation Ratio According To Temperature](#)

Toshiba RAS-15EKCX-UL

[RAS-13SKVR-E2 Capacity Variation Ratio According To Temperature](#)

Toshiba RAS-13SKVR-E2

This manual is also suitable for:

[Ras-10savp-eRas-13savp-eRas-b16skvp-eRas-16savp-eRas-b13skvp-eRas-10skvp-nd](#) ... [Show all](#)