



# **TOSHIBA**

Toshiba 23L2300UC Resource Manual

Integrated high definition led television



1  
2

•

## Bookmarks

## Quick Links

[Download this manual](#) See also: [User Manual](#)







# Integrated High Definition LED Television

## Resource Guide

23L2300UC  
 32L2300UG  
 39L2300UC  
 50L2300UC



Keep this Resource Guide in a convenient place to access important information about your television. For more information, consult the comprehensive electronic user's guide at [toshiba.ca/web/support/gpr](http://toshiba.ca/web/support/gpr). If you need assistance:

Toshiba's Support Web site  
[toshiba.ca/web/support/gpr](http://toshiba.ca/web/support/gpr)

### Owner's Record

The model number and serial number are on the back and side of your television. Record these numbers whenever you communicate with your Toshiba dealer about this television.

Model name \_\_\_\_\_

Serial number \_\_\_\_\_

Register your Toshiba Television at [support.toshiba.ca/warranty/](http://support.toshiba.ca/warranty/)

Note: To display a High Definition picture, the TV must be receiving a High Definition signal (such as an over-the-air High Definition TV broadcast, a High Definition digital cable program, or a High Definition satellite program). For details, contact your TV antenna installer, cable provider, or satellite provider.

29) Always leave a space of at least 4 (four)

inches around the TV. The slots and

openings are provided to protect the TV

from overheating and to help maintain

reliable operation of the TV.

30) Never allow anything to rest on or roll over

the power cord, and never place the TV

where the power cord is subject to wear or

abuse.

31) Never allow children to climb on the TV.

32) To avoid damage to this product, never place or

lean the TV on direct sunlight, hot, humid

areas, or areas subject to excessive dust.

33) Always operate this equipment from a 120V

vibration.

AC, 60Hz power source.

34) Always place the TV on the floor or a sturdy,

level, stable surface that can support the weight

properly grounded to provide adequate

protection against voltage surges and

following methods:

(1) Secure the TV with a mounting screw

(Recommended.)

Place the TV on a sturdy surface that has a

sufficient thickness and screw the unit on the

Antenna discharge unit

surface securely by using the mounting screw

(NEC Section 810-20)

and the fall-prevention screw hole.

Ground clamp

(2) Secure the TV with a sturdy strap to a wall

Grounding conductor

stud, pillar, or other immovable structure.

Specific services

(NEC Section 810-21)

When connecting the strap:

Attach the strap to the TV using the hooks on

Power service grounding

electrode system

the back of the TV, the clips on the pedestal, or

Ground clamp

(NEC Art 250-46)

the hole in the base of the pedestal as available.

34)

Make sure the strap is tight, secure, and

parallel to the floor.

**DANGER: RISK OF SERIOUS**

**INJURY OR DEATH**

Use extreme care to make sure you

never in a position where your body (or any

item you are in contact with, such as a

TV

Note: The 23L2300UC does not include a hook on

ladder or screwdriver) can accidentally

touch overhead power lines.

27) The product shall not be exposed to dripping

or splashing, and that no objects filled with

power lines or other electrical circuits,

liquids, such as vases, shall be placed on

the apparatus.

Never attempt to install any of the following

28) Never block or cover the slots or openings in

during lightning activity: a) an antenna

the back, bottom, and sides,

system; or b) cables, wires, or any home

Never place the TV:

theater component connected to an antenna

on a bed, sofa, rug, or similar surface;

or phone system.

Do not touch the screen, walk on

Care

In a confined space such as a bookcase.

For better performance and safer operation of

built-in cabinet, or any other place with

your TOSHIBA TV, follow these

poor ventilation.

Dear Customer,

Thank you for purchasing this Toshiba LED

TV. This guide will help you use

exciting features of your new LED TV. Before

TOSHIBA CARES:

operating your LED TV, carefully read this

Manufacturers, retailers and the rest of the

guide completely.

consumer electronics industry are committed

Safety Precautions

to making home entertainment safe and

WARNING: TO REDUCE THE RISK OF FIRE

enjoyable.

As you enjoy your television, please note that

OR ELECTRIC SHOCK, DO NOT EXPOSE

all televisions - new and old - must be

THIS APPLIANCE TO RAIN OR MOISTURE.

supported on proper stands or installed

WARNING

according to the manufacturer's

recommendations. Televisions that are

inappropriately situated on dressers,

WARNING: TO REDUCE THE RISK OF ELECTRIC

bookcases, shelves, desks, speakers, chests,

locks, do not remove covers (in racks,

carts, etc., may fall over, resulting in injury.

NO USE OF REMOVABLE PARTS REDUCE RISK OF

INJURY TO SAFETY

WARNING TO QUALIFIED SERVICE PERSONNEL.

ALWAYS follow the manufacturer's

The lightning flash with arrowhead symbol,

recommendations for the safe installation of

when an optional charge is intended to

your television.

Alert the user to the presence of unanticipated

ALWAYS read and follow all instructions for

"dangerous voltage" within the product's

proper use of your television.

NEVER allow children to climb on or play on

to conduct a risk of electric shock to persons,

the television or the furniture on which the

television is placed.

The television port within an equipment

NEVER place the television on furniture that

might be used to alert the user to the

presence of important operating

of drawers.


Maintenance (warning) instructions in

ALWAYS install the television where it cannot

be pushed, pulled over or knocked down.

ALWAYS route cords and cables connected

WARNING To prevent injury, this apparatus

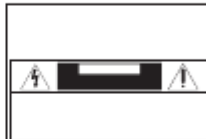

### Dear Customer,

Thank you for purchasing this Toshiba LED

TV. This guide will help you use

exciting features of your new LED TV. Before

TOSHIBA CARES:

operating your LED TV, carefully read this

Manufacturers, retailers and the rest of the

guide completely.

consumer electronics industry are committed

Safety Precautions

to making home entertainment safe and

WARNING: TO REDUCE THE RISK OF FIRE

enjoyable.

As you enjoy your television, please note that

OR ELECTRIC SHOCK, DO NOT EXPOSE

all televisions - new and old - must be

THIS APPLIANCE TO RAIN OR MOISTURE.

supported on proper stands or installed

WARNING

according to the manufacturer's

recommendations. Televisions that are

inappropriately situated on dressers,

WARNING: TO REDUCE THE RISK OF ELECTRIC

bookcases, shelves, desks, speakers, chests,

locks, do not remove covers (in racks,

carts, etc., may fall over, resulting in injury.

NO USE OF REMOVABLE PARTS REDUCE RISK OF

INJURY TO SAFETY

WARNING TO QUALIFIED SERVICE PERSONNEL.

ALWAYS follow the manufacturer's

The lightning flash with arrowhead symbol,

recommendations for the safe installation of

when an optional charge is intended to

your television.

Alert the user to the presence of unanticipated

ALWAYS read and follow all instructions for

"dangerous voltage" within the product's

proper use of your television.

NEVER allow children to climb on or play on

to conduct a risk of electric shock to persons,

the television or the furniture on which the

television is placed.

The television port within an equipment

NEVER place the television on furniture that

might be used to alert the user to the

presence of important operating

of drawers.


Maintenance (warning) instructions in

ALWAYS install the television where it cannot

be pushed, pulled over or knocked down.

ALWAYS route cords and cables connected

WARNING To prevent injury, this apparatus

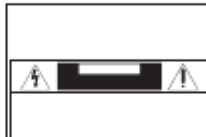

ManualsLib.com

to the television so that they cannot be  
tripped over, pulled or grabbed.  
accordance with the installation instructions.  
WALL OR CEILING MOUNT YOUR TELEVISION  
See instructions on item 26).

ALWAYS contact your retailer about  
decide to wall mount this  
professional installation if you have any  
television, always use a mount that has  
that has been Listed by an independent  
laboratory (such as UL, CSA, ETL, etc.).

**NOTE TO CATV INSTALLERS**  
This is a reminder to call the CATV system  
appropriate for the size and weight of this  
installer's attention to Article 820-40 of the  
television. The use of inappropriate or  
U.S. NEC, which provides guidelines for  
non-Listed mounting brackets could result in  
proper grounding and, in particular, specifies  
serious bodily injury and/or property damage  
that the cable ground shall be connected to  
See "To Display your LED TV using a Wall  
the grounding system of the building, as close  
Brackets" below.

recommendations and precautions:  
40) For added protection of your TV from  
35) If you use the TV in a room where the  
lighting and power surges, avoid  
temperature is 32° F (0° C) or below, the  
the power cord and disconnect the antenna  
picture brightness may vary until the LED  
from the TV if you leave the TV unattended  
warms up. This is not a sign of  
or unused for long periods of time.  
malfunction.

41) Always unplug the TV to completely  
36)

disconnect from mains power. When the  
**WARNING: RISK OF SERIOUS  
PERSONAL INJURY, OR  
EQUIPMENT DAMAGE!**  
power and a minute amount of current is  
is not completely disconnected from  
power and a minute amount of current is  
consumed.

42) During normal use, the TV may make  
near the TV pedestal. Studies indicate that  
occasional snapping or popping sounds  
plastics may weaken and crack over time  
This is normal, especially when the unit is  
from the combined effects of chemical  
being turned on or off. If these sounds  
agents and mechanical stress, such as  
become frequent or continuous, unplug  
the weight of the TV. Failure to follow  
the power cord and contact a Toshiba  
these instructions could result in serious  
Authorized Service Provider.  
injury and/or permanent damage to TV

43)

**WARNING: RISK OF SERIOUS  
PERSONAL INJURY, OR  
EQUIPMENT DAMAGE!**  
Gently wipe the display panel surface (the  
TV screen) using a dry, soft cloth (cotton,  
Never strike the screen with a sharp or  
flannel, etc.). A hard cloth may damage  
heavy object.  
the surface of the panel.

44) The LCD screen of this product can be  
Avoid contact with alcohol, thinner,  
damaged by ultraviolet radiation from the  
benzene, acidic or alkaline solvent  
sun. When selecting a location for the  
cleaners, abrasive cleaners, or chemical  
television, avoid locations where the  
cloths, which may damage the surface.  
screen may be exposed to direct sunlight.  
Never spray volatile compounds such as  
such as in front of a window.  
insecticide on the cabinet. Such products  
may damage or discolor the cabinet.

37) Never hit, press, or place anything on the  
the LCD screen. These actions will damage  
back cover. These actions will damage  
screen, follow the instructions in item 36).  
internal parts.

**Service**  
38)

45)

**WARNING:**  
**RISK OF ELECTRIC SHOCK!**  
**RISK OF ELECTRIC SHOCK!**  
Never spill liquids or push objects of any  
Never attempt to service the TV yourself.  
Just open the cabinet slots.  
Opening and removing the covers may

39) During a lightning storm, do not touch  
expose you to dangerous voltage or other  
the connecting cables of product.  
doubts about your ability to safely mount your  
Important Safety Instructions  
television.

1) Read these instructions.  
ALWAYS use a mount that has been  
Keep these instructions.  
recommended by the television manufacturer  
Heed all warnings.  
and has a safety certification by an  
independent laboratory (such as UL, CSA,  
ETL).

ALWAYS follow all instructions  
Clean only with dry cloth.

television and mount manufacturer's  
Do not block any ventilation openings.  
ALWAYS make sure that the wall or ceiling  
Install in accordance with the  
where you are mounting the television is  
manufacturer's instructions.

Do not install near any heat sources.  
Some mounts are not designed to be mounted to  
such as radiators, heat registers, stoves,  
walls and ceilings with steel studs or cinder block  
or other products (including amplifiers  
construction. If you are unsure, contact a  
that produce heat.  
professional installer.




Televisions can be heavy. A minimum of two  
Do not defeat the safety  
people is required for a wall or ceiling mount  
purpose of the polarized  
installation.  
or grounding type plug.

MOVING AN OLDER TELEVISION TO A NEW  
A polarized plug has two blades with one  
**PLACE IN YOUR HOME**  
wider than the other. A grounding type  
Many new television buyers move their older CRT  
plug has two blades and a third  
televisions into a secondary room after the  
grounding prong. The wide blade or the  
purchase of a flat-panel television. Special care  
third prong are provided for your safety.  
should be made in the placement of older CRT  
if the provided plug does not fit into  
televisions.

your outlet, consult an electrician for  
ALWAYS place your older CRT television on a  
replacement of the obsolete outlet.  
Furniture that is sturdy and appropriate for its size  
Protect the power cord from being  
and weight.

NEVER place your older CRT television in a  
walked on or pinched, particularly at  
dresser where children may be tempted to use the  
plugs, convenience receptacles, and the  
drawers to climb,  
joint where they exit from the apparatus.

ALWAYS make sure your older CRT television  
Only use attachments/accessories  
does not hang over the  
specified by the manufacturer.

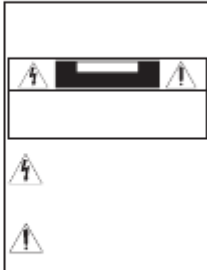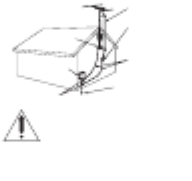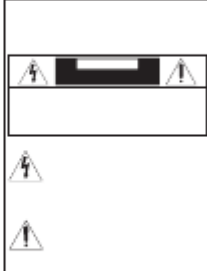

ManualsLib.com

ManualsLib.com

edge of your furniture.

12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. To the point of cable entry as practical. For information, use caution when additional antenna grounding information moving the cart/product combination. To avoid injury from tip-over, see 33) and 34).

13) Unplug this apparatus during lightning storms or when unused for long periods of time. Hazards. Failure to follow this WARNING may result in death or serious injury. Refer all other component connectors from the rear servicing not specified in this manual to a Toshiba Authorized Service Provider.

3) Remove the screws of the VESA Mounting 46) If you have the TV serviced: Pattern shown in the table below, if applicable.

CAUTION: Do not use the screws removed replacement parts specified by the manufacturer.

From the back cover to attach the wall mount bracket to the TV.

4) Always use the screws supplied or safety checks to determine that the TV is recommended by the wall mount manufacturer.

5) Follow the instructions provided with your Choosing a location for your LED TV wall bracket. Before proceeding, make sure the appropriate bracket(s) are attached to the wall and the back of the TV.

Observe the following safety precautions: as described in the instructions provided: 1) Read and follow the pedestal assembly with the wall bracket.

Instructions included with the pedestal. 6) After attaching the appropriate bracket(s) to the wall and the back of the TV, remove the pedestal stand from the TV.

Panel face down on a flat, cushioned surface such as a quilt or blanket. Leave the bottom of the unit protruding over the TV Size.

Hole Pattern (HV) Screw Size edge of the surface and assemble the pedestal as indicated below.

23L2300U 100x100 mm

32L2300U 200x200 mm

200x200 mm

50L2300U 400x400 mm

400x400 mm

2) Place the TV on a sturdy, level surface that can support the weight of the TV.

Removing the Pedestal Stand

3) Be sure to secure the TV to a wall stud, pillar, surface, or other immovable structure. See Item 26) for additional details.

Note: Extreme care should always be used when removing the pedestal stand to avoid damage to the LCD panel.

1) Remove the stand screws shown in the independent laboratory such as UL, CSA, diagram. This will allow removal of the pedestal that is appropriate for the size and weight of the TV.

1) CAUTION: Two people are required for installation.

14) Refer all servicing to qualified service personnel. Servicing is required when Do not let water or other liquids come into contact with the product, as it may result in damage.

is damaged, liquid has been spilled or 18) WARNING:

objects have fallen into the apparatus, the To prevent the spread of fire, keep candles apparatus has been exposed to rain or or other open flames away from this moisture, does not operate normally, or product at all times.

has been dropped.

\* Keep the product away from direct sunlight, fire or a heat source such as a heater.

Additional Safety Precautions may reduce the product lifetime or result in 14a) CAUTION: If the TV is dropped, the cabinet or enclosure surface has been damaged or the TV does not operate normally. Take the following precautions:

Follow these recommendations and

\* ALWAYS turn off the TV and unplug the power cord to avoid possible electric shock installing your TV; or fire.

WARNING: NEVER expose 19)

\* NEVER allow your body to come in contact with the batteries to excessive heat such as sunshine, damaged television. The LCD panel inside the TV contains glass and a toxic liquid. If the liquid comes in contact with your mouth that is located in such a manner that it can be easily unplugged in case the product requires service.

and contact your doctor immediately.

21) NEVER route the product's power cord inside a wall or similar enclosed area.

inspect the TV any time it has been damaged or dropped.

22) Never modify this equipment. Changes or modifications may void: a) the warranty.

15) CAUTION:

(and b) the user's authority to create this To reduce the risk of electric shock, do not use the polarized plug with an extension Communications Commission.





cord, receptacle, or other outlet.

23)

blades can be inserted completely to prevent blade exposure.

PERSONAL INJURY, DEATH, OR

**TOSHIBA**  
Leading Innovation >>>

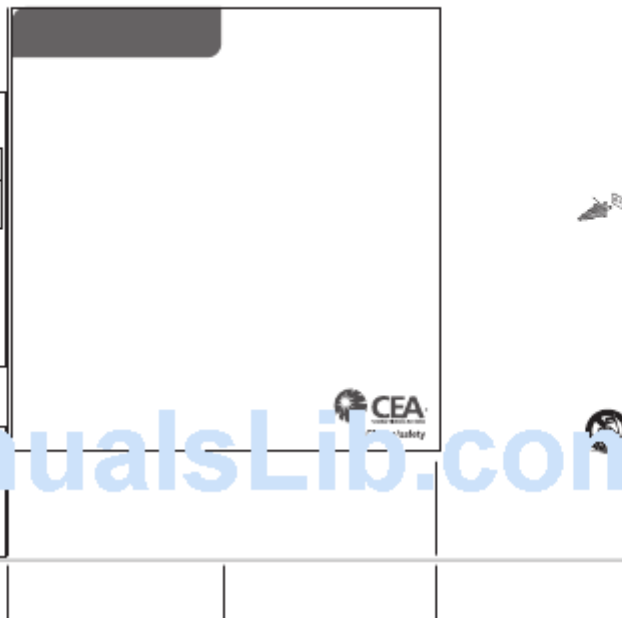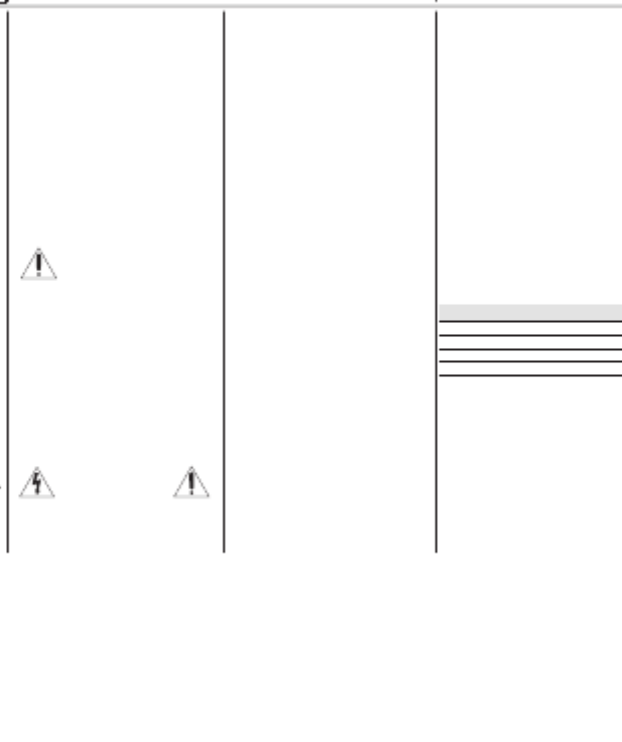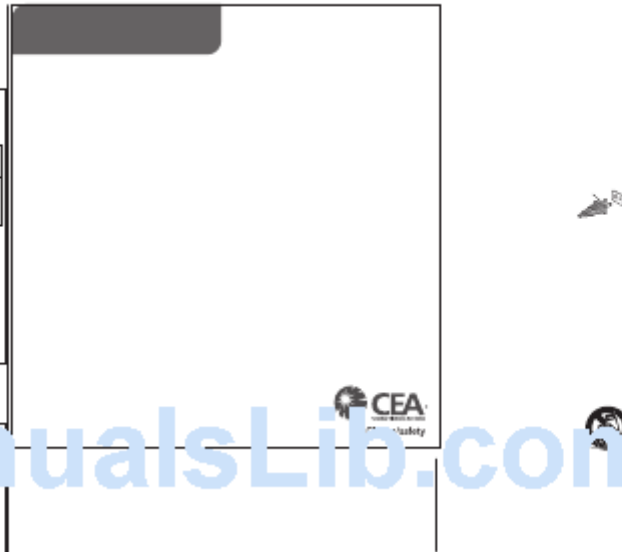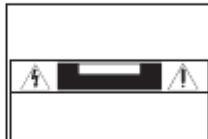

ManualsLib.com

ManualsLib.com



[Next Page](#)

1

2

## Related Manuals for Toshiba 23L2300UC

[TV Toshiba 23L1350UC User Manual](#)

Integrated high definition led television (123 pages)

## [LCD TV Toshiba L2300UC Series Quick Start Manual](#)

Toshiba l2300uc series led tv quick start (2 pages)

## [LED TV Toshiba 19L4200U User Manual](#)

Integrated high definition led television (141 pages)

## [LED TV Toshiba 19L4200UOM User Manual](#)

Integrated high definition led television (139 pages)

## [LED TV Toshiba 26SL400U Specifications](#)

720p hd led tv (2 pages)

## [LED TV TOSHIBA 50L2300U User Manual](#)

(123 pages)

## [LED TV Toshiba 23L1350U Resource Manual](#)

Integrated high definition led television (2 pages)

## [LED TV Toshiba 39L2300U User Manual](#)

Integrated high definition led television (123 pages)

## [LED TV Toshiba 23L2300U Resource Manual](#)

Integrated high definition led television (2 pages)

## [LED TV Toshiba 23PU200 series Owner's Manual](#)

(32 pages)

## [LED TV Toshiba 23PB200 Series Owner's Manual](#)

(29 pages)

## [LED TV Toshiba 23L1400UC User Manual](#)

Integrated high definition led television (110 pages)

## [LED TV Toshiba 32L110U Quick Setup Manual](#)

28" 720p, 60hz, led tv; 32" 720p, 60hz, led tv (2 pages)

## [LED TV Toshiba 24W144\\*DG Online Manual](#)

Led backlight lcd satellite tv (48 pages)

## [LED TV Toshiba 24L3965 Owner's Manual](#)

(25 pages)

## [LED TV Toshiba 24L3965EA Owner's Manual](#)

(29 pages)

## Summary of Contents for Toshiba 23L2300UC

[Page 1](#) TV • Never place cloth or other material between the Note: The 23L2300UC does not include a hook on the back of the TV. disconnect from mains power. When the CAUTION: Do not use the screws removed...

### [Page 2: Troubleshooting](#)

® PC audio cable Troubleshooting Computer Refer to the "Troubleshooting" chapter in the online User's Guide at [toshiba.ca/web/support.grp](http://toshiba.ca/web/support.grp). If you are still having trouble you may PC audio need to contact Toshiba for additional assistance. output Toshiba Support DVI/HDCP VIDEO...

This manual is also suitable for:

39I2300uc32I2300uc50I2300uc