



Toshiba 48L344 DG Online Manual

Led backlight lcd satellite tv

1	
Table Of Contents	
2	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	
16	
17	

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50

--

•

[Table of Contents](#)

•

Bookmarks

--

Quick Links

[1 Connecting a Home Network](#)

[Download this manual](#)



ONLINE MANUAL
TOSHIBA
48L344*DG
Leading Innovation >>>

LED Backlight LCD Satellite TV

During the life of your TV firmware updates will be made available to

ensure that your TV maintains optimum performance.

You can download the latest version of firmware from

www.toshiba-europe.com.net/firmware.php

TOSHIBA
Leading Innovation >>>
Some features listed in this document are limited due to local legislation

and may not be available in all countries.

"Register your TV online at: www.toshiba-europe.com/registration"

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba 48L344 DG

[Satellite TV System Toshiba 32L344*DG Quick Start Manual](#)

Led backlight lcd satellite tv (26 pages)

[LCD TV Toshiba 48L145 DN Online Manual](#)

Led backlight lcd tv (46 pages)

[LCD TV Toshiba 32L133*DG Online Manual](#)

Led backlight lcd tv (44 pages)

[LCD TV Toshiba 40L345 DB Manual](#)

Led backlight lcd tv (54 pages)

[LCD TV Toshiba 48T543 series User Manual](#)

Led backlight lcd tv (56 pages)

[LCD TV Toshiba 24 L28 Series Operating Instructions Manual](#)

(37 pages)

[LCD TV Toshiba 32 LK3A Series Operating Instructions Manual](#)

(38 pages)

[LCD TV Toshiba 39L28 Series Operating Instructions Manual](#)

(37 pages)

[LCD TV Toshiba 40L28 Series Operating Instructions Manual](#)

(37 pages)

[LCD TV Toshiba 24 LL Series Operating Instructions Manual](#)

(37 pages)

[LCD TV Toshiba 32W2863DA Operating Instructions Manual](#)

(36 pages)

[LCD TV Toshiba 24W1334G How To Upgrade The Software](#)

(4 pages)

[LCD TV Toshiba 48L544 DG Series Online Manual](#)

Led backlight lcd satellite tv (59 pages)

[LCD TV Toshiba 48L5455R Service Manual](#)

Lcd color television (40 pages)

[LCD TV Toshiba 48L144 DG Series Online Manual](#)

Led backlight lcd satellite tv (46 pages)

[LCD TV Toshiba 48T546 DN Series Online Manual](#)

Led backlight lcd tv (59 pages)

Summary of Contents for Toshiba 48L344 DG

Page 1 TV maintains optimum performance. You can download the latest version of firmware from www.toshiba-om.net/firmware.php Some features listed in this document are limited due to local legislation and may not be available in all countries. "Register your TV online at: www.toshiba-europe.com/registration"...

Page 2: Table Of Contents

Contents Safety Precautions3 Child Lock23 Set PIN 23 Air Circulation 3 Configuring Picture Settings24 Heat Damage.....3 Mode24 Mains Supply3 Contrast24 Warning 3 Brightness24 Do

Page 3	Bisskey33	CEC33	CEC Auto Power On 33	Configuring Network Settings34	First enter to Toshiba Portal34	Using the Toshiba Portal34	Using the Internet Browser 34	Using YouTube35	Manual Start
------------------------	-----------------	-------------	----------------------------	--------------------------------------	---------------------------------------	----------------------------------	-------------------------------------	-----------------------	--------------------

[Page 4: Safety Precautions](#)

Safety Precautions This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken to obtain the best results and for safety to be assured. Please read the points below for your own safety. They are of a general nature, intended to help with all electronic consumer products and some points may not apply to the goods you have just purchased.

[Page 5: Installation And Important Information](#)

Furthermore, under no circumstances shall Toshiba be liable for any consequential loss and/or damage including but not limited to the following, loss of profit, interruption of business, the loss of recorded data whether caused during normal operation or misuse of the product.

[Page 6: Important Safety Information](#)

Important safety information • Any function related to the digital television (with the DVB logo) is available only within the country or area where such signals are transmitted. Verify with the salesperson if it is possible to receive a DVB - T/C/S signal in the area where you live.

[Page 7: Removing The Pedestal Stand](#)

Removing the pedestal stand When using a Wall Bracket Please use a wall bracket appropriate for the size and weight of the LCD TV. • Two people are required for installation. • To install a wall-mount. (1) Unplug and remove any cables and/or other component connectors from the rear of the TV. (2) Carefully lay the front of the unit face down on a flat, cushioned surface such as a quilt or blanket.

[Page 8: The Remote Control](#)

The Remote Control Simple at-a-glance reference of your remote control. 1. Standby 17. Pause 2. Numeric buttons 18. Play 3. TV-AV / Channel list / 19. Subtitle on-off (in Media Switches among broadcast Browser mode and in DVB types channels) 20.

[Page 9: Connecting External Equipment](#)

Connecting External Equipment Before connecting any external equipment, remove the mains plug from the wall socket. (*) Number of these inputs may change according to the model of your TV. (**) Your TV may not be supported depending on the model. NOTE: Although this TV is able to connect to HDMI Aerial cable:.....

[Page 10: Connecting An Hdmi](#)

® Connecting an HDMI or DVI Device to the HDMI Input The HDMI inputs on your TV receive digital audio and Connect a DVI Device uncompressed digital video from an HDMI source Connect an HDMI-to-DVI cable (HDMI type A device or uncompressed digital video from a DVI connector) to the HDMI input socket and audio cables (Digital Visual Interface) source device.

[Page 11: Connecting A Computer](#)

Connecting a Computer Connecting a DVD Player To Connect a Computer Connecting to a DVD Player via YPbPr With either an RGB/PC or an HDMI connection, you Some DVD players are connected through can watch your computer's display on the TV and hear COMPONENT SOCKETS (YPbPr).

[Page 12: Connecting A Home Network](#)

Note: Wireless USB LAN adaptor can be purchased home network. You can use this networking system from the retail outlet or Toshiba service company. You to access photo, video and audio files that are stored can find the phone numbers of the local services on on a media server and play/display them on your TV.

[Page 13: Environmental Information](#)

Power Save Mode Environmental Information This television is designed to be environment friendly. You not only help to save the environment but also you can save money by reducing

electricity bills thanks to the energy efficiency feature of this TV. To reduce energy consumption, you should take the following steps: You can use Power Save Mode setting, located in the Picture Settings menu.

[Page 14: Controlling The Tv](#)

Controlling the TV A wide variety of external equipment can be connected via the sockets located on the side and back of the TV. Whilst all the necessary adjustments and controls for the TV are made using the remote control, the buttons on the Back of the TV may be used for some functions.

[Page 15: Initial Installation](#)

Initial Installation Before switching on the TV, put your decoder and media recorder to Standby if they are connected and ensure the aerial/cable and/or Satellite dish is connected to your TV. To set up the TV, use the buttons on the remote control as detailed on page 7.

[Page 16](#) Initial Installation - continued After the available stations are stored, Edit Channel List will be displayed on the screen. 9. You can select Network, Frequency, Network ID and Search Step from this screen. For highlighting Press OK button to quit channel list and watch TV. lines you see, use Up or Down button.

[Page 17: Auto Tuning](#)

Auto Tuning progress bar will move along. The television will Auto Tuning search for all available stations. You must allow As new services are broadcast, it will be necessary to the television to complete the search. Press MENU retune the television in order to view them. button to cancel the process.

[Page 18: Digital Aerial Manual Search](#)

Manual Tuning, Analogue Fine Tuning The television can be tuned-in manually using Manual Search feature. Digital Aerial Manual Search Analogue Manual Search The feature is available for service engineers or Only if an analogue signal or Service is available. can be used for direct channel entry if the multiplex The television can be tuned-in manually.

[Page 19: Analogue Fine Tune](#)

Manual Tuning, Analogue Fine Tuning - continued The television can be tuned-in manually using Manual Search feature. • After selecting search type as Satellite, you can set the desired options and press OK button to search. In satellite manual scan, you can enter frequency, polarisation, symbol rate values and change network channel scan and satellite options by using left/right buttons or numeric buttons on the remote.

[Page 20: Stereo And Bilingual Transmissions](#)

General Operation Standby Notifications Stereo and Bilingual Transmissions If stereo or dual language broadcasts are transmitted, If the TV switches off while in No Signal mode, the the word Stereo or Dual will appear on the screen following on-screen message will be displayed on the each time positions are changed, disappearing after next switch-on: a few seconds.

[Page 21: Viewing Channel List](#)

Channel List, Sorting Programmes, Programme Locking You can view stored channels and sort them by using the Channel List feature. • Selected channel is now moved. Viewing Channel List The channel order may be changed to suit your Deleting a Channel personal preference.

[Page 22: Viewing Info Banner](#)

Viewing Info Banner, Electronic Programme Guide • Press SUBTITLE button to sort channels by a genre. Viewing Info Banner • For information on a highlighted programme, press • Press "INFO - " button. The information screen will i button. appear giving details of the channel and programme currently being viewed.

[Page 23: Language Settings](#)

Language Selection Language Settings Using this menu you can adjust the preferred language settings. • Press MENU button and select Settings by using Left or Right button. • Select Language and press OK to view this menu. Select the desired language by using Left or Right

button.

[Page 24: Viewing Parental Control Menu](#)

Digital Settings - Parental Control, Menu Lock, Set PIN You can view or set parental preferences of your TV. Viewing Parental Control Menu Child Lock Press MENU button and select the Settings by using Child Lock disables the buttons on the television. All Left or Right button.

[Page 25: Configuring Picture Settings](#)

Configuring Picture Settings You can configure picture settings of your TV by using Picture Settings menu. Configuring Picture Settings Sharpness Sets the sharpness value for the objects displayed You can use different picture settings in detail. You on the screen. Press Left or Right button to adjust can customize current picture mode settings as desired.

[Page 26: Reset](#)

Configuring Picture Settings - continued Film Mode (optional): Films are recorded at a different number of frames per second to normal television programmes. Press Left or Right button to set this feature to Auto or Off. Turn this feature to Auto when you are watching films to see the fast motion scenes clearly.

[Page 27: Changing Picture Format](#)

Changing Picture Format Press "SCREEN - " button repeatedly to select between Auto(*), Full(**), 16:9, Subtitle, 14:9, 14:9 Zoom, 4:3 or Cinema. Note: Using the special functions to change the size of the displayed image (i.e. changing the height/width ratio) for the purposes of public display or commercial gain may infringe on copyright laws. Note: You can shift to screen up or down by pressing "...

[Page 28: Pc Picture Settings \(*\)](#)

Configuring PC Picture Settings Press Left or Right button to adjust the value. PC Picture Settings (*) (*) While in VGA/PC mode, some sections in Picture Dot Clock menu will be unavailable. Instead, VGA mode settings Dot Clock adjustment corrects the interference will be added to the Picture Settings while in VGA/ that appear as vertical banding in dot intensive PC mode.

[Page 29: Configuring Sound Settings](#)

Configuring Sound Settings You can configure sound settings of your TV by using Sound Settings menu. Configuring Sound Settings Balance (Only for speaker) Sound settings can be configured according to your This setting is used for emphasizing left or right speaker balance.

[Page 30: Configuring Your Tv's Settings](#)

Settings Menu Operation, Conditional Access Configuring Your TV's Settings Other Settings Detailed settings can be configured to suit your Displays other setting options of the TV set. personal preferences. Using a Conditional Access Module The Common Interface Slot, situated on the side of the Viewing Settings Menu television, enables the insertion of a CAM (Conditional Press MENU button and select Settings by using Left...

[Page 31: Timers](#)

Setting Timers, Setting Date/Time Timers Editing a Timer • Select the timer you want to edit by pressing Up or To view Timers menu, press MENU button and select Settings by using Left or Right button. Press OK Down button. button to view Settings menu.

[Page 32: Configuring Source Settings](#)

Source Settings, Other Controls Configuring Source Settings You can enable or disable selected source options. The TV will not switch to the disabled source options when the "SOURCE - " button is pressed. You can download or upload satcoDX data. In order to perform these functions a USB device must be connected to the TV first.

[Page 33: Configuring Other Settings - General](#)

Other Controls - continued Configuring Other Settings - General Blue Background You can configure the settings of your TV. Select If the signal is weak or absent, the TV can automatically change to a blue screen. To enable this, set Blue Settings from main menu and

press OK to view the Settings menu.

[Page 34: Auto Tv Off](#)

Other Controls - continued Auto TV Off You can set the timeout value of auto off feature. After This function allows to control the connected HDMI- the timeout value is reached and the TV is not operated CEC compatible devices with the remote control of for selected time, the TV will go off.

[Page 35: Configuring Network Settings](#)

To make a search on internet, enter a keyword in this feature. the adress bar. Point the cursor to " " button and Toshiba Portal is a service, where content (web sites, press OK. applications, online services etc.) can be viewed across the web through a simple user interface.

[Page 36: Using Youtube](#)

Network Settings, Portal, Internet Browser and YouTube continued Press the EXIT button to close the portal and watch TV again. NOTES: • The virtual keyboard or numeric buttons on the remote, which are associated with the letters of the alphabet, can be used for entries. •...

[Page 37: Manual Start](#)

Browser by pressing Left or Right button and press Toshiba cannot and does not grant such permission. • Depending on the file size and amount in your USB Select the media type to be listed and press OK.

[Page 38: Playing Mp3 Files](#)

Using Media Browser - continued This TV allows you to enjoy photo, music or video files stored on a USB device or on a MEDIA SERVER. Playing MP3 Files Viewing JPEG Files To play mp3 files from a USB memory or a DMS, you To view photo files from a USB Memory or a DMS, you can use this menu screen.

[Page 39: Slideshow Feature](#)

Using Media Browser - continued This TV allows you to enjoy photo, music or video files stored on a USB device or on a MEDIA SERVER. (Play Preview): Display selected file in Slideshow Feature LANG - a small preview screen. Press again to stop preview. You can use this feature to display all images Red button: Sort files by name.

[Page 40: Media Browser Settings](#)

Using Media Browser - continued This TV allows you to enjoy photo, music or video files stored on a USB device or on a MEDIA SERVER. Media Browser Settings Using MENU button in Media Browser Mode Pressing MENU button while in Media Browser mode displays the following menu screen: You can access Picture, Sound and Settings menu options using this screen.

[Page 41: Using Text Button -Text](#)

- For further information on your particular text system(s), see the broadcast text index page or, consult your local Toshiba dealer. Below is a guide to the functions of the remote control text buttons. Accessing Sub-pages If a text page has sub-pages, press Left/Right buttons or enter the sub-page number 0001, 0002, 0003 etc.

[Page 42: Appendix A: Pc Input Typical Display Modes](#)

Appendix A: PC Input Typical Display Modes The following table is an illustration of some of the typical video display modes. Some, due to the display native resolution, are scaled automatically to enable correct image to be displayed. Your TV may not support different resolutions. Supported resolution modes are listed below. If you switch your PC to an unsupported mode, a warning OSD will appear on the screen.

[Page 43: Appendix B: Av And Hdmi Signal Compatibility \(Input Signal Types\)](#)

Appendix B: AV and HDMI Signal Compatibility (Input Signal Types) Supported Available Source Signals NTSC 60 EXT-1 (SCART1) RGB 50/60 SECAM EXT-1 NTSC 60 (SCART2) SECAM PAL 50/60 Side AV NTSC 60 SECAM 480i 60Hz 480P 60Hz 576i 50Hz 576P 50Hz YPbPr 720P...

[Page 44: Appendix C: Pin Information](#)

Appendix C: PIN Information Before connecting any external equipment, turn off all main power switches. If there is no switch, remove the mains plug from the wall socket. Signal information for Mini D-sub 15 pin connector Pin No. Signal name Pin No.

[Page 45](#) Appendix D: Supported File Formats for USB Mode Media Extension Format Notes
Video Audio dat, mpg, Mpeg1,2 MPEG1/2 Layer 1/2/3, AAC/HEAAC, 1080P@ 30fps 50Mbit/ Movie
mpeg AC3/EAC3, LPCM/ADPCM dat, mpg, MPEG2 ,H.264, VC1, AVS, MPEG1/2 Layer 1/2/3,
AAC/HEAAC, H.264:1080Px2@25fps mpeg AC3/EAC3, LPCM/ADPCM 1080P@ 50fps MVC:
1080P@ 24fps Other:...

[Page 46: Specifications And Accessories](#)

Four screws Side AV cable YPbPr Connection Cable Stand fixing cover P Clip Wireless USB
Adaptor - Toshiba WLM -30U2 and is available from the retail Optional Accessories outlet or
Toshiba service company. 48" L Energy Efficiency Class A ++ 121 cm / 48"...

[Page 47: License Information](#)

For more detailed information about the collection and recycling programmes available in your country, please visit our website (www.toshiba.eu/recycling) or contact your local city office or the shop where you purchased the product.

[Page 48: Q & A Section](#)

Q & A Section Question Answer the TV is not in standby mode Check Why is there no sound or picture? Check the mains plug and all mains connections the volume has not been turned sound mute has Check off or Why is there a picture but no sound? not been selected does...

[Page 49](#) REACH in a concentration above 0.1 % weight by weight. Toshiba hereby declares that this product with an integrated Wireless Function is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC..

[Page 50](#) If you wish to view the advanced functions but do not have access to a computer or the internet then please contact your nearest owner's manual Helpline number from the numbers shown below. Country name locally Contact Number Österreich 0810 - 144 122 (7,3 ct/min aus dem Festnetz der Telekom Austria, Mobil ggf.

This manual is also suitable for:

40L343 dg32L343 dg32w343 dg40L3451dn32L344 dg32w344 dg