



Whirlpool WASHER/DRYER User Instructions

1
2
3
4
5
6
7
8
9
10
11
12

• PAGE

1

OF 12 GO

•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

--

Quick Links

[1 Washer Use](#)

[2 Dryer Use](#)

[3 Washer/Dryer Care](#)

[4 Washer Troubleshooting](#)

[Download this manual](#)

See also: [User Manual](#) , [Instruction and Installation Manual](#)



If you need assistance or service, first see the "Troubleshooting" section. Additional help is available by calling our Customer Interaction Center at 1-800-253-1301 from anywhere in the U.S.A., or write:

**Whirlpool Corporation
Customer Interaction Center**

**553 Benson Road
Benton Harbor, MI 49022-2692**

Please include a daytime phone number in your correspondence.
To order parts and accessories, call 1-800-442-9991 or visit our website at www.whirlpool.com.



Keep this book and your sales slip together for future reference. You must provide proof of purchase or installation date for in-warranty service.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety

messages.

This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING".

These words mean:



All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can

happen if the instructions are not followed.

3406880

WASHER/DRYER USER INSTRUCTIONS

ASSISTANCE OR SERVICE	1
WASHER/DRYER SAFETY	1
WASHER USE	3
DRYER USE	5
WASHER/DRYER CARE	6
WASHER TROUBLESHOOTING	8
DRYER TROUBLESHOOTING	10
WARRANTY	12

WASHER/DRYER SAFETY

Your safety and the safety of others are very important.

Table of Contents

Assistance or Service

Write down the following information about your appliance to help you obtain assistance or service if you ever need it. You will need to know your complete model number and serial number. You can find this information on the model and serial number label, located at the top inside dryer door well.

Dealer name _____

Serial number _____

Address _____

Phone number _____

Model number _____

Purchase date _____

You can be killed or seriously injured if you don't immediately follow instructions.

You can be killed or seriously injured if you don't follow instructions.

[Next Page](#)

- 1
- 2
- 3
- 4
- 5

Troubleshooting

WASHER TROUBLESHOOTING 8

DRYER TROUBLESHOOTING 10

Related Manuals for Whirlpool WASHER/DRYER

[Washer/Dryer Whirlpool WET3300SQ - 27" Stack Washer User Instructions](#)

User instructions (36 pages)

[Washer/Dryer Whirlpool W10222378A Installation Instructions Manual](#)

27" (69 cm) electric washer/dryer (32 pages)

[Washer/Dryer Whirlpool W10196553A User Instructions](#)

Whirlpool washer/dryer userinstructions (24 pages)

[Washer/Dryer Whirlpool W10222384A Installation Instructions Manual](#)

24" (61 cm) gas washer/dryer (12 pages)

[Washer/Dryer Whirlpool Washer/Dryer Pedestal Installation Instructions Manual](#)

Whirlpool washer/dryer pedestal installation instructions (24 pages)

[Washer/Dryer Whirlpool WET3300SQ0 Parts List](#)

Washer/dryer laundry system (21 pages)

[Washer/Dryer Whirlpool LTE5243DQ7 User Instructions](#)

(36 pages)

[Washer/Dryer Whirlpool W10343071A Use And Care Manual](#)

Whirlpool washer/dryer user manual (52 pages)

[Washer/Dryer Whirlpool WGT3300SQ0 Parts List](#)

Washer/dryer laundry system (22 pages)

[Washer/Dryer Whirlpool WGT3300SQ0 Installation Instructions Manual](#)

27"(69cm)gas washer/dryer (36 pages)

[Washer/Dryer Whirlpool WGT3300SQ1 Parts List](#)

Washer/dryer laundry system (22 pages)

Summary of Contents for Whirlpool WASHER/DRYER

[Page 1: Table Of Contents](#)

® WASHER/DRYER USER INSTRUCTIONS Table of Contents ASSISTANCE OR SERVICE.....1
WASHER/DRYER SAFETY.....1 WASHER USE..... 3 DRYER USE5 WASHER/DRYER
CARE.....6 WASHER TROUBLESHOOTING 8 DRYER TROUBLESHOOTING 10 WARRANTY
..... 12 Assistance or Service If you need assistance or service, first see the
"Troubleshooting"...

[Page 2](#) IMPORTANT SAFETY INSTRUCTIONS WARNING: To reduce the risk of fire, electric shock, or injury to persons when using the washer/dryer, follow basic precautions, including the following: Read all instructions before using the washer/dryer. Under certain conditions, hydrogen gas may be produced in a hot water system that has not been used for 2 weeks Do not place items exposed to cooking oils in your dryer.

[Page 3: Washer Use](#)

Checking Your Vent Your dryer must be properly installed and vented to achieve NOTE: Service

calls caused by improper venting will be paid for maximum drying efficiency and shorten drying times. Use the by the customer, whether it was a paid installation or self- minimum recommended installation clearances (found in your installed.

[Page 4: Starting Your Washer](#)

NOTE: In wash water temperatures colder than 70°F (21°C), 3. (OPTIONAL) Add Liquid Fabric Softener. detergents do not dissolve well. Soils can be difficult to NOTE: Your washer/dryer does not come with a fabric remove. Some fabrics can retain wear wrinkles and have softener dispenser installed.

[Page 5: Dryer Use](#)

DRYER USE Loading Load clothes loosely into the dryer. Do not pack the dryer. Allow space for clothes to tumble freely. The following charts show examples of balanced loads that would allow for proper tumbling. LARGE CAPACITY DRYER Heavy Work Mixed Load Towels Delicates...

[Page 6: Washer/Dryer Care](#)

WASHER/DRYER CARE Cleaning Your Washer Cleaning the Lint Screen Use a soft, damp cloth or sponge to wipe up any spills such as Clean the lint screen before each load. A screen blocked by lint detergent or bleach from the outside of your washer.

[Page 7: Cleaning The Dryer Interior](#)

5. Disconnect the exhaust vent. Lint should be removed every 2 years, or more often, depending 6. If your washer/dryer is a gas model, close shutoff valve in gas on dryer usage. supply line, disconnect gas supply line pipe and remove fittings attached to the washer/dryer pipe.

[Page 8: Washer Troubleshooting](#)

Washer Operation Noisy Washer stops, won't fill, rinse or agitate Is the load balanced and the washer/dryer level? The wash Check the following: load should be balanced and not overloaded. The washer/ Is the power cord plugged into a grounded 3 prong outlet? dryer must be level.

[Page 9](#) Wash temperature not what I selected Load is wrinkled Are the hot and cold water inlet hoses reversed? See the Did you unload the washer promptly? Unload the washer as Installation Instructions for more information. As your soon as it stops. frequency of loads washed increases, the water temperature Did you use the right cycle for the load being washed? may decrease for hot and warm temperature selections.

[Page 10: Dryer Troubleshooting](#)

Have you recently been painting, staining or varnishing in system of lint or replace exhaust vent with heavy metal or the area where your washer/dryer is located? If so, flexible metal vent. See your Installation Instructions. ventilate the area. When the odors or fumes are gone from the Is the exhaust vent crushed or kinked? Replace with heavy area, rewash and dry the clothing.

[Page 11](#) Notes...

[Page 12: Warranty](#)

Whirlpool Corporation will not pay for: 1. Service calls to correct the installation of your washer/dryer, to instruct you how to use your washer/dryer, or to replace house fuses, reset circuit breakers, correct house wiring, plumbing or venting or to replace owner accessible light bulbs. Heavy 4 in. (10.2 cm) metal exhaust vent must be used.